

User Manual



LCD TV

23PF9966/37

26PF9966/37



Thank you for choosing Philips.

Need help fast?

***Read your User Manual and/or Quick-Use Guide first
for quick tips that make using your Philips product
more enjoyable. If you have read your instructions and
still need assistance you may access our online help at***

www.p4c.philips.com

or

call 1-888 PHILIPS (744 - 5477)

while with your product.

PHILIPS

Model No.: _____

Serial No.: _____

3139 125 33123

Return your Product Registration Card today to get the very most from your purchase.

Registering your model with PHILIPS makes you eligible for all of the valuable benefits listed below, so don't miss out. Complete and return your Product Registration Card at once to ensure:

*Proof of Purchase

Returning the enclosed card guarantees that your date of purchase will be on file, so no additional paperwork will be required from you to obtain warranty service.

*Product Safety Notification

By registering your product, you'll receive notification - directly from the manufacturer - in the rare case of a product recall or safety defect.

*Additional Benefits of Product Ownership

Registering your product guarantees that you'll receive all of the privileges to which you're entitled, including special money-saving offers.

PHILIPS

*Congratulations on your purchase,
and welcome to the "family!"*

Dear PHILIPS product owner:

Thank you for your confidence in PHILIPS. You've selected one of the best-built, best-backed products available today. We'll do everything in our power to keep you happy with your purchase for many years to come.

As a member of the PHILIPS "family," you're entitled to protection by one of the most comprehensive warranties and outstanding service networks in the industry. What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network.

Most importantly, you can count on our uncompromising commitment to your total satisfaction.

All of this is our way of saying welcome - and thanks for investing in a PHILIPS product.

P.S. To get the most from your PHILIPS purchase, be sure to complete and return your Product Registration Card at once.

Know these safety symbols



This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

ATTENTION: Pour éviter les choc électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

For Customer Use

Enter below the Serial No. which is located on the rear of the cabinet. Retain this information for future reference.

Model No. _____


Serial No. _____

PHILIPS

Visit our World Wide Web Site at <http://www.philips.com>


IMPORTANT SAFETY INSTRUCTIONS

Read before operating equipment

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturers instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and third grounding prong. The wide blade or third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12.  Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org
16. **Damage Requiring Service** - The appliance should be serviced by qualified service personnel when:
 - A. The power supply cord or the plug has been damaged; or
 - B. Objects have fallen, or liquid has been spilled into the appliance; or
 - C. The appliance has been exposed to rain; or
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
 - E. The appliance has been dropped, or the enclosure damaged.
17. **Tilt/Stability** - All televisions must comply with recommended international global safety standards for tilt and stability properties of its cabinet design.
 - Do not compromise these design standards by applying excessive pull force to the front, or top, of the cabinet which could ultimately overturn the product.
 - Also, do not endanger yourself, or children, by placing electronic equipment/toys on the top of the cabinet. Such items could unsuspiciously fall from the top of the set and cause product damage and/or personal injury.
18. **Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
19. **Power Lines** - An outdoor antenna should be located away from power lines.
20. **Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. Section 810 of the National Electric Code, ANSI/NFPA No. 70-1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding connectors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure below.
21. **Object and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
 - a) Warning: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.
22. **Battery Usage CAUTION** - To prevent battery leakage that may result in bodily injury, property damage, or damage to the unit:
 - Install all batteries correctly, with + and - aligned as marked on the unit.
 - Do not mix batteries (old and new or carbon and alkaline, etc.).
 - Remove batteries when the unit is not used for a long time.

Note to the CATV system installer: This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.


Example of Antenna Grounding as per NEC - National Electric Code

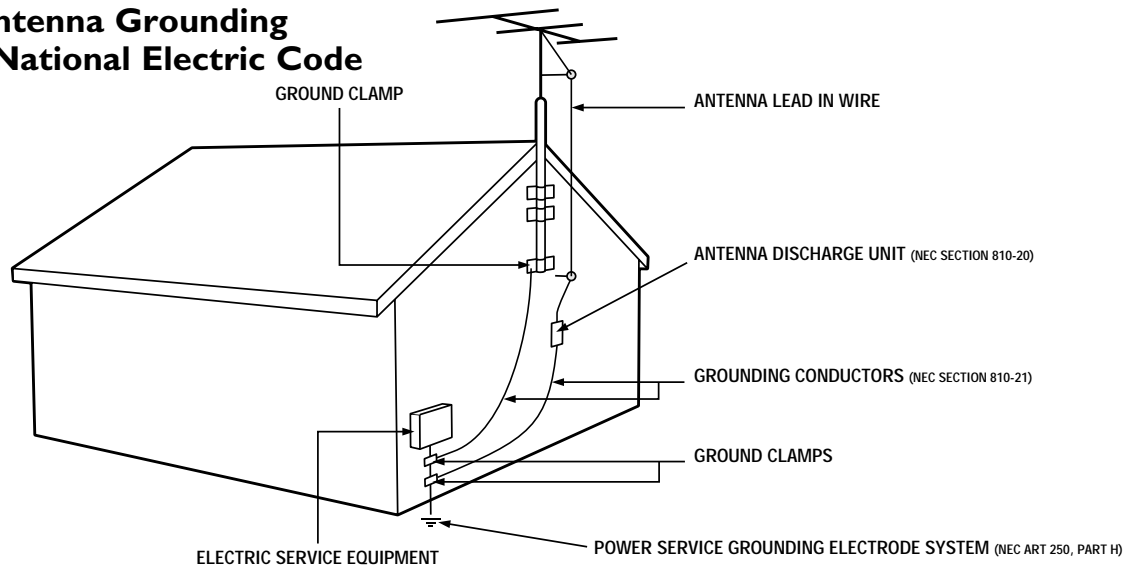

PRECAUTIONS

ADDITIONAL SAFETY PRECAUTIONS

- ENSURE that LCD TV stand is tightened properly to the set (See Quick Guide on the right way of tightening of the screw of the stand to the set. Improper tightening of screw may render the set unsafe.
- If LCD TV is installed on the wall, installation should be carried out by qualified servicemen. Improper or incorrect installation may render the set unsafe.
- Disconnect mains plug when :
 - cleaning the TV screen, never use abrasive cleaning agents.
 - there is a lightning storm.
 - the set is left unattended for a prolonged period of time.
- Do not shift or move the LCD TV around when it is powered on.
- Do not touch, push or rub the surface of the LCD screen with any sharp or hard objects.
- When the surface of the LCD screen becomes dusty, wipe it gently with an absorbent cotton cloth or other soft material like chamois. DO NOT USE acetone, toluene or alcohol to clean the surface of the screen. These chemicals will cause damage to the surface.
- Wipe off water, or saliva as soon as possible. These liquids can cause deformation and color fading of the LCD screen when left exposed for some time.
- Be careful of condensation when temperature changes occur. Condensation can cause damage to the LCD screen and electrically parts. After condensation fades, spots or blemishes will be present on the LCD screen.
- CAUTION information is located on the inside of the VESA cover (see diagram below). To read information, open the VESA cover.

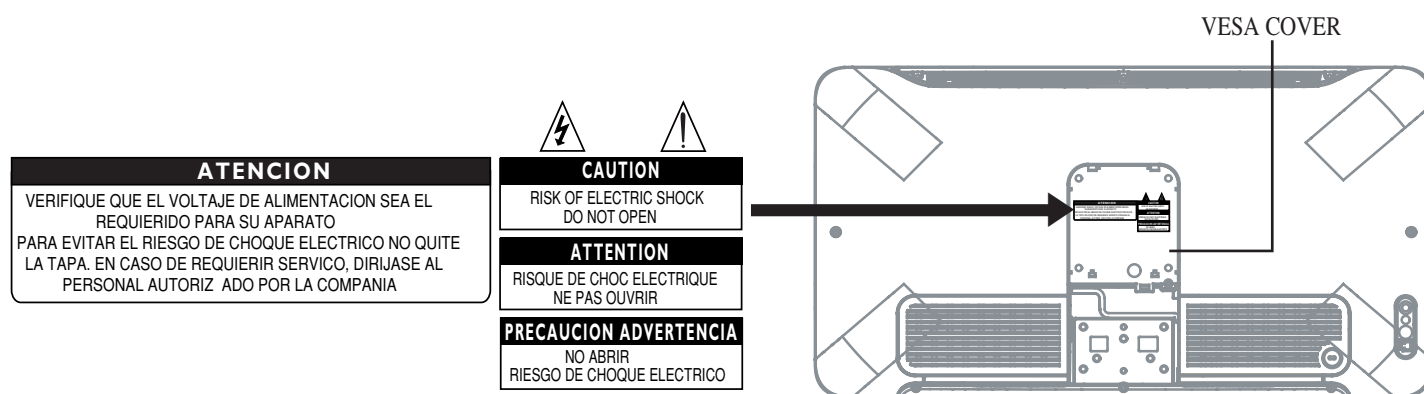

POSITIONING THE LCD TELEVISION

- Place the LCD TV on a solid, sturdy base or stand. Be sure the stand is strong enough to handle the weight of the LCD TV.
- Try to leave at least 6" of space around each side of the LCD TV cabinet to allow for proper ventilation.
- Do not place the LCD TV near a radiator or other sources of heat.
- Do not place the LCD TV where it can be exposed to rain or excessive moisture.

RECYCLING PROCEDURE/END OF LIFE DISPOSAL

- To minimize harm to the environment, the batteries supplied with the LCD TV do not contain mercury or nickel cadmium. If possible, when disposing of batteries, use recycling means available in your area.
- The LCD TV uses materials that can be recycled. To minimize the amount of waste in the environment, check your area for companies that will recover used televisions for dismantling and collection of reusable materials, or contact your dealer for TV recycling tips.
- Please dispose of the carton and packing material through the proper waste disposal management in your area.

CONTENTS

INTRODUCTION

Welcome/Registration of Your TV	2
Safety/Precautions	3-4
Features	4
Contents	5



INSTALLATION MENU

How to use the Language Controls	6
How to use the Tuner Mode Controls	6
How to use the Auto Program Controls	7
How to use the Channel Edit Controls	7



PICTURE MENU CONTROLS

How to use the Picture Menu Controls	8
--------------------------------------	---



SOUND MENU CONTROLS

How to use the Sound Menu Controls	9
------------------------------------	---



FEATURE MENU CONTROLS

How to use the Timer Menu Controls	10
Understanding the AutoLock™ Controls	11
Setting up an AutoLock™ Access Code	12
How to block channels using AutoLock™	13
How to lock HD Channel using AutoLock™	14
How to clear all locked channels at the same time	15
How to block programming using the Movie Ratings Controls	16
How to block programming using the TV Ratings Controls	17
Other AutoLock™ Blocking options	18
Using the AutoLock™ Review screen	19
How to use the Contrast+ Control	20
How to use the DNR Control	20
How to use the PIP Control	21
How to use the Mode Control	22



REMOTE CONTROL RELATED FEATURES

How to use the Format Control	22
How to use the SleepTimer Controls	23
How to use the Closed Captioning Controls	23
How to use the Program List Control	24
How to use the Active Control feature	24
How to use the Surf Control	25
How to use the Pixel Plus™ Control	25
How to use the AutoPicture™ Control	26
How to use the AutoSound™ Control	26
Remote Control Accessory Device Related Buttons	27
How to use the Remote Control with Philips accessory devices	28
How to use the Program the Universal Code with other accessory devices	29
Remote Control Direct Entry Codes	30-32



SETTING UP THE FM RADIO MODE

How to use the Mode Select Control	33
How to use the Install Controls	33
How to use the Timer Controls	34
How to use the Sound Controls	35
How to use the ScreenSaver Control	36
How to use the AutoSound™ Control	36



SETTING UP THE PC (PERSONAL COMPUTER) MODE

How to use the Picture Controls	37
How to use the Audio Selection Control	37
How to use the PC Features Controls	38
How to use the PIP Control	39



SETTING UP THE HD (HIGH DEFINITION) MODE

How to use the HD Select Control	40
How to use the Picture Controls	41
How to use the Sound Controls	42
How to lock the HD Channel	43



IMPORTANT INFORMATION

Troubleshooting	44
Care and Cleaning	45
Index	46
Limited Warranty	47

Features

Active Control™ continuously measures and corrects all incoming signals to help provide the best picture quality. This feature monitors and corrects both the sharpness control and noise reduction control.

Audio/Video Jack Panel allows direct connections with VCRs, DVDs, or other devices, providing quality TV picture and sound playback.

Audio Volume Leveler (AVL) Control keeps the TV sound at an even level. Peaks and valleys that occur during program changes or commercial breaks are reduced, making for a more consistent, comfortable sound.

AutoLock™ allows you to block the viewing of certain channels or programs with certain ratings if you do not want your children to view inappropriate materials.

AutoPicture™ allows you to change the picture settings (color, tint, contrast, etc.) for various types of programming, such as sports, movies, multimedia (games), or weak signals with the push of one button.

AutoSound™ allows you to select from three factory-set controls and a personal control that you set according to your own preferences through the onscreen Sound menu. The three factory-set controls (Voice, Music and Theatre) enable you to tailor the TV sound so as to enhance the particular programming you are watching.

Channel Edit allows you to add or delete channels from the list stored in the TV's memory. Channel Edit makes it easy to limit or expand the number of channels that are available to you when you press the Channel (+) or (–) buttons on your remote control.

Closed Captioning allows the viewer to read TV program dialogue or voice conversations as onscreen text.

Infrared Remote Control works your TV and other remote-controlled devices, such as VCRs, DVD players, cable converters, and satellite receivers.

Onscreen Menu shows helpful messages and instructions for setting TV feature controls (can be viewed in English, French, or Spanish).

Sleep Timer automatically turns the TV OFF after a set amount of time that you choose.

Timer allows you to set your TV to turn itself ON and OFF once or daily like an alarm clock.




As an Energy Star® Partner, Philips Consumer Electronics has determined this product meets the Energy Star® guidelines for energy efficiency. Energy Star® is a U.S. registered mark. Using products with the Energy Star® label can save energy. Saving energy reduces air pollution and lowers utility bills.

Active Control, AutoPicture, and AutoSound Surround are trademarks of Philips Consumer Electronics Company. Copyright 2001 Philips Consumer Electronics.

*Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

QUICK USE AND SETUP GUIDE

Refer to the simple **Quick Use and Setup Guide** (supplied with your TV) for details on making Connections and Remote Control Operation.

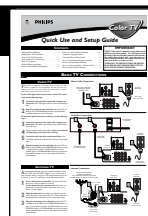




HOW TO USE THE INSTALLATION FEATURES

LANGUAGE

For our Spanish and French-speaking TV owners, an onscreen Language option is present. The Language control enables you to set the TV's onscreen menu to be shown in either English, Spanish, or French.

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button repeatedly until **Install** is highlighted.
- 3** Press the **CURSOR RIGHT** button to access the Install menu. Language will be highlighted.
- 4** Press the **CURSOR RIGHT** or **CURSOR LEFT** button to select **English**, **Francais**, or **Español**.
- 5** Press the **STATUS/EXIT** button to remove the menu from the screen.

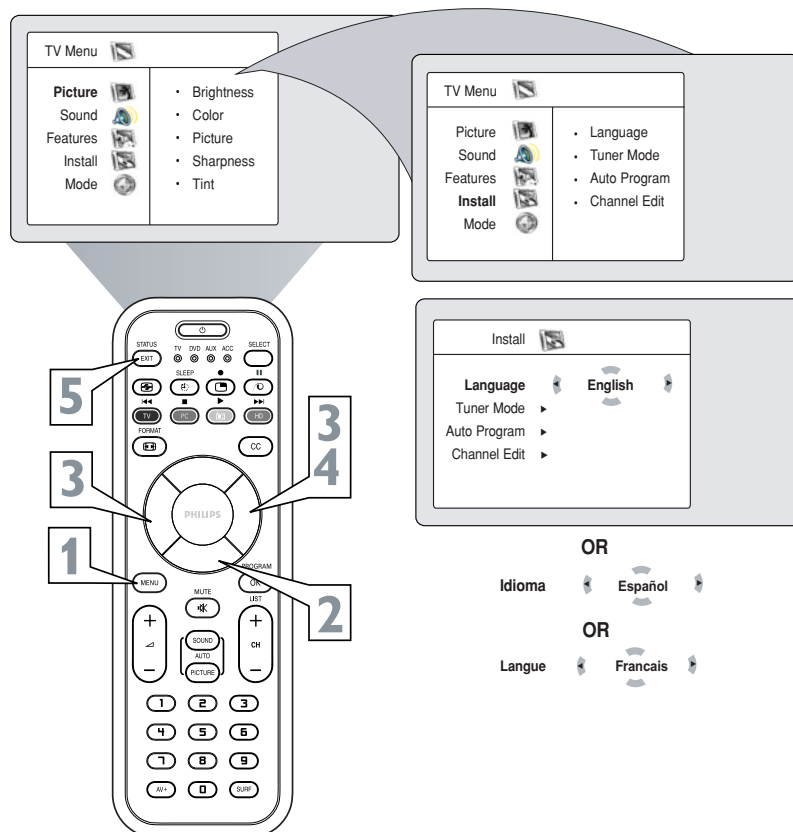


HELPFUL HINT

Remember, the **Language** control makes only the TV's onscreen Menu items appear in English, Spanish, or French text. It does not change the other onscreen text features, such as Closed Captioning (CC), with TV shows.

TUNER MODE

The Tuner Mode allows you to change the TV's signal input to Cable, Antenna, or Auto Mode. It's important for the TV to know what type of signal is connected, either Antenna or Cable.

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button repeatedly until **Install** is highlighted.
- 3** Press the **CURSOR RIGHT** button to access the Install menu. Language is highlighted.
- 4** Press the **CURSOR DOWN** button to select the **Tuner Mode** control.
- 5** Press the **CURSOR RIGHT** or **CURSOR LEFT** button to select **Cable**, **Antenna**, or **Auto**. If Tuner Mode is set to Auto, Auto Program will detect if a cable signal is present.
- 6** Press the **STATUS/EXIT** button to remove the menu from the screen.

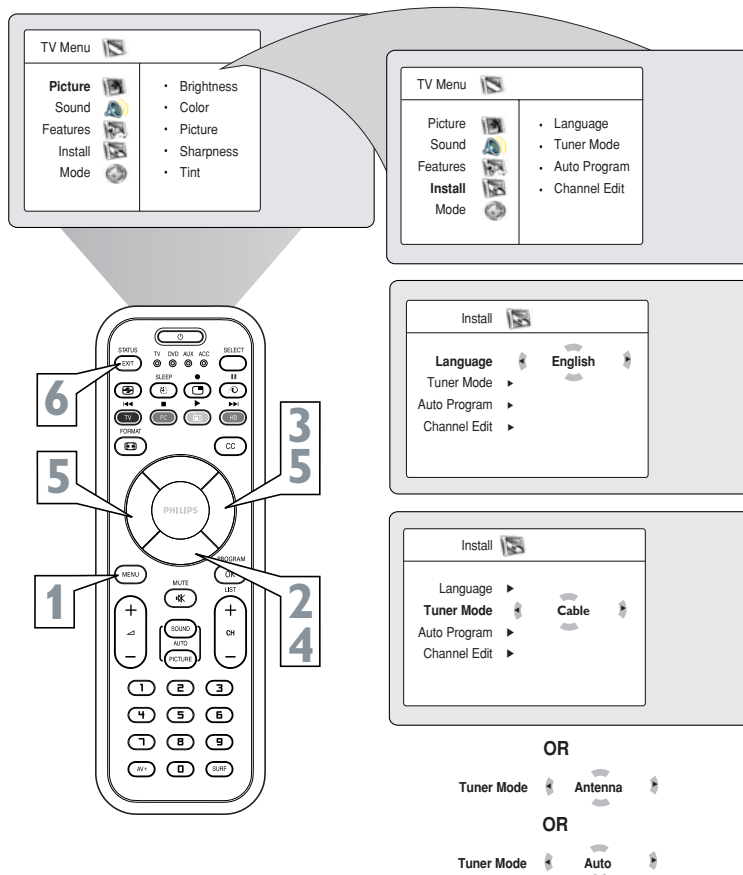

HELPFUL HINT

When **Cable** is selected, channels 1-125 are available.
When **Antenna** is selected, channels 2-69 are available.

HOW TO USE THE INSTALLATION FEATURES




AUTO PROGRAM

Your TV can automatically set itself for local area (or cable TV) channels. This makes it easy for you to select only the TV stations in your area by pressing the **CHANNEL (+) or (-) button**.

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button repeatedly until **Install** is highlighted.
- 3** Press the **CURSOR RIGHT** button to enter the **Install** menu. **Language** will be highlighted.
- 4** Press the **CURSOR DOWN** button repeatedly until **Auto Program** is selected. "Start ?" will appear.
- 5** Press the **CURSOR RIGHT** button to start the Auto Programming process.
- 6** Press the **STATUS/EXIT** button to remove the menu from the screen when the Auto programming process has finished.

HELPFUL HINT


After you've run Auto Program, check out the results. Press the **CHANNEL (+) or (-) button** and see which channels you can select. Remember, an antenna or cable TV signal must first be connected to your TV, see Quick-Use Guide for making connections.

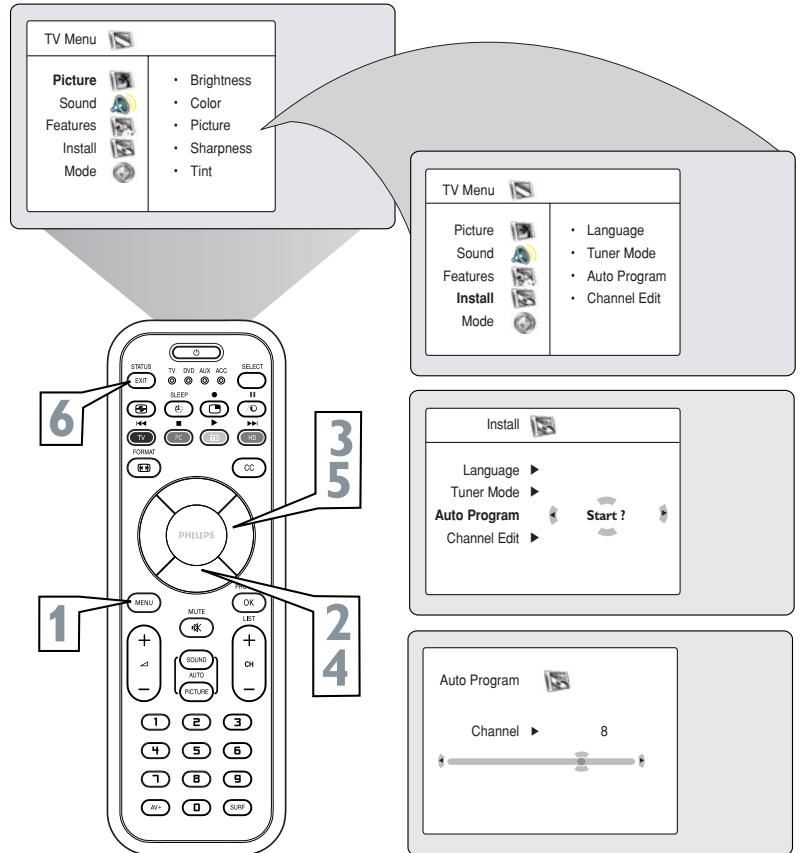

CHANNEL EDIT

Channel Edit makes it easy for you to add or delete channels from the list of channels stored in the TV's memory.

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button repeatedly until **Install** is highlighted.
- 3** Press the **CURSOR RIGHT** button to enter the **Install** menu. **Language** will be highlighted.
- 4** Press the **CURSOR DOWN** button repeatedly until **Channel Edit** is selected.
- 5** Press the **CURSOR RIGHT** button to enter the **Channel Edit** menu. **Channel** will be highlighted.
- 6** Press the **CURSOR RIGHT** or **CURSOR LEFT** buttons to scroll through the list of available channels, you can also press the **CH+** or **CH-** to scroll through the list of channels. Or, press the numbered buttons to select a specific numbered channel.
- 7** Press the **CURSOR DOWN** button to select **Skipped** while you are tuned to the channel to be skipped.
- 8** Press the **CURSOR LEFT** or **CURSOR RIGHT** button to select **On** to activate the skipping of a channel. Or, select **Off**, to deactivate the skipping of a channel.
- 9** Press the **STATUS/EXIT** button to remove the onscreen menu from the screen.

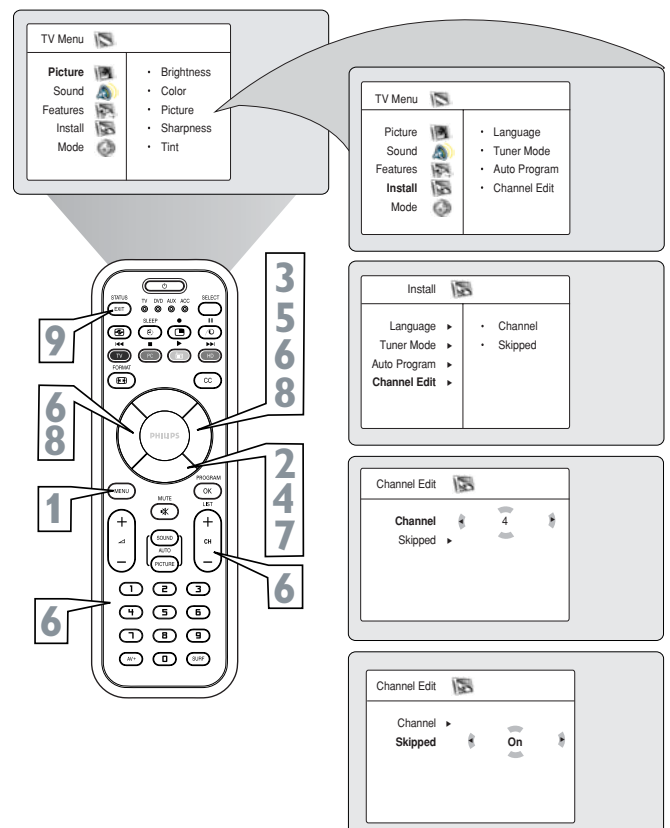





HOW TO USE THE PICTURE ADJUSTMENT CONTROLS

To adjust your TV picture controls, select a channel and follow these steps.

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button to highlight Picture.
- 3** Press the **CURSOR RIGHT** button to enter the Picture menu. **Brightness** will be highlighted.
- 4** Press the **CURSOR UP** or **CURSOR DOWN** button to select the picture adjustment you want to change: **Brightness**, **Color**, **Picture**, **Sharpness**, **Tint**, or **Color Temp.**
- 5** Press the **CURSOR LEFT** or **CURSOR RIGHT** button to adjust the selected control.
- 6** Press the **STATUS/EXIT** button when finished to remove the menu from the screen.

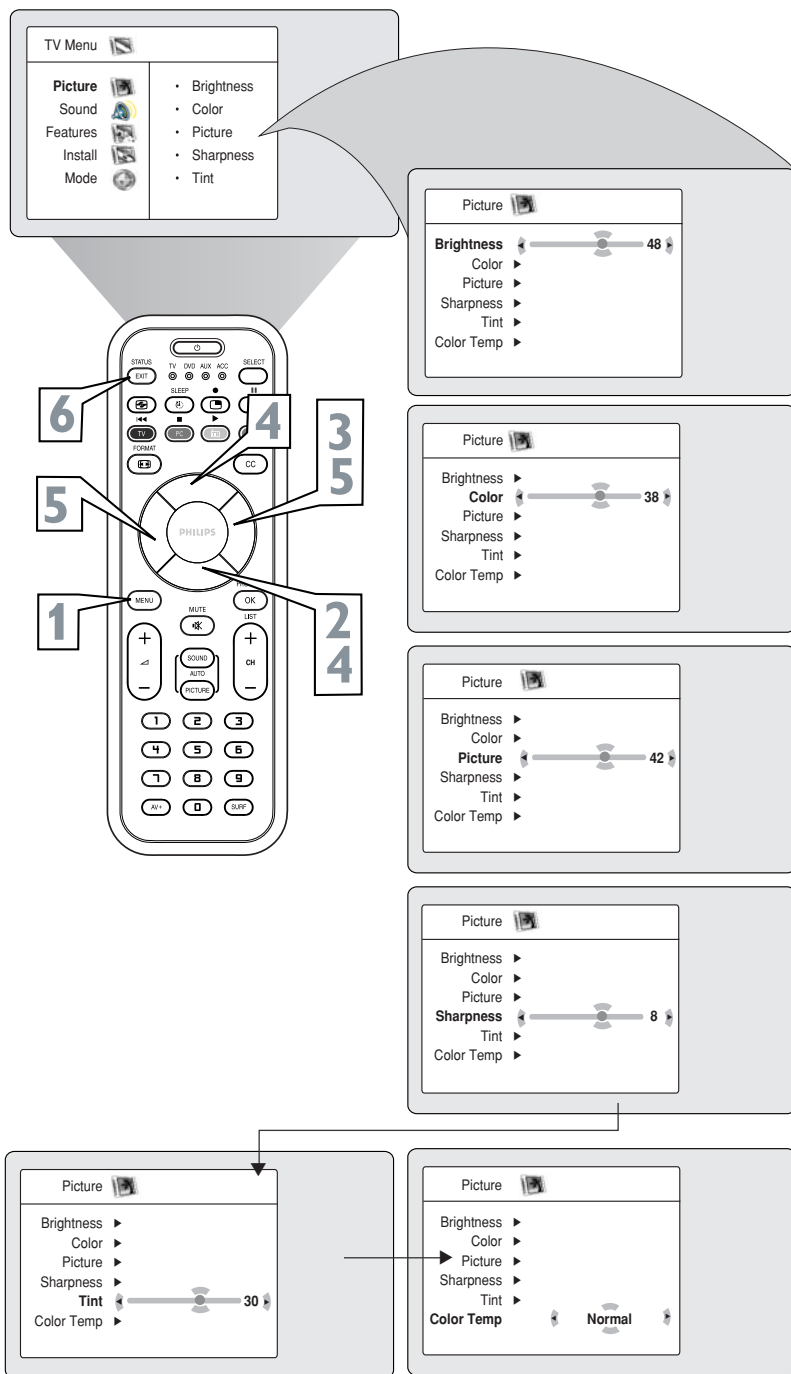

HELPFUL HINT

Remember, when the bar scale is centered , the control settings are at normal, mid-range levels.

NOTE: The Sharpness and Tint Controls will not be available for adjustments when tuned to the CVI Inputs.

Brightness – adds or subtracts light from the darkest part of the picture.

Color – adds or eliminates color.

Picture – improves the detail of the lightest parts of the picture.

Sharpness – improves the detail in the picture.

Tint – adjusts the picture to obtain natural skin tones.


Color Temp. - offers NORMAL, COOL, or WARM picture preferences. (Normal will keep the whites, white; Cool will make the whites, bluish; and Warm will make the whites, reddish.)

HOW TO USE THE SOUND ADJUSTMENT CONTROLS



To adjust your TV sound controls, select a channel and follow these steps.

- 1** Press the **MENU** button on the remote control to show the onscreen menu. Picture will be highlighted.
- 2** Press the **CURSOR DOWN** button to highlight Sound.
- 3** Press the **CURSOR RIGHT** button to enter the sound menu.
- 4** Press the **CURSOR UP** or **CURSOR DOWN** button to select the sound adjustment you want to change: **Equalizer**, **Balance**, **AVL**, **Dolby Virtual**, **SAP**, or **Sound**.
- 5** Press the **CURSOR LEFT** or **CURSOR RIGHT** button to adjust the selected control.
- 6** Press the **STATUS/EXIT** button when finished to remove the menu from the screen.

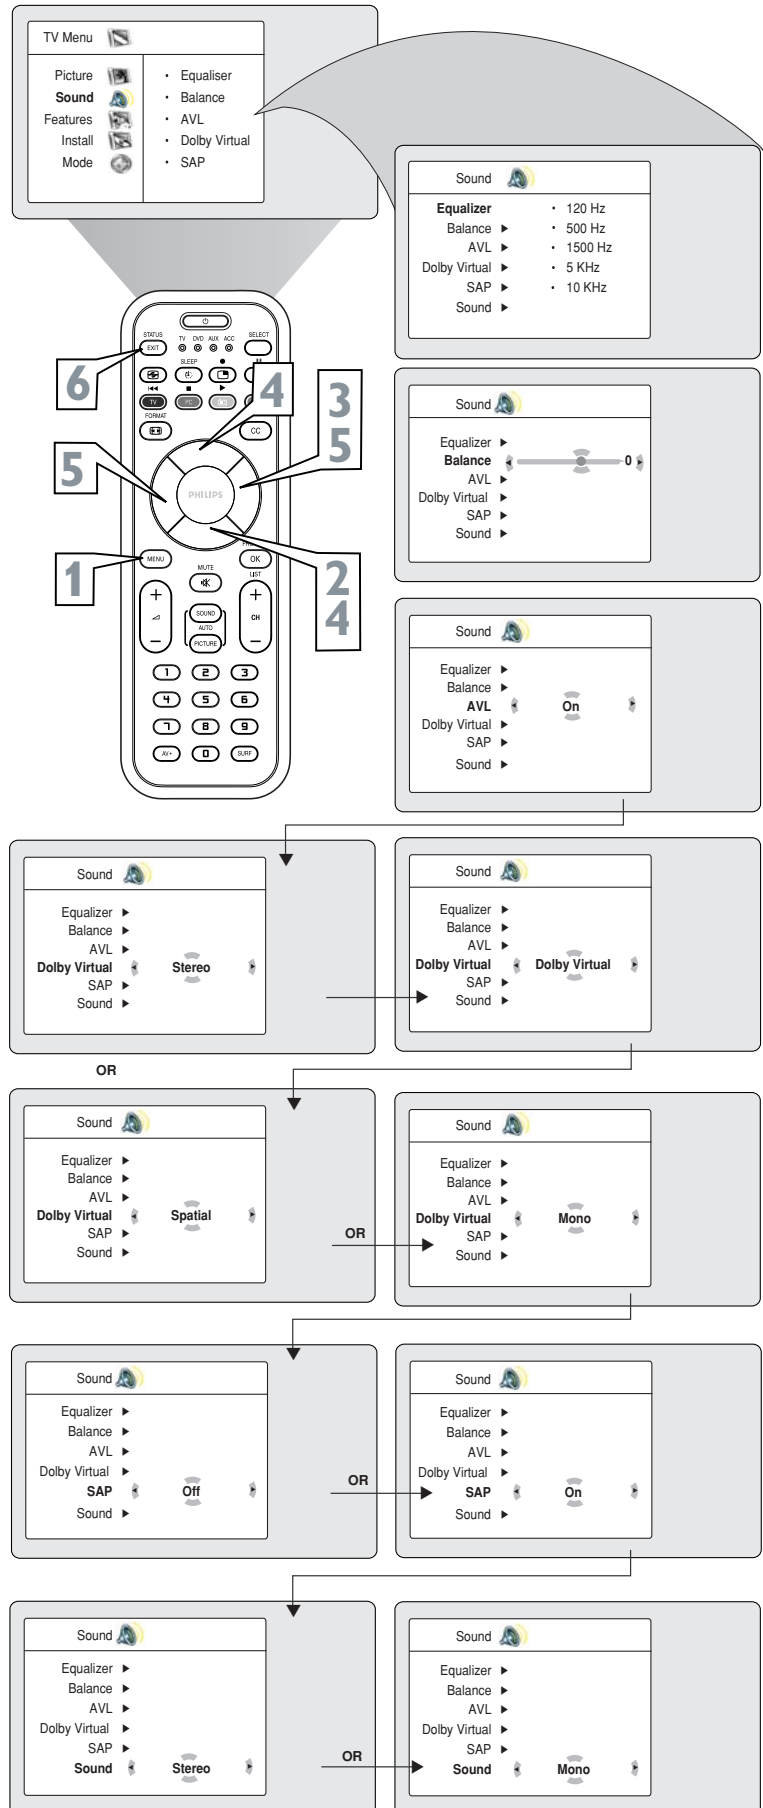

HELPFUL HINT

Equalizer – adjusts the sound tones. Select 120Hz to 10KHz.

Balance – adjusts the level of sound coming from the left and right speakers.

AVL (Auto Volume Leveler) - when On, AVL will level out the sound being heard when sudden changes in volume occur during commercial breaks or channel changes.

Dolby Virtual - adds greater depth and dimension to TV sound. Select from Dolby Virtual or Stereo sound (if Stereo) or Spatial or Mono (if Mono).

SAP (Secondary Audio Programming)– sent as a third audio channel, a SAP signal can be heard apart from the current TV program sound. Note: If SAP is not available, “Not Available” will appear on the screen.

Sound – select from Stereo or Mono.




HOW TO USE THE TIMER MENU CONTROLS

Your television comes with an onscreen clock. The TV can also be set to turn on or off at a specific time and tune to a specific channel when it powers itself on.

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button to highlight **Features**.
- 3** Press the **CURSOR RIGHT** button to enter the Features menu.
- 4** Press the **CURSOR UP** or **CURSOR DOWN** button to highlight one of the Timer controls. These controls are **Time**, **Start Time**, **Stop Time**, **Program No.**, **Activate**, or **Display**.
- 5** Press the **CURSOR RIGHT** or **CURSOR LEFT** button to make adjustments or to toggle the On or Off options.
Time: Enter the current time using the Numbered buttons. Use the **CURSOR RIGHT** to move to the AM/PM slot and use the **CURSOR LEFT** or **CURSOR RIGHT** buttons to toggle the AM and PM setting.
Start Time: Use the numbered buttons to enter the time you want the TV to turn itself On. Use the **CURSOR RIGHT** and **CURSOR LEFT** buttons to toggle the AM and PM setting.
Stop Time: Use the numbered buttons to enter the time you want the TV to turn itself Off. Use the **CURSOR RIGHT** and **CURSOR LEFT** buttons to toggle the AM and PM setting.
Program No.: Use the **NUMBERED** buttons or the **CH +** or **CH -** buttons to enter the desired start-up channel. You can also press the **CURSOR RIGHT** or **CURSOR LEFT** buttons to enter the desired start-up channel.
Activate: Set the timer to turn itself On (Once or Daily) or Off. Press the **CURSOR RIGHT** and **CURSOR LEFT** buttons to select Once, Daily, or Off.
Display: Press the **CURSOR RIGHT** or **CURSOR LEFT** to toggle between On or Off. If On is selected, the time will be displayed all the time when the TV is on. When Off is selected, the time will only appear when the **STATUS/EXIT** button is pressed.

- 6** Press the **STATUS/EXIT** button to remove the menu from the screen.

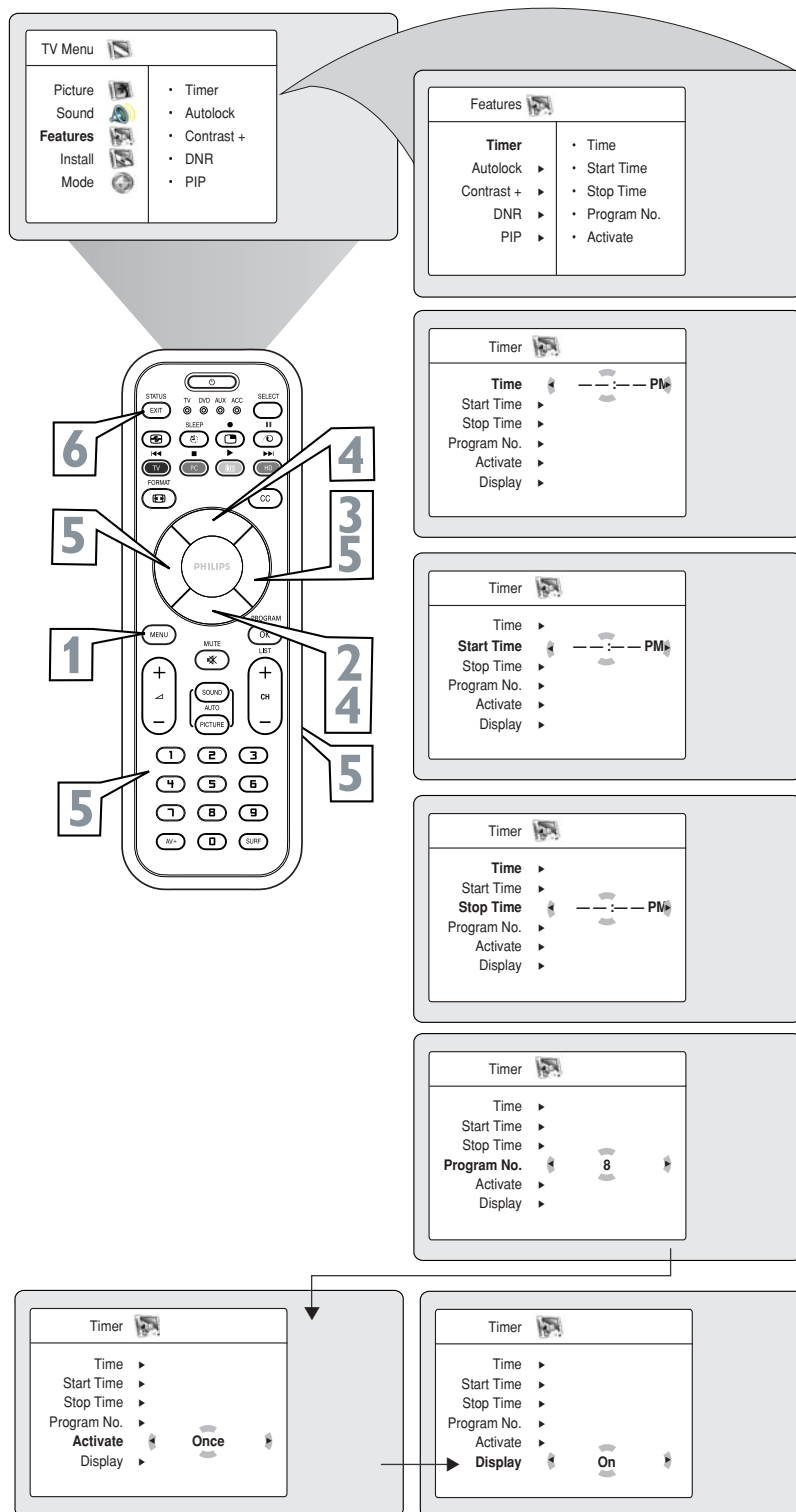



The AutoLock™ feature receives and processes data sent by broadcasters or other program providers that contain program content advisories. When programmed by the viewer, a TV with AutoLock™ can respond to the content advisories and block program content that may be found objectionable (such as offensive language, violence, sexual situations, etc.). This is a great feature to censor the type of programming children may watch.

In the AutoLock™ section, you'll learn how to block channels and programming that is not rated, is unrated, or has no rating. You will also find out how to turn these blocking features ON or OFF. Following are brief explanations of some terms and ratings related to the AutoLock™ feature.



AutoLock™ offers various Blocking Options from which to choose:

BLOCKING: The BLOCKING control is what can be thought of as the "master switch" for AutoLock™. This control affects the settings you have chosen for blocking programs according to movie ratings or TV ratings, or for blocking programs that have no rating or are unrated. When the BLOCKING control is OFF, the blocking or censoring of programs is disabled. When the BLOCKING control is ON, blocking will occur according to the settings you have chosen.

NO RATING: ALL programming with no content advisory data can be blocked if NO RATING is set to ON.

Programming that has No Rating is not encoded with any rating information from the MPAA or the Parental Guidelines. Any programming could fall into this category.

You also can block individual channels or block programming based on ratings of the MPAA and TV broadcasters. (See a description of the ratings on this page.)

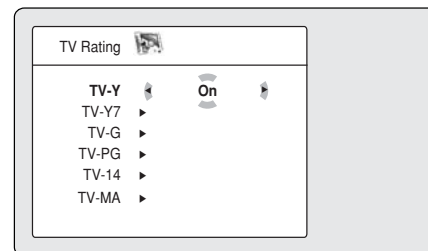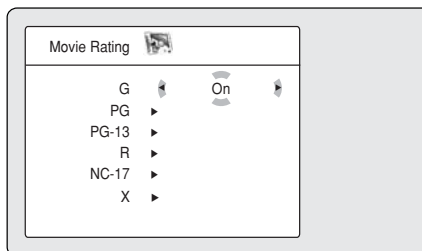

MOVIE RATINGS (MOTION PICTURE ASSOCIATION OF AMERICA)

G: General Audience - All ages admitted. Most parents would find this programming suitable for all ages. This type of programming contains little or no violence, no strong language, and little or no sexual dialogue or sexual situations.

PG: Parental Guidance Suggested - This programming contains material that parents may find unsuitable for younger children. It may contain one or more of the following: Moderate violence, some sexual situations, infrequent coarse language, or some suggestive dialogue.

PG-13: Parents Strongly Cautioned - This programming contains material that parents may find unsuitable for children under the age of 13. It contains one or more of the following: violence, sexual situations, coarse language, or suggestive dialogue.

R: Restricted - This programming is specifically designed for adults. Anyone under the age of 17 should view this programming only with an accompanying parent or adult guardian. It contains one or more of the following: intense violence; intense sexual situations; strong, coarse language; or intensely suggestive dialogue.

NC-17: No one under the age of 17 will be admitted. - This type of programming should be viewed by adults only. It contains graphic violence; explicit sex; or crude, indecent language.

X: Adults Only - This type of programming contains one or more of the following: very graphic violence, very graphic and explicit or indecent sexual acts, very coarse and intensely suggestive language.

TV PARENTAL GUIDELINES (TV BROADCASTERS)

TV-Y: (All children -- This program is designed to be appropriate for all children.) Designed for a very young audience, including children ages 2-6. This type of programming is not expected to frighten younger children.

TV-Y7: (Directed to Older Children -- This program is designed for children ages 7 and above.) It may be more appropriate for children who have acquired the development skills needed to distinguish between make-believe and reality. This programming may include mild fantasy and comic violence (FV).

TV-G: (General Audience -- Most parents would find this program suitable for all ages.) This type of programming contains little or no violence, no strong language, and little or no sexual dialogue or sexual situations.

TV-PG: (Parental Guidance Suggested -- This program contains material that parents may find unsuitable for younger children.) This type of programming contains one or more of the following: Moderate violence (V), some sexual situations (S), infrequent coarse language (L), or some suggestive dialogue (D).

TV-14: (Parents Strongly Cautioned -- This program contains some material that many parents would find unsuitable for children under 14 years of age.) This type of programming contains one or more of the following: intense violence (V); intense sexual situations (S); strong, coarse language (L); or intensely suggestive dialogue (D).


TV-MA: (Mature Audience Only -- This program is specifically designed to be viewed by adults and therefore may be unsuitable for children under 17.) This type of programming contains one or more of the following: graphic violence (V); explicit sexual situations (S); or crude, indecent language (L).



SETTING UP AN AUTOLOCK™ ACCESS CODE

AutoLock™ allows parents to block out or “censor” any channels they think children should not watch. A channel blocked by the AutoLock™ control cannot be viewed until a correct access code is used to unlock the channel for viewing. First, let's set your AutoLock access code.

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button to highlight **Features**.
- 3** Press the **CURSOR RIGHT** button to display the Features menu.
- 4** Press the **CURSOR DOWN** button to highlight the **AutoLock** control.
- 5** Press the **CURSOR RIGHT** button to enter the AutoLock mode. “Access Code ----” will appear.
- 6** Using the numbered buttons on the remote control, enter the access code. If you do not know your code, **0,7,1,1** is the default code. After you have entered the code once, *Incorrect* will appear on the screen. Enter the code a second time, *Correct* will appear. When “Correct” appears, the AutoLock menu is accessible and you can proceed to change the access code.
- 7** Press the **CURSOR DOWN** button to highlight **Change Code**.
- 8** Press the **CURSOR RIGHT** button to enter the Change Code menu. “Enter New Code ----” will appear. Enter a new **four-digit code** using the number buttons, “Confirm Code----” will appear on the screen.
- 9** Using the numbered buttons, re-enter your new four-digit code, “Confirm Code” will appear. After re-entering your new code, “Correct” will flash on the screen briefly and the highlight bar goes back to AutoLock.
- 10** Press the **STATUS/EXIT** button to remove the menu from the screen.

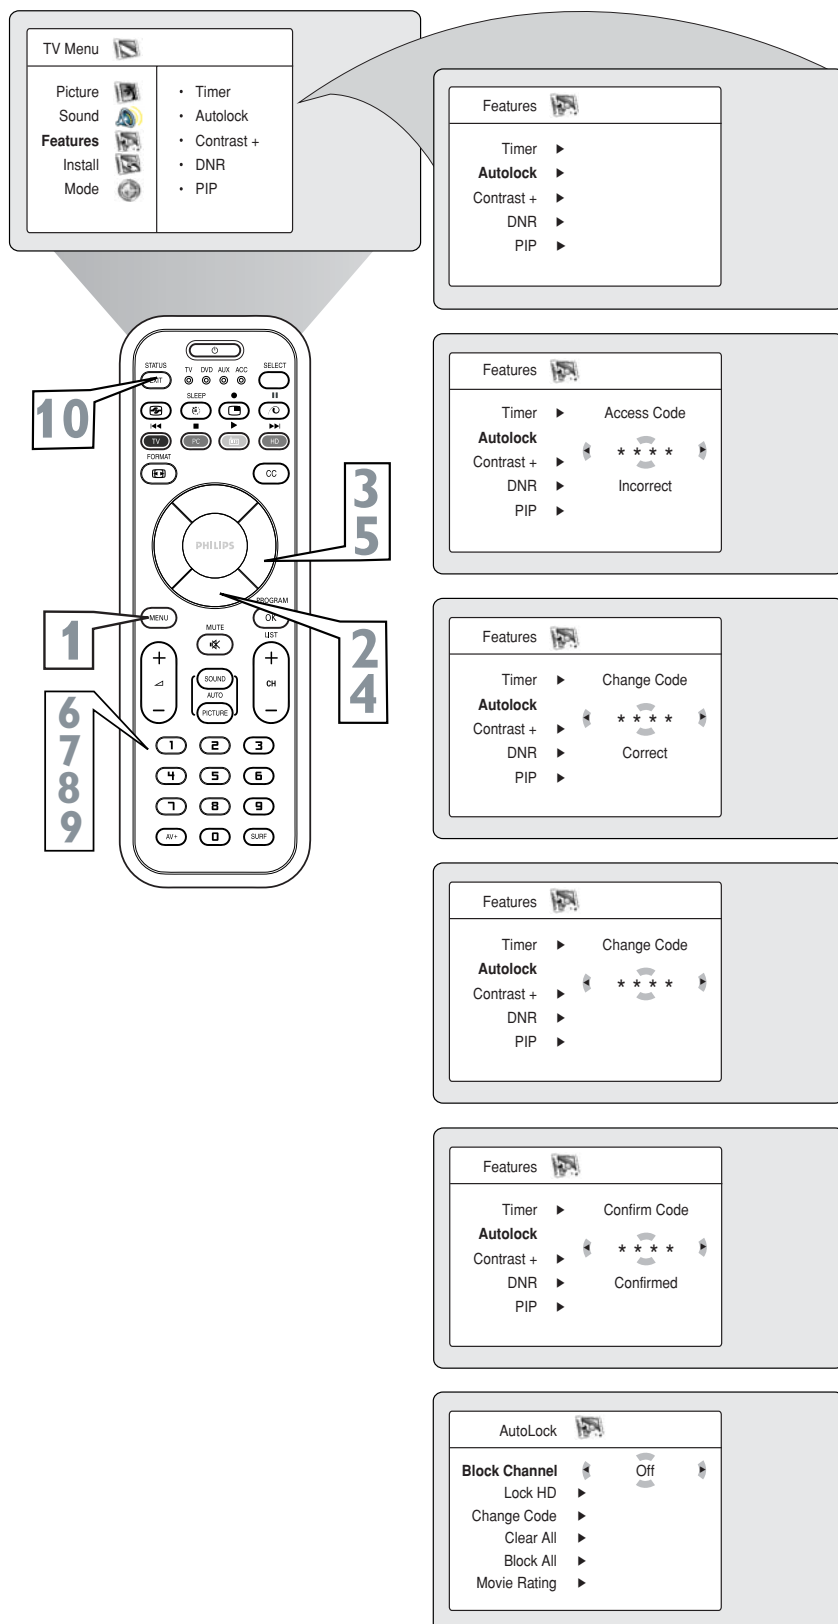

HELPFUL HINT


Remember that 0711 is the default AutoLock™ code. If your access code has been changed by someone other than you (a child, for example) or you have forgotten the code, you can always get in by inputting the default code.

NOTE TO PARENTS: It isn't possible for your child to unblock a channel without knowing your access code or changing it to a new one. If your code has been changed without your knowledge, then you will become aware that blocked channels may have been viewed.



After your personal access code has been set (see the previous page), you are ready to select the channels or inputs you want to block out or censor.


- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button to highlight **Features**.
- 3** Press the **CURSOR RIGHT** button to display the **Features** menu.
- 4** Press the **CURSOR DOWN** button to highlight **AutoLock™**.
- 5** Press the **CURSOR RIGHT** button again display the Access Code menu prompt.
- 6** Enter your four-digit **ACCESS CODE**. Correct will flash very briefly and the AutoLock™ will be accessible.
- 7** You can choose to block individual channels or all channels at the same time. For individual channels, **press the CURSOR RIGHT** to enter the Lock Channel menu.
- 8** Using the **numbered buttons** or the **CH+ or CH-** buttons enter the channel you wish to lock.
- 9** To block all channels, **press the CURSOR DOWN** button until **Block All** is selected.
- 10** Press the **CURSOR RIGHT** button to select **On** to activate the blocking of all channels. To deactivate the blocking of all channels, select **Off**.
- 11** Press the **STATUS/EXIT** button to remove the menu from the screen.

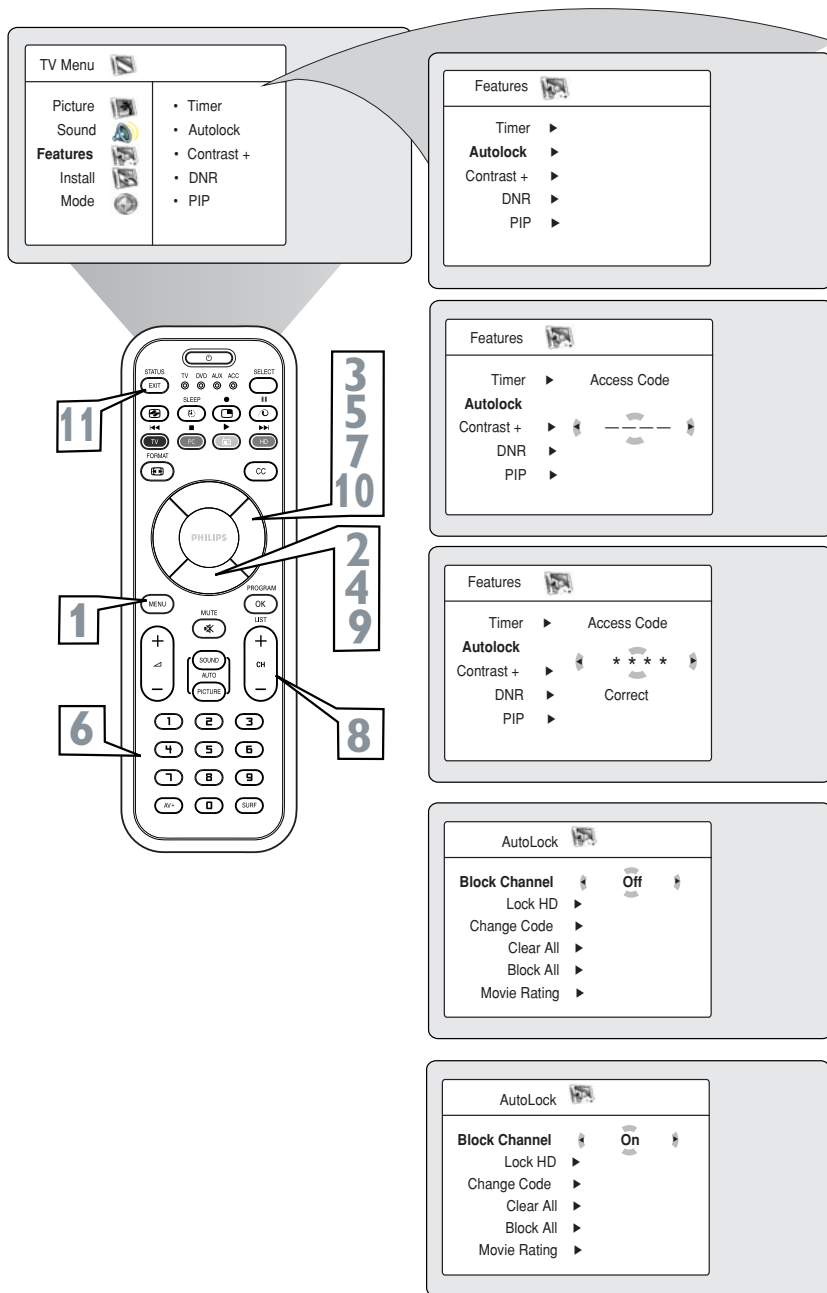

NOTE TO PARENTS: It isn't possible for your child to unblock a channel without knowing your access code or changing it to a new one. If your code has been changed without your knowledge, then you will become aware that blocked channels may have been viewed.

HELPFUL HINT

Remember that 0711 is the default AutoLock™ code. If your access code has been changed by someone other than you (a child, for example) or you have forgotten the code, you can always get in by inputting the default code.

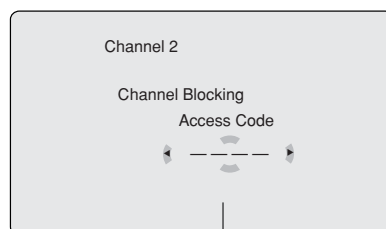


If a channel is blocked by the Block Channel or Block All option, the TV will display the above screen. To watch the channel, enter your access code or you can change the Block Channel option back to Off.



HOW TO LOCK A HD (HIGH DEFINITION) CHANNEL IN TV MODE

You can also lock the HD (High Definition) channel while in TV Mode using the AutoLock™ feature.

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button to highlight **Features**.
- 3** Press the **CURSOR RIGHT** button to display the Features menu.
- 4** Press the **CURSOR DOWN** button to select the **AutoLock™** control.
- 5** Press the **CURSOR RIGHT** button again to highlight **Access Code**.
- 6** Enter your four-digit **Access Code**, "Correct" will briefly appear on the screen and the AutoLock menu will be accessible.
- 7** Press the **CURSOR DOWN** button to select **Lock HD**.
- 8** Press the **CURSOR RIGHT** button to select **On** to activate the blocking of the HD channel.
- 9** Press the **STATUS/EXIT** button to remove the menu from the screen.

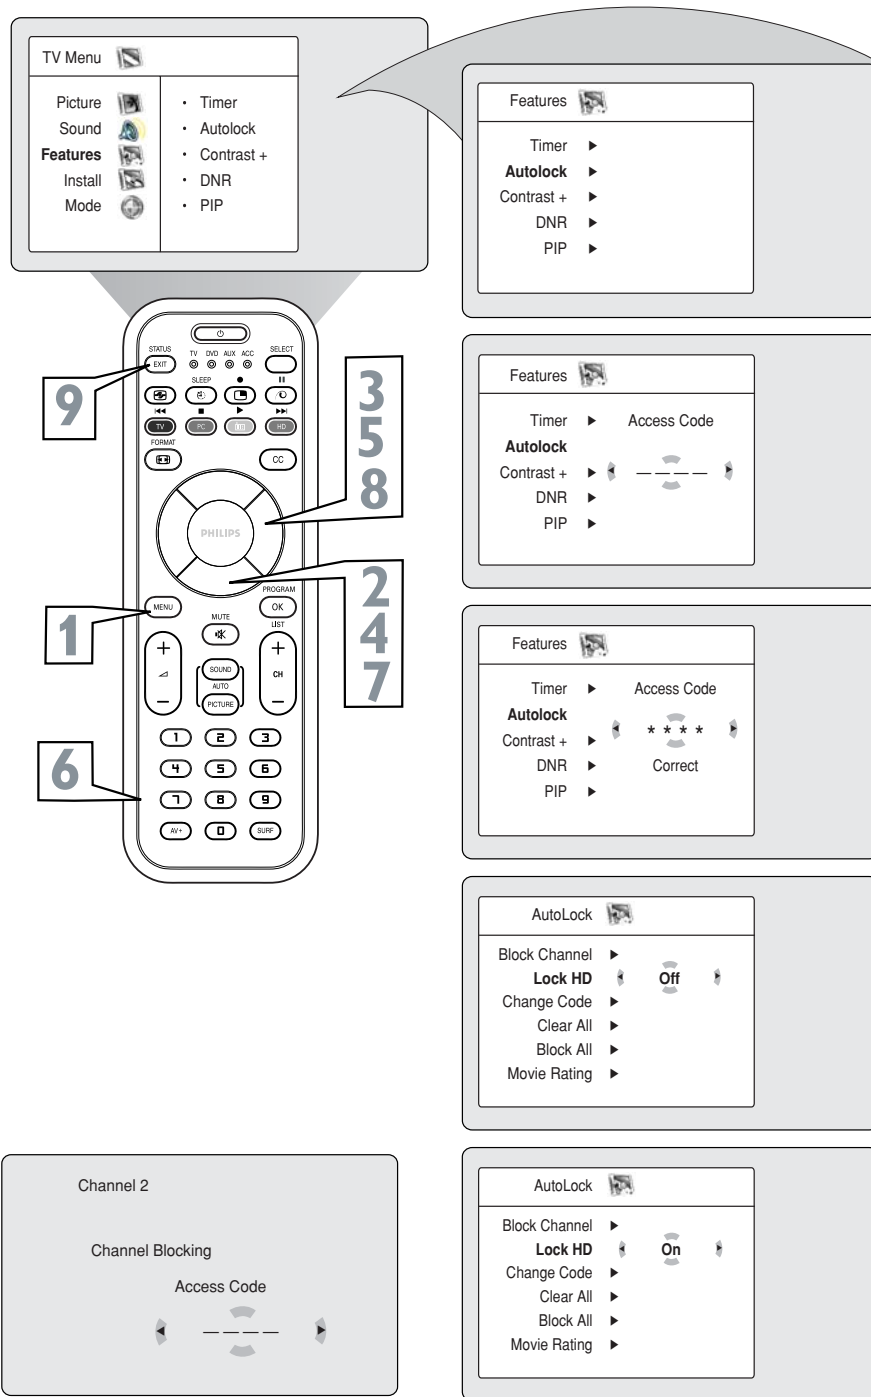

If a channel is blocked by the Block Channel or Block All option, the TV will display the screen shown above. To watch the selected blocked channel or all the blocked channels, enter your Access Code or change the Block Channel or Block All option to Off.

HELPFUL HINT


Remember that 0711 is the default AutoLock™ code. If your access code has been changed by someone other than you (a child, for example) or you have forgotten the code, you can always get in by inputting the default code.

HOW TO CLEAR ALL LOCKED CHANNELS AT THE SAME TIME



Various onscreen messages will appear when someone tries to view blocked programming. The message is determined by how the current programming is blocked. You may view the blocked programming and turn OFF the AutoLock™ feature by using the Clear All control or by entering your access code.

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button to highlight **Features**.
- 3** Press the **CURSOR RIGHT** button to display the Features menu.
- 4** Press the **CURSOR DOWN** button to select the **AutoLock™** control.
- 5** Press the **CURSOR RIGHT** button again to highlight **Access Code**.
- 6** Enter your four-digit **Access Code**, "Correct" will briefly appear on the screen and the AutoLock menu will be accessible.
- 7** Press the **CURSOR RIGHT** button to enter the AutoLock menu.
- 8** Press the **CURSOR DOWN** button to select **Clear All**. **Clear?** will appear on the screen.
- 9** Press the **CURSOR RIGHT** button to activate the clearing of all channels.
- 10** Press the **STATUS/EXIT** button to remove the menu from the screen.

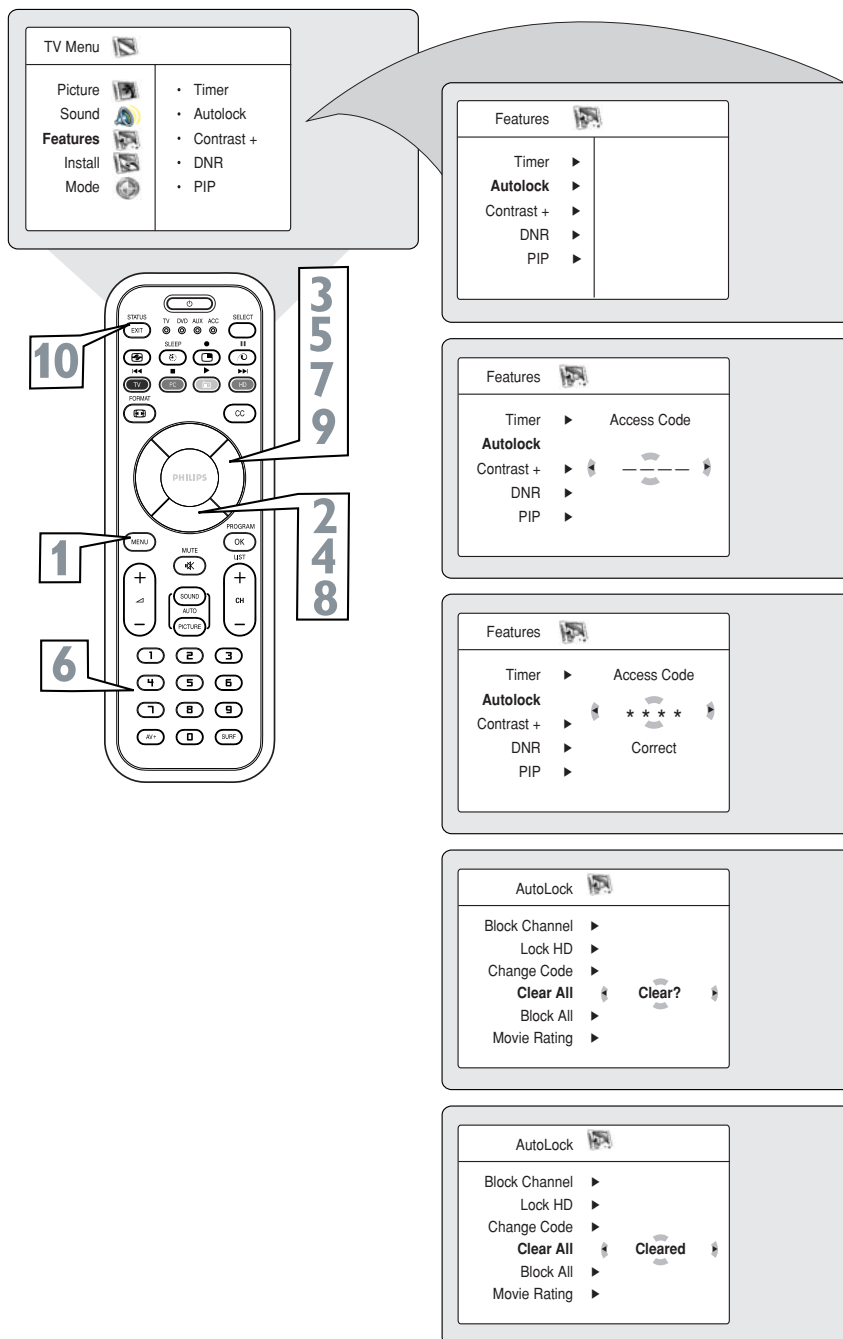

HELPFUL HINT

If you tune to a specific channel that has been blocked by Block Channel or any of the AutoLock™ Rating options, simply enter your four-digit access code to view the channel.


NOTE : This will unblock ALL channels until the TV is shut OFF. When powered back ON, all previously blocked channels will be blocked again.



BLOCKING PROGRAMS BASED ON MOVIE RATINGS

After your personal access code has been set, you can select specific movie ratings that you want to censor.

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button to highlight **Features**.
- 3** Press the **CURSOR RIGHT** button to display the Features menu.
- 4** Press the **CURSOR DOWN** button to highlight the **AutoLock™** control.
- 5** Press the **CURSOR RIGHT** button again to highlight **Access Code**.
- 6** Enter your four-digit **Access Code**. *Correct* will flash very briefly and the menu will move to the left with the **AutoLock** menu now accessible.
- 7** Press the **CURSOR RIGHT** button to display the **AutoLock** menu.
- 8** Press the **CURSOR DOWN** repeatedly until **Movie Rating** is highlighted.
- 9** Press the **CURSOR RIGHT** button and the Rating menu shifts to the left with **G** highlighted.
- 10** Press the **CURSOR UP** or **DOWN** buttons to highlight each rating you want.
- 11** Press the **CURSOR RIGHT** button to turn the rating **ON** or **OFF**. Turning the rating **ON** will block programs with that rating from being seen.
- 12** Press the **STATUS/EXIT** button to remove the menu from the screen.

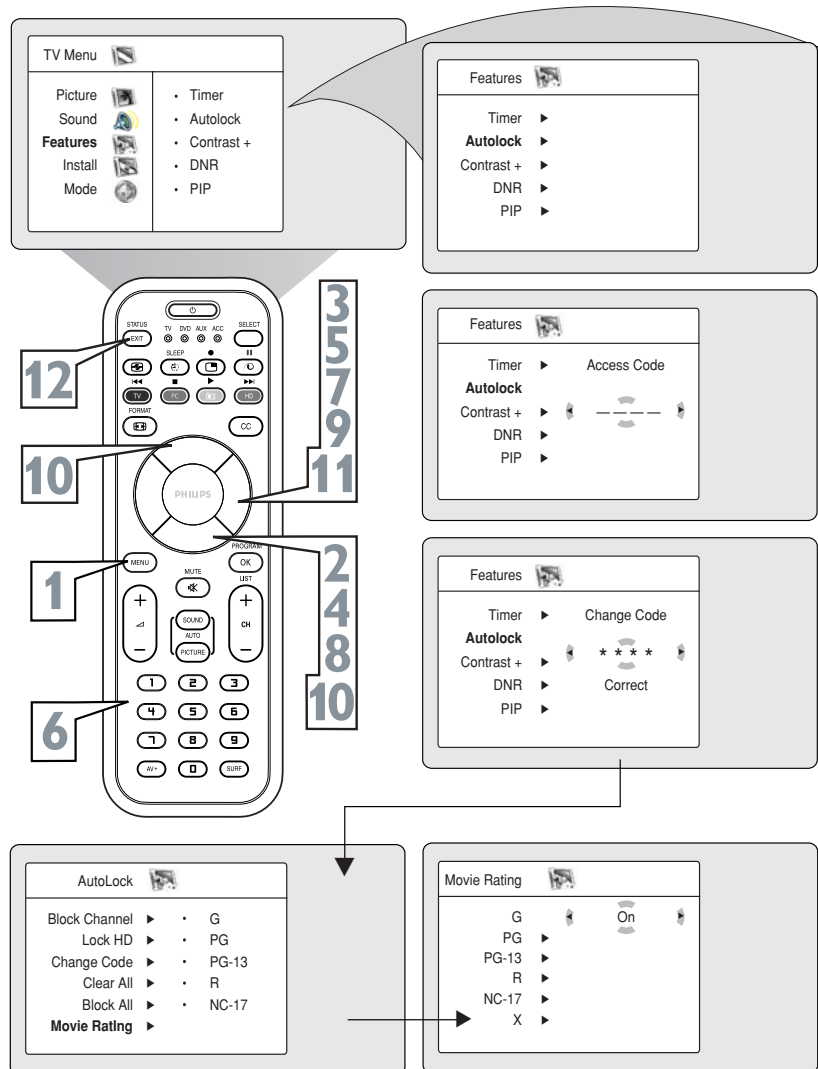

BLOCKING PROGRAMS BASED ON TV RATINGS




You can select specific TV ratings that you want to censor by following these steps.

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button to highlight **Features**.
- 3** Press the **CURSOR RIGHT** button to display the Features menu.
- 4** Press the **CURSOR DOWN** button to highlight the **AutoLock™** control.
- 5** Press the **CURSOR RIGHT** button again to highlight Access Code.
- 6** Enter your four-digit Access Code. Correct will flash very briefly and the menu will move to the left with the AutoLock menu now accessible.
- 7** Press the **CURSOR RIGHT** button to display the AutoLock menu.
- 8** Press the **CURSOR DOWN** button repeatedly until **TV Rating** is highlighted.
- 9** Press the **CURSOR RIGHT** button to enter the TV Rating menu.
- 10** Press the **CURSOR UP** or **DOWN** to select a desired rating (**TV-Y**, **TV-Y7**, **TV-G**, **TV-PG**, **TV-14**, or **TV-MA**).
- 11** Press the **CURSOR RIGHT** or **LEFT** to turn the block on the rating **On** or **Off**.

NOTE: More specific subratings (for violence, sexual content, dialogue, or fantasy violence) are available for TV-Y7, TV-PG, TV-14, and TV-MA. (Refer to page 11 for definitions.)

- 12** To access these subratings, with the main rating selected, **press the CURSOR RIGHT**. Then, repeat steps 10-11 to turn the sub-ratings **ON** or **OFF**.

- 13** Press the **STATUS/EXIT** button to remove the menu from the screen.

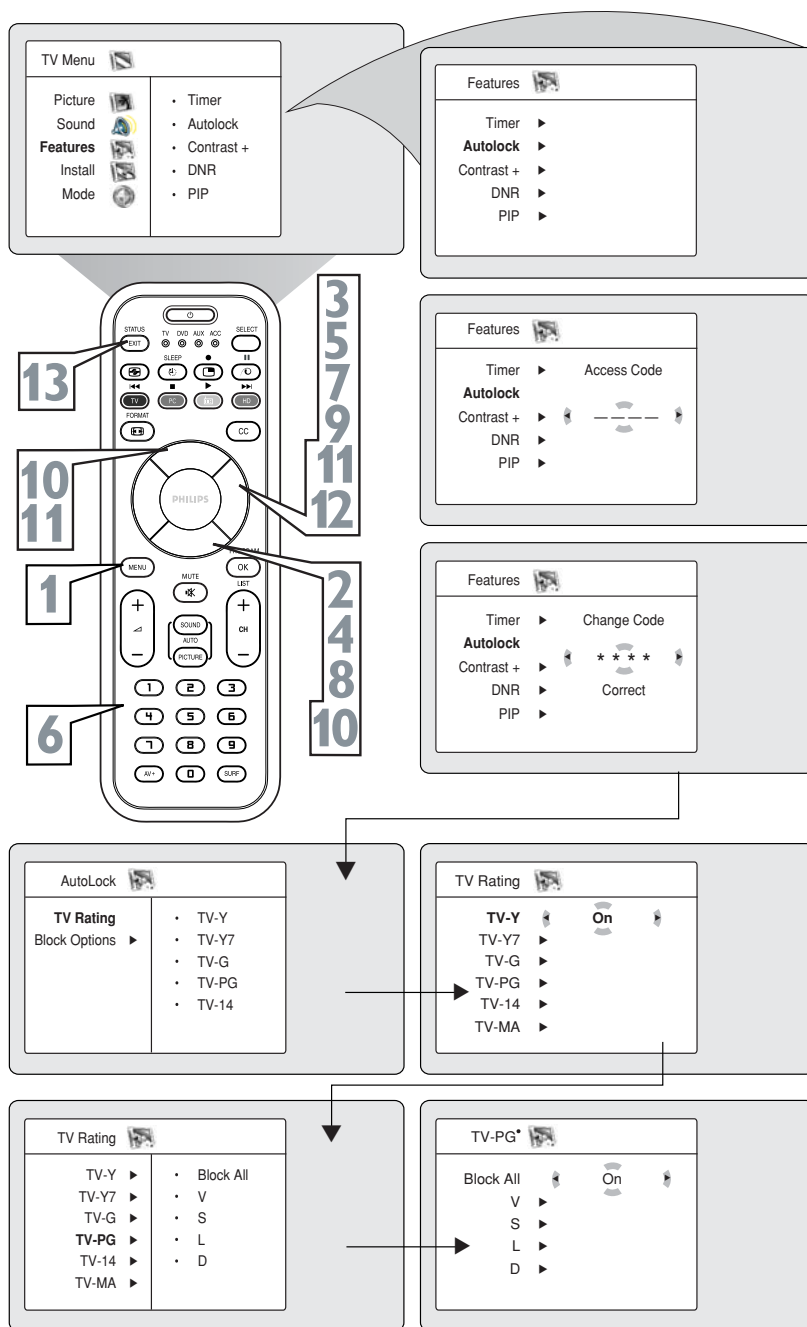




OTHER AUTOLOCK™ BLOCKING OPTIONS

The AutoLock™ control offers the viewer other blocking options as well! With Block Options, the censoring can be turned On or Off.

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR UP** or **CURSOR DOWN** button to highlight Features.
- 3** Press the **CURSOR RIGHT** button to display the Features menu.
- 4** Press the **CURSOR DOWN** button to highlight the AutoLock™ control.
- 5** Press the **CURSOR RIGHT** button again to highlight Access Code.
- 6** Enter your four-digit Access Code. Correct will flash very briefly and the menu will move to the left with the AutoLock menu now accessible.
- 7** Press the **CURSOR RIGHT** button to display the AutoLock menu.
- 8** Press the **CURSOR DOWN** button repeatedly until **Block Options** is highlighted.
- 9** Press the **CURSOR RIGHT** button to enter the Block Options menu.
- 10** Press the **CURSOR UP** or **DOWN** buttons to select the desired block option.
Blocking: Might be called the “master switch” for AutoLock™. When **On**, All blocking/censoring will take place. When **Off**, All blocking is disabled.
Block Unrated: All unrated programs based on the Movie Ratings or Parental (TV) Guidelines can be blocked if this feature is set to **On** and the Blocking feature is set to **Off**.
No Rating: ALL programming with NO content advisory data can be blocked if set to **On** and the Blocking feature is set to **Off**.
- 11** Press the **CURSOR RIGHT** or **LEFT** to toggle blocking **On** or **Off**.
- 12** Press the **STATUS/EXIT** button to remove the menu from the screen.

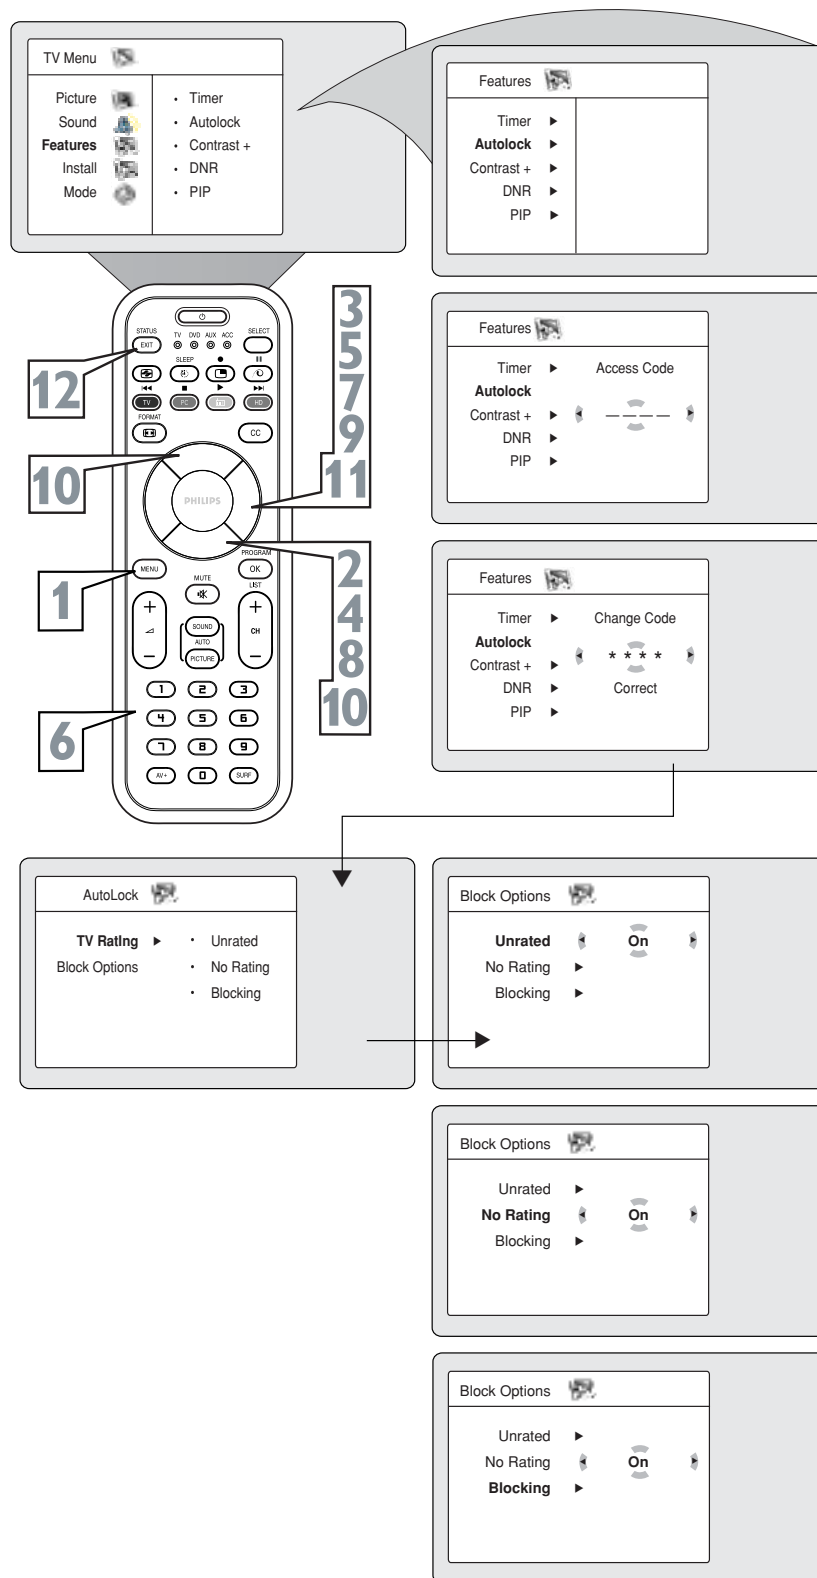

HELPFUL HINT

Remember, when the Blocking control is Off, the blocking or censoring of programs is disabled. When the Blocking control is On, blocking will occur according to the settings you have chosen.

USING THE AUTOLOCK™ REVIEW SCREEN



To remind you which rating you have locked and which Block Options you have selected, a review screen is available to review your AutoLock™ settings. To access this screen follow the steps below.

- 1** Press the **STATUS/EXIT** button on the remote control **TWICE**. Your AutoLock™ settings will appear on the screen.


NOTE : If you have blocked specific subratings, such as V for violence in the TV-PG category, these blocked subratings will not appear in the review. The subratings however are still blocked according to your selections.

- 2** After a few seconds, the settings will leave the screen automatically, or you can press the **STATUS/EXIT** button a third time to remove them from the screen.

HELPFUL HINT

The AutoLock™ status screen will only appear if the Block option is set to On. See previous page for details.


AutoLock is set to Off by default.

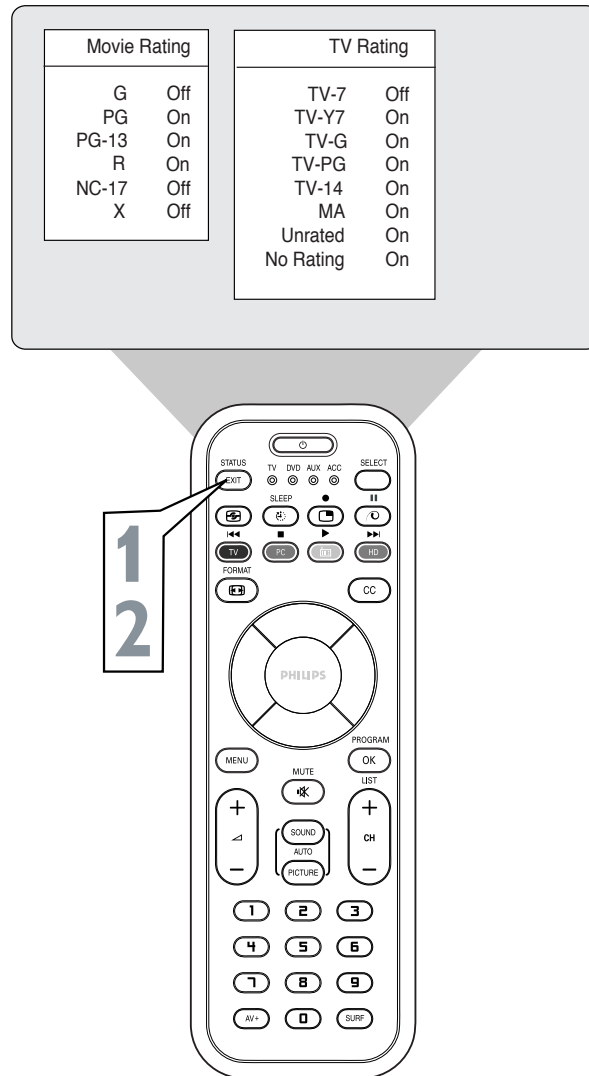

This display will appear after Step One (above) is completed if the AutoLock™ Block Option is set to **On**.

This display will appear after Step One (above) is completed if the AutoLock™ Block Option is set to **Off**.

Movie Rating		TV Rating	
G	Off	TV-7	Off
PG	On	TV-Y7	On
PG-13	On	TV-G	On
R	On	TV-PG	On
NC-17	Off	TV-14	On
X	Off	MA	On
		Unrated	On
		No Rating	On

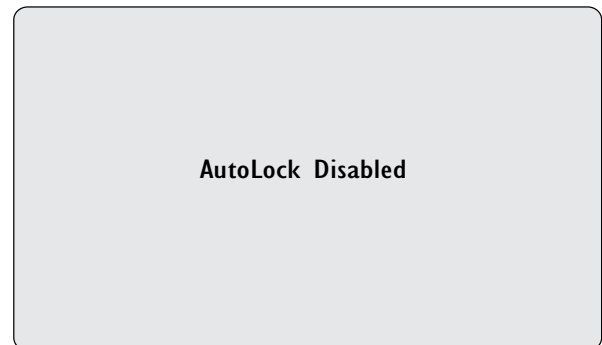




HOW TO USE THE CONTRAST+ CONTROL

The Contrast + function helps to sharpen the picture quality. The black portions of the picture become richer in darkness and the white portions become brighter.


- 1** Press the **MENU** button on the remote control to show the on-screen menu.
- 2** Press the **CURSOR DOWN** to highlight **Features**.
- 3** Press the **CURSOR RIGHT** to access the **Features** menu.
- 4** Press the **CURSOR DOWN** button until the **Contrast +** control is highlighted.
- 5** Press the **CURSOR RIGHT** or **LEFT** to toggle the **On** or **Off** option.
- 6** Press the **STATUS/EXIT** button to remove the menu from the screen.

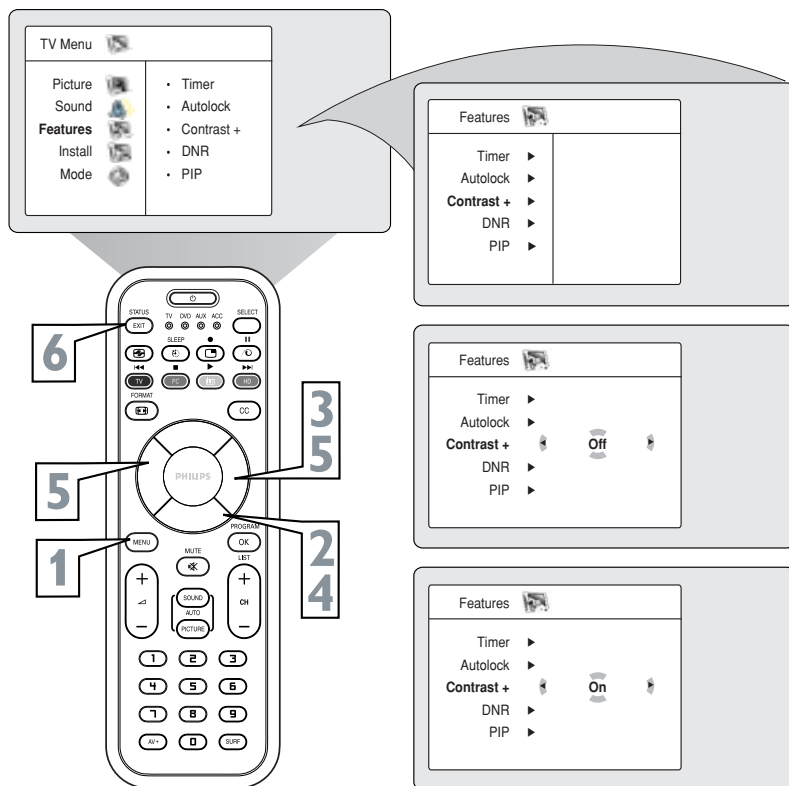

HOW TO USE THE DNR CONTROLS

The DNR (Dynamic Noise Reduction) function helps to diminish signal “noise” in the picture or what is known as “speckled” picture.

- 1** Press the **MENU** button on the remote control to show the on-screen menu.
- 2** Press the **CURSOR DOWN** to highlight **Features**.
- 3** Press the **CURSOR RIGHT** to access the **Features** menu.
- 4** Press the **CURSOR DOWN** button until the **DNR** is highlighted.
- 5** Press the **CURSOR RIGHT** or **LEFT** to toggle the **On** or **Off** option.
- 6** Press the **STATUS/EXIT** button to remove the menu from the screen.

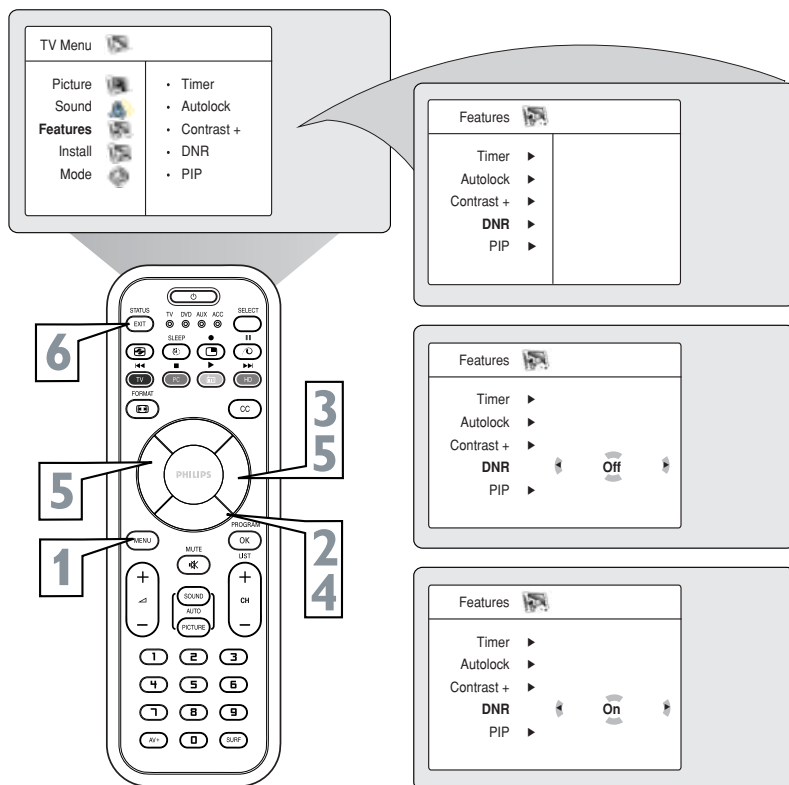


HOW TO USE THE PIP (PICTURE IN PICTURE) CONTROL




While you are in TV mode, you can call up a PIP window for the PC. To enable the PIP to function a DVI Input source must be selected. (Refer to the QUG for details on connections.)


- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button to highlight **Features**.
- 3** Press the **CURSOR RIGHT** button access the Features menu.
- 4** Press the **CURSOR DOWN** button until **PIP** is highlighted.
- 5** Press the **CURSOR RIGHT** button to enter the PIP menu. PIP Size will be highlighted.
- 6** Press the **CURSOR LEFT** or **CURSOR RIGHT** button to select the available PIP Size options including Off, On, Small, Medium, Large, or Side-by-Side.
- 7** Press the **CURSOR DOWN** button to highlight **Horizontal**.
- 8** Press the **CURSOR LEFT** or **CURSOR RIGHT** button to move the PIP screen horizontally to the desired position.
- 9** If you want to move the PIP screen vertically, press the **CURSOR DOWN** button to highlight **Vertical**.
- 10** Press the **CURSOR LEFT** or **CURSOR RIGHT** button to move the PIP screen up or down.
- 11** Press the **STATUS/EXIT** button to exit the menu from the screen.

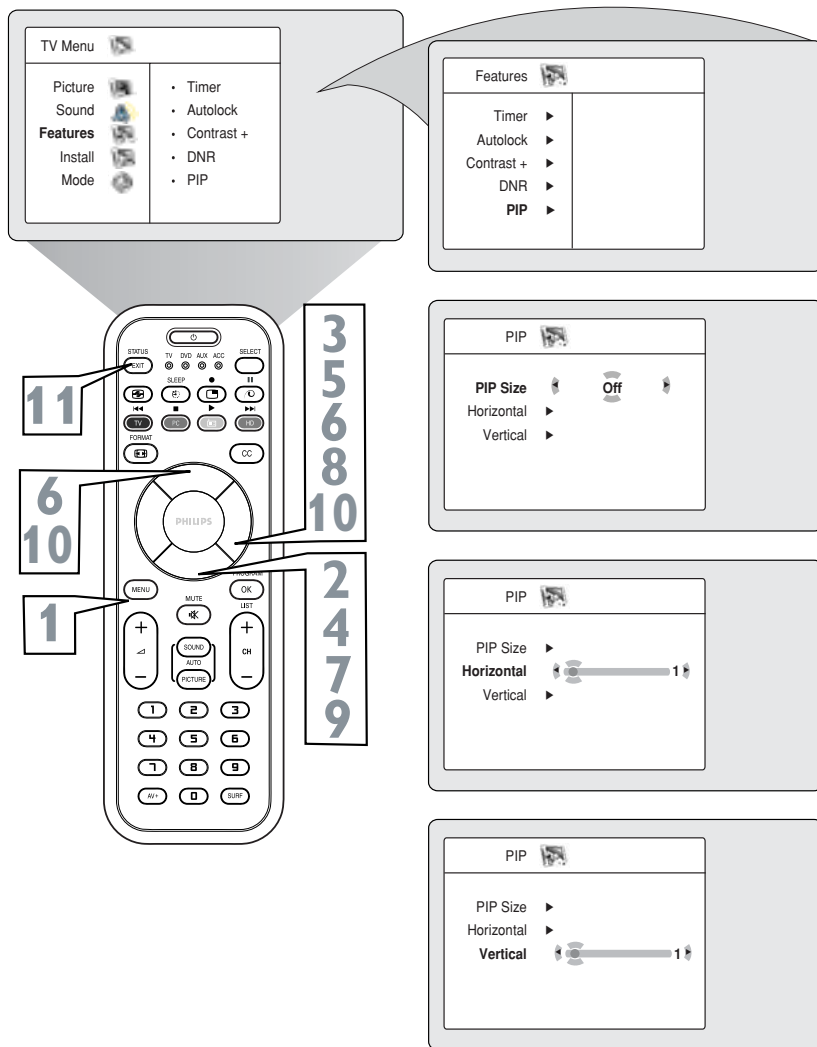


HELPFUL HINT

To turn off the PIP window, select PIP Size and select the Off option.

 NOTE: You can also access the PIP window by pressing the  button on the remote control.

Press  once to display the PIP screen.

Press  repeatedly to toggle through the various PIP screen sizes.




HOW TO USE THE MODE CONTROL

The Mode Control will allow you to use the TV into the TV, FM, HD, or PC Modes. Depending on how the TV will be used, these modes may have their own onscreen menu controls to optimize capability when used with computers, radios, or high-definition receivers.

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** to highlight **Mode**.
- 3** Press the **CURSOR RIGHT** to access the **Mode** menu.
- 4** Press the **CURSOR DOWN** button until the desired Mode (TV, FM Radio, PC, or HD) is highlighted.
- 5** After you have highlighted the desired mode is selected, press the **CURSOR RIGHT** button to enter the selected Mode.


NOTE: You can also press the dedicated button on the remote control to change the Mode.

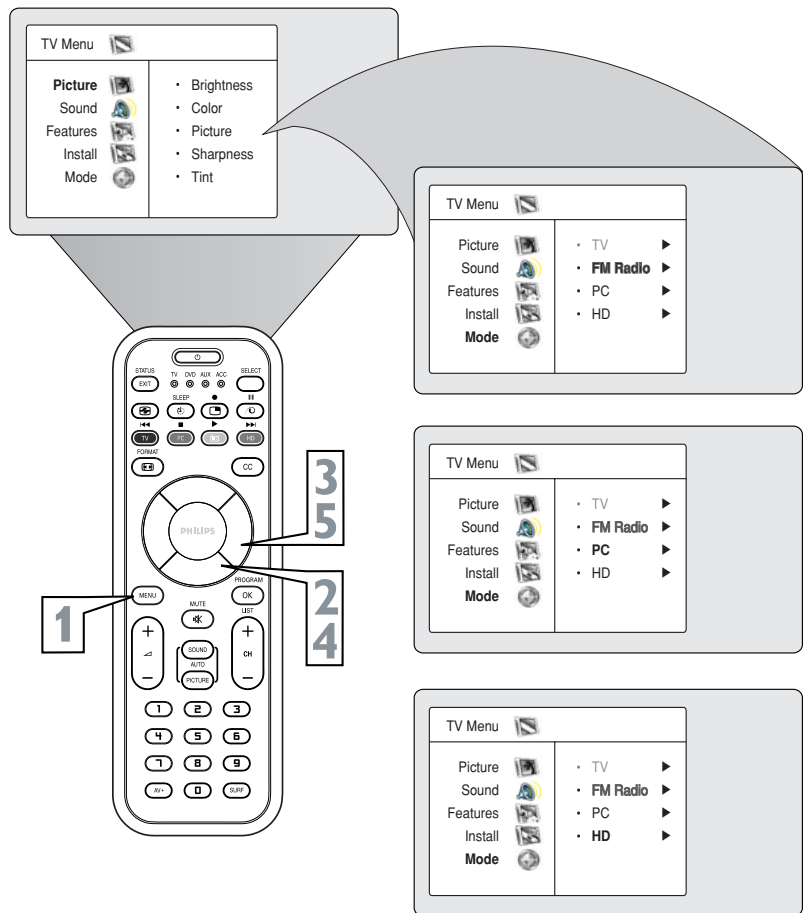

HOW TO USE THE FORMAT CONTROL

You can change the screen format size to match the type of program you're watching. Select the normal 4:3, Zoom 14:9, Zoom 16:9, Subtitle Zoom, Super Zoom, or Fullscreen.

- 1** Press the **FORMAT** button repeatedly to toggle the different format modes. You can select from normal 4:3, Zoom 14:9, Zoom 16:9, Subtitle Zoom, Super Zoom, or Fullscreen.

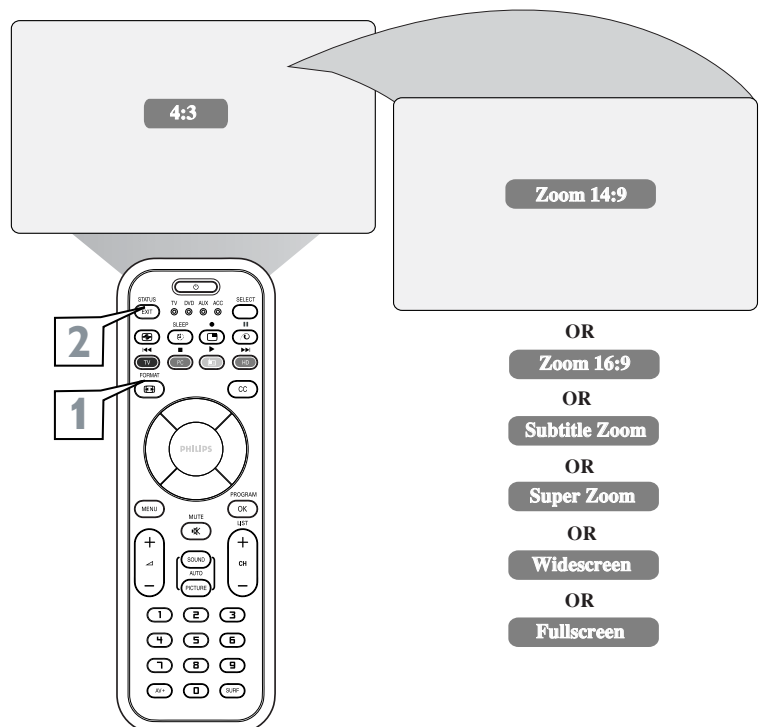

HOW TO USE THE CLOSED CAPTIONING CONTROL




Closed Captioning (CC) allows you to read the voice content of television programs on the TV screen. Designed to help the hearing impaired, this feature uses onscreen "text boxes" to show dialogue and conversations while the TV program is in progress.

1 Press the **CC** button on the remote control to select a caption mode: CC Off, CC1, CC2, or CC Mute if the TV station broadcasting on the channel is making Closed Captioning available. To turn the Closed Captioning off, select CC Off.

2 Press the **STATUS/EXIT** button to remove the menu from the screen.

HELPFUL HINT

NOTE : Not all TV programs and product commercials are broadcast with Closed Captioning (CC). Nor are all Closed Captioning MODEs necessarily being used by broadcast stations during the transmission of a program offering Closed Captioning. Refer to your area's TV program listings for the stations and times of shows being broadcast with Closed Captioning.

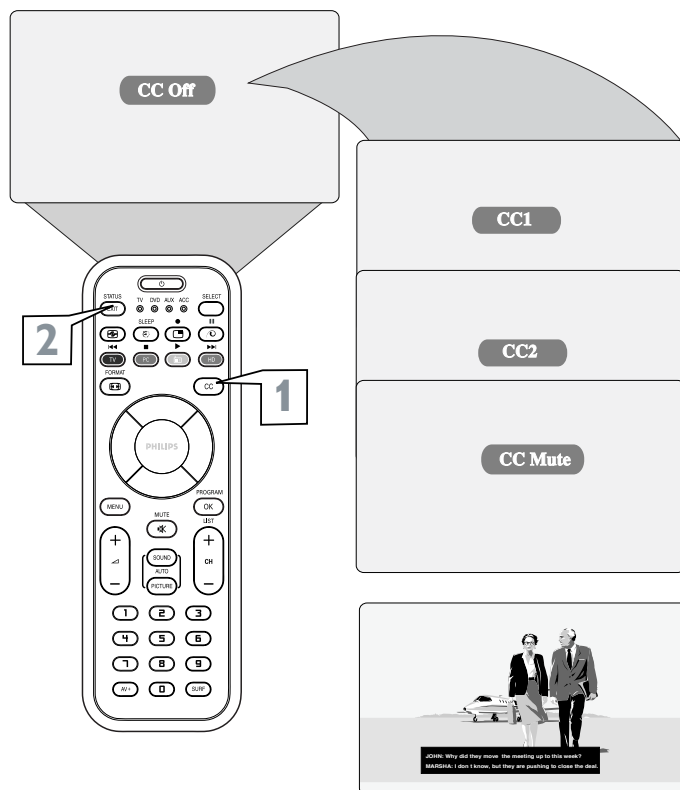

HOW TO USE THE SLEEPTIMER CONTROL



Have you ever fallen asleep in front of the TV, only to have it wake you up at two in the morning with a test pattern sound screeching in your ears? Well, your TV can enable you to avoid that discomfort by automatically turning itself off. With the Sleep timer feature, you can set a timer to automatically switch the TV off after a period of time you choose (15-minute increments up to 60 minutes, then 30-minute increments up to 90 minute increments, and 60-minute increments up to 240 minutes).


1 Press the **SLEEP** button on the remote control. The Sleep timer will appear in the lower part of the screen.

2 Within five seconds, press the **SLEEP** button repeatedly to pick the amount of time (15-minute increments up to 60 minutes, then 30-minute increments up to 90 minute increments, and 60-minute increments up to 240 minutes) before the TV will turn itself off.

An onscreen countdown will appear during the last minute before the TV shuts itself off.

HELPFUL HINT

To see how many minutes remain before the TV shuts itself off, press the STATUS/EXIT button. A Sleep timer setting can be cancelled by pressing any button during the last minute of the operation.

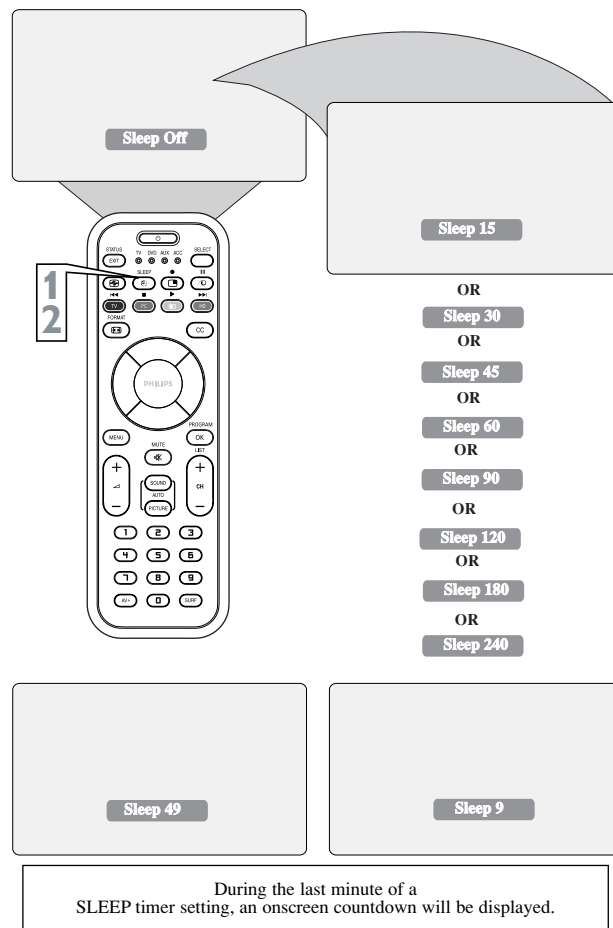




HOW TO USE THE PROGRAM LIST CONTROL

The Program List Control will allow you to quickly overview all the programmed channels that have been placed into the television's memory (see the Auto Programming section of this manual for more details). Program List will let you easily select the desired channels your looking for. Program List will display the channel number, the name of the channel if you have given it one, and whether it have AutoLock turn on or off.

- 1** Press the **PROGRAM LIST** button on the remote control to show the current list of installed channels (the current channel will be highlighted).
- 2** Press the **CURSOR UP** or **DOWN** buttons to scroll the list of channel, highlighting the one you want to activate.
- 3** Press the **CURSOR RIGHT** button to activate the channel. The TV will tune to that channel.
- 4** Press the **STATUS/EXIT** button to remove the menu from the screen.

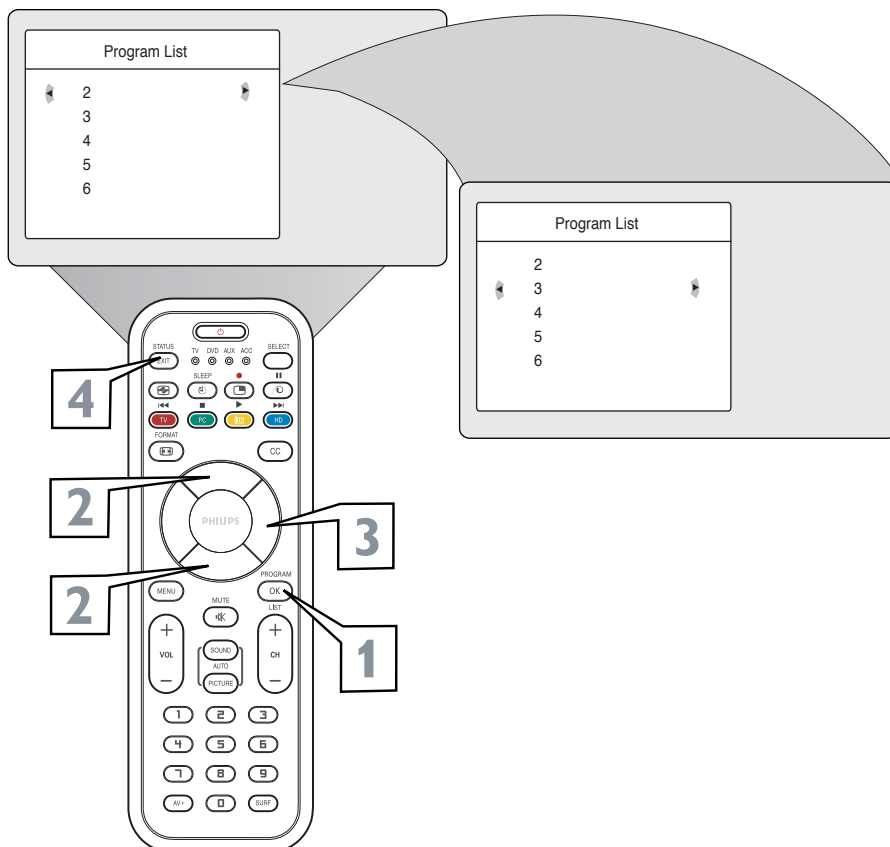


HOW TO SET THE ACTIVE CONTROL

The Active Control monitors and adjusts incoming video signals to help provide the best picture quality.

When you choose to turn the Active Control ON, the picture sharpness and noise reduction are controlled automatically. Active Control adjusts these picture settings continuously and automatically.

You have a choice of three modes: Active Control Off, Active Control On, or Active Control On with Sensor.

- 1** Press the **Active Control** button on the remote control to toggle the three options and select the desired option.
- 2** Press the **STATUS/EXIT** button to remove the menu from the screen.

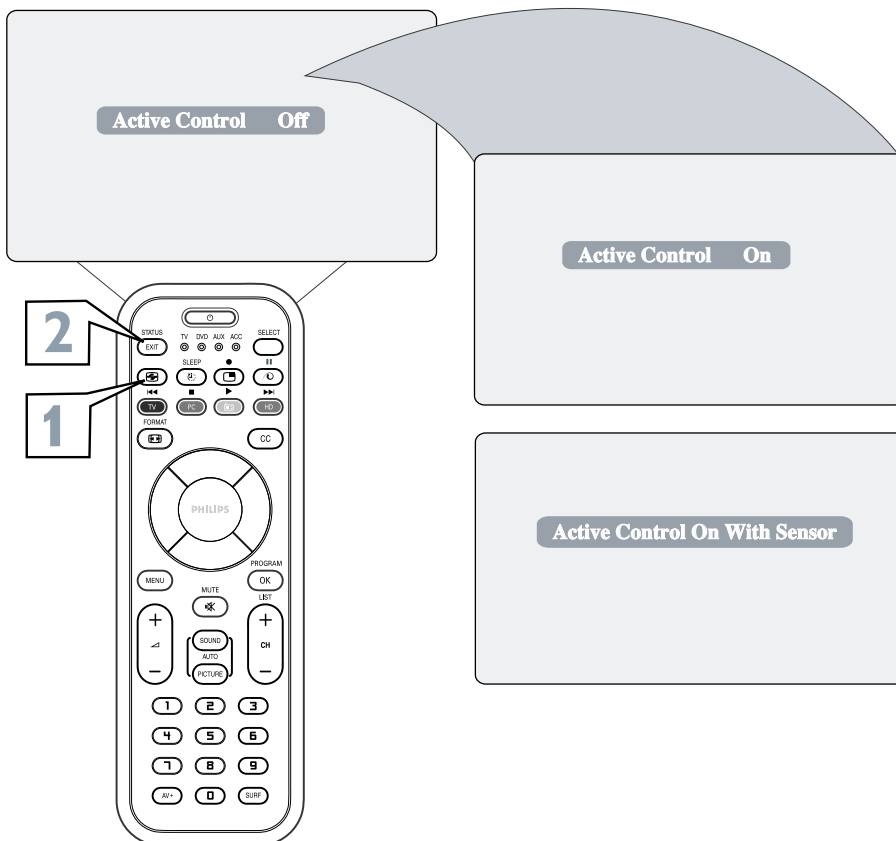

HOW TO USE THE SURF CONTROL




A list or series of previously viewed channels can be selected with the SURF button on your remote control. With this feature, you can easily switch between different TV channels that currently interest you. The SURF control allows you to set up to ten channels in its quick viewing list.

- 1** Press the CHANNEL(+) or (–) button (or the numbered buttons) to select a channel to add to the SURF list.
- 2** Press the SURF button on the remote control. The onscreen display may read, “SURF LIST EMPTY.” The number of the current channel will be shown with “ADD?” to the right.
- 3** While the SURF list message or the SURF channel list appears on the screen, press the CURSOR RIGHT button to add the present channel to the SURF list.
- 4** If you want to delete the present channel from the SURF list, press the CURSOR RIGHT button again.

Repeat steps 1 through 3 to add more channels (up to 10) to the SURF list.

HELPFUL HINT

Along with regularly programmed channels, the external video source connections can be added to the SURF list. This means that the external A/V Jacks and their channels can be added to your SURF list. Use the Source button to tune their channel and use the same steps described on this page to add those channels to the Surf list.

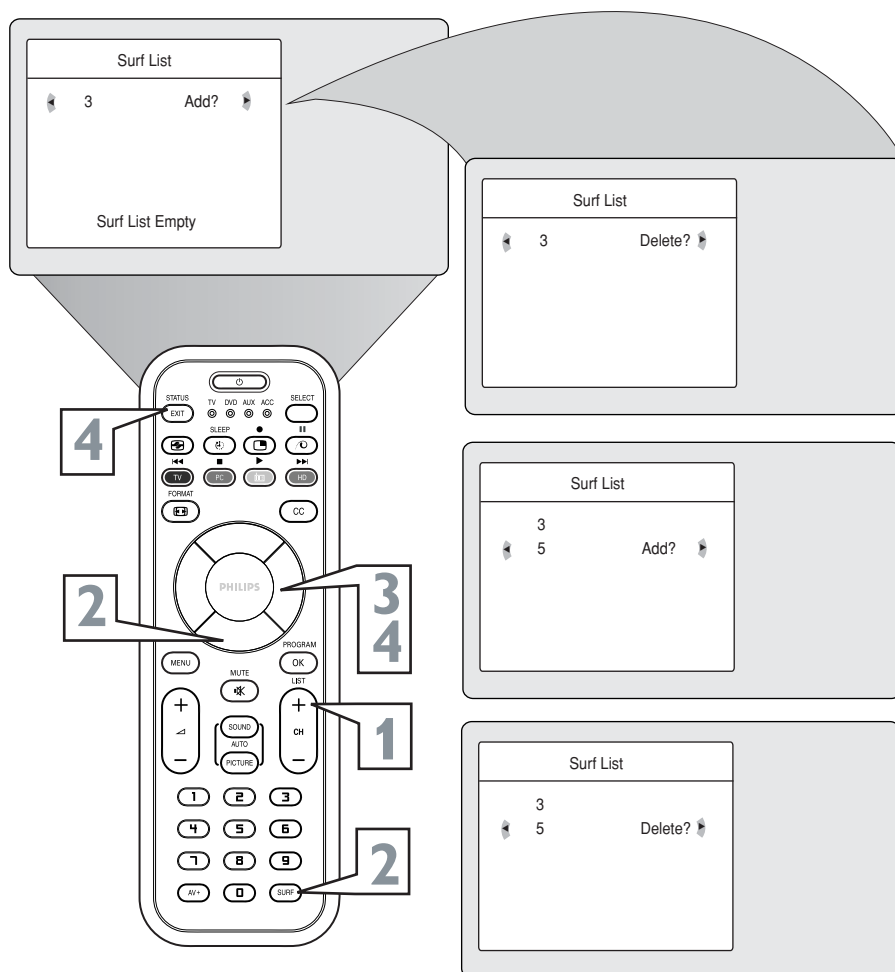


HOW TO USE THE PIXEL PLUS CONTROL



PixelPlus™ creates near high-definition (HD) performance inside the TV on the basis of a regular input signal. By doubling the number of lines and the number of pixels per line, PixelPlus™ enhances both regular broadcasts and DVD input for unparalleled sharpness and depth. You can view the difference in a regular broadcast signal and one enhanced with PixelPlus™ by following the steps below.

- 1** Press the Pixel Plus button on the remote control. A Pixel Plus demo will appear on the screen. The left hand side of the screen show the picture without Pixel Plus enhancement while the right side is shown with the Pixel Plus control On.
- 2** Press the Pixel Plus button on the remote control to remove the demo screen.

Note: You cannot turn Pixel Plus™ off, it is a feature of the TV. You can only see the difference in a signal with or without PixelPlus™.

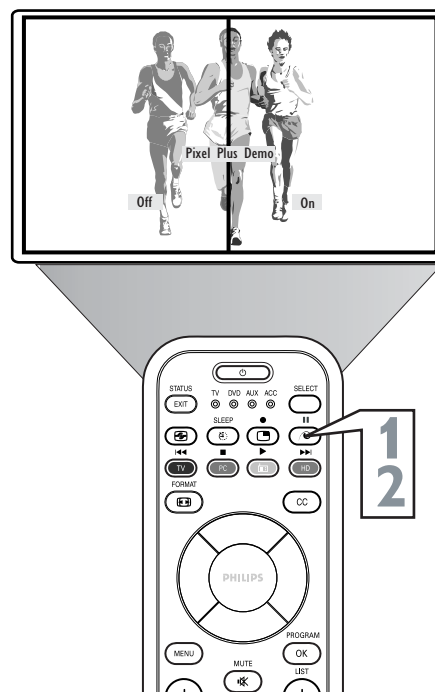




HOW TO USE THE AUTO PICTURE™ CONTROL

Whether you're watching a movie or a video game, your TV has automatic video control settings that will match with your current program source or content. AutoPicture™ quickly resets your TV's video controls for a number of different types of programs and viewing conditions that you may have in your home. The Movies, Sports, Weak Signal, and Multimedia AutoPicture™ controls have been preset at the factory to automatically adjust the TV's brightness, color, picture, sharpness, tint, and color temperature levels. The Personal AutoPicture™ settings are the ones that you made through the PICTURE options within the onscreen menu

- 1** Press the **PICTURE** button on the remote control. The current AutoPicture™ setting will appear in the middle of the screen.
- 2** Press the **PICTURE** button repeatedly to select either Personal, Movies, Sports, Weak Signal, or Multimedia picture settings.

NOTE: The Personal setting and the Picture options within the onscreen menu are the same. This is the only option in AutoPicture™ that can be changed. To adjust these settings, use the Picture options within the onscreen menu. All other settings are set up at the factory during production and cannot be adjusted.

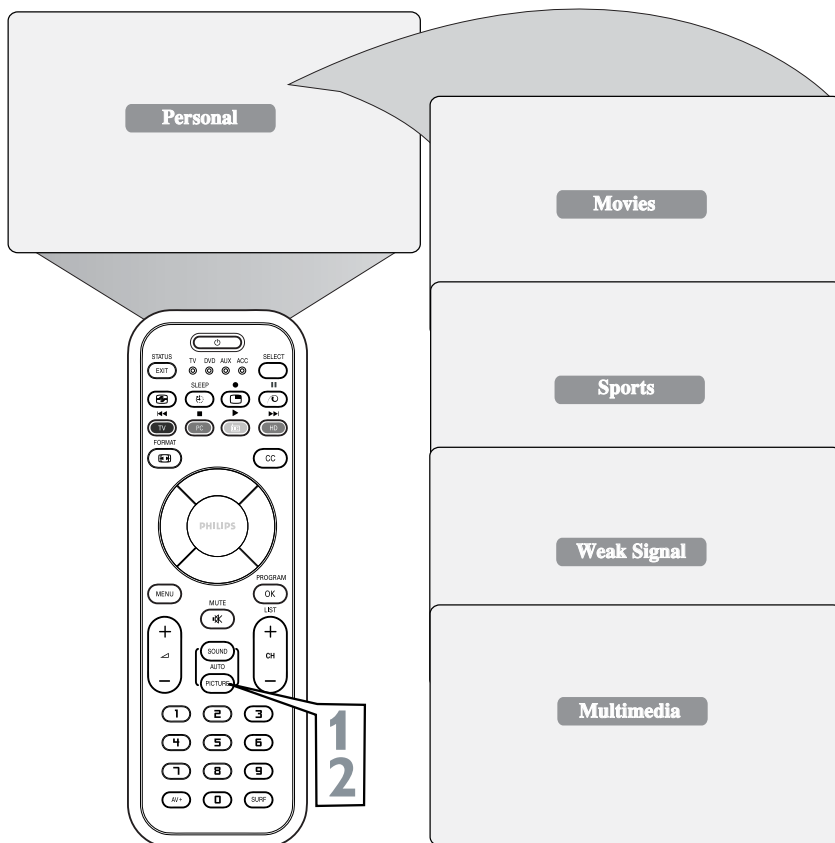


HOW TO USE THE AUTO SOUND™ CONTROL

AutoSound™ allows you to select from three factory-set controls and a personal control that you set according to your own preferences through the onscreen Sound menu. The three factory-set controls (Voice, Music, and Theatre) enable you to tailor the TV sound so as to enhance the particular program you are watching. Follow these steps to select any of the options.

- 1** Press the **SOUND** button on the remote control. The current AutoSound™ setting will appear in the middle of the screen.
- 2** Press the **SOUND** button repeatedly to toggle among the four settings: Personal, Voice, Music, or Theatre.

Remember, only the Personal control can be changed by the viewer. This changes the settings in the main onscreen menu's Sound controls

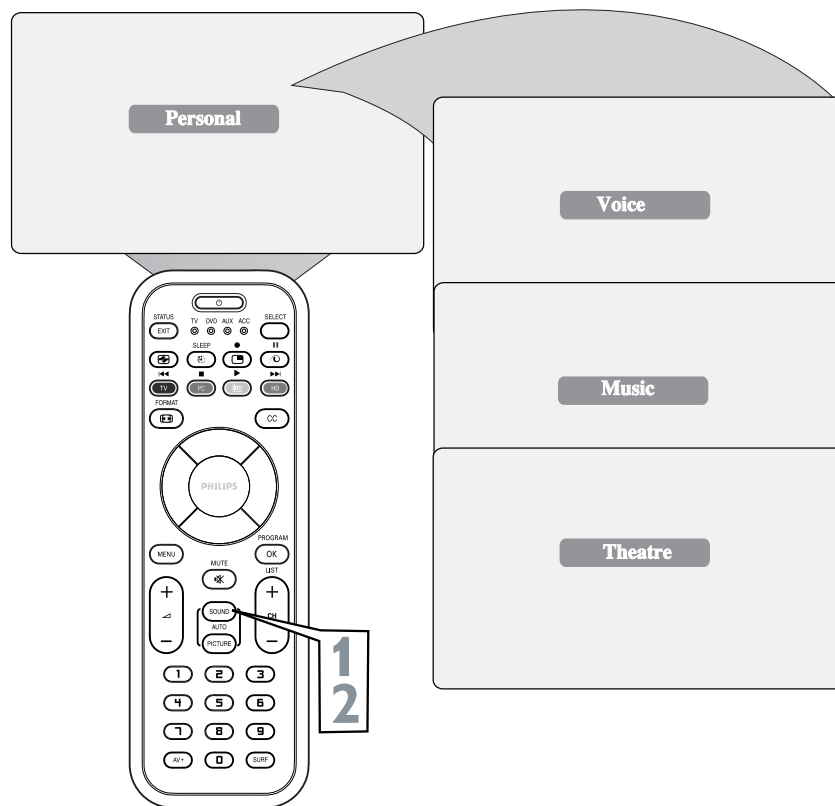

HELPFUL HINT

AutoSound™ works only with the programs coming through the ANTENNA/CABLE (ANT) input on the rear of the TV (RF audio). It will not control the sound levels for the external connections.

REMOTE CONTROL ACCESSORY DEVICE RELATED BUTTONS



POWER BUTTON

Press to turn the accessory device ON and OFF.

RECORD BUTTON

Press the record button to begin recording.

REWIND BUTTON


Press to rewind tapes. For some VCR s , the STOP button may have to be pressed first, then REWIND. May be used to scan back through chapters or titles on DVD movies.

STOP BUTTON

Press to stop the motion of a tape or to stop the playback of a DVD.

NUMBER BUTTON

Press buttons for direct channel selections. May also be used for direct number entries in certain onscreen menu feature settings.

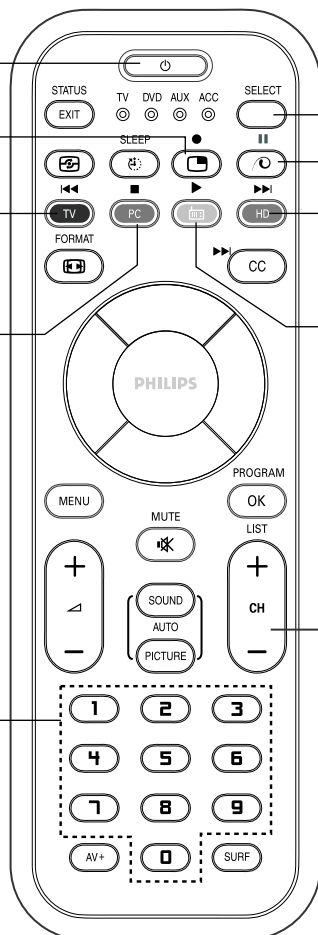

SELECT BUTTON

Select the correct mode to send remote commands to the accessory device. A light will appear above the selected mode.

PAUSE BUTTON

Press to temporarily stop the tape during a playback or recording or pause the playback of a DVD. Press again to release Pause.

FAST FORWARD BUTTON

Press to rapidly advance a tape or DVD. For some accessory devices, you may need to press the STOP button first, then the FAST FORWARD button. In playback mode, hold the button down to view the picture moving rapidly in the forward direction.

PLAY BUTTON

Press to begin playback of a video tape, DVD, etc.

CHANNEL + / - BUTTONS

Press to scan up or down through the channel numbers if your accessory device will change channels.

HELPFUL HINT

The buttons on the remote will not operate your accessory device if those features are not found on your accessory's remote control.

Note : All functions (particularly Search, Rewind, Fast Forward, etc.) will operate the same as with the original remote control provided with your accessory device.



HOW TO USE THE REMOTE CONTROL WITH PHILIPS ACCESSORY DEVICES

Your remote control is set to work your TV and many infrared remote (IR) control VCRs, Cable Boxes, Satellite Systems, DBS, DVD, etc. However, an easy one time step may be necessary before the remote will work your VCR.

This Direct Access Method is used for most of Philips accessory devices and not for use with other accessory devices brands.

1 Press the **TV/DVD/AUX/ACC SELECT** button repeatedly to select the desired mode.

2 Point the remote control at the device and press the **POWER** button.

Does the remote turn the device **ON**?


If YES, stop and try other accessory device related function buttons on the remote. If they also work the device, then the remote is ready and no further steps are needed.

If NO, your accessory device does not work with this method. You have to use the accessory device remote control.

HELPFUL HINT

The buttons on the remote will not operate your accessory device if those features are not found on your accessory s remote control.

Note : All functions (particularly Search, Rewind, Fast Forward, etc.) will operate the same as with the original remote control provided with your accessory device.

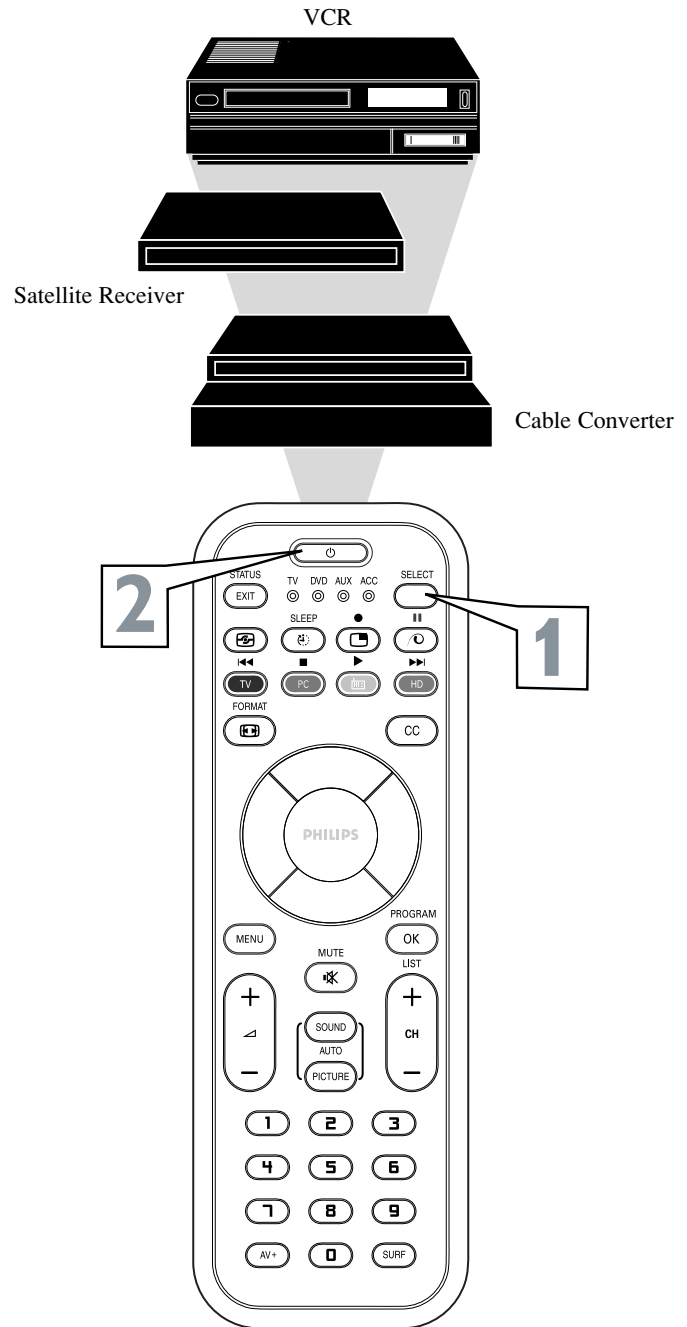

HOW TO PROGRAM THE UNIVERSAL CODE WITH OTHER ACCESSORY DEVICES



You can also set up the remote control for use with other accessory device brands.

Follow the steps 1 - 4 to program the universal code.

1 Press the **SELECT** button repeatedly until TV mode is selected.


2 While in TV mode, press the **SELECT** and the **POWER** button simultaneously. The **ACC LED** will blink once.

3 Enter a **digit** to select the device.
Enter **digit 2** for **Cable/SAT**,
digit 3 for **VCR**
digit 4 for **DVD**

The **ACC LED** will blink once if the correct digit is pressed for the selected device.

4 Enter a **four-digit code** from the Remote Control Direct Entry Codes list. (See pages 30 - 32).

5 Press the **TV/DVD/AUX/ACC SELECT** button repeatedly to select the **ACC** mode. Your remote control can now be used with your accessory device.

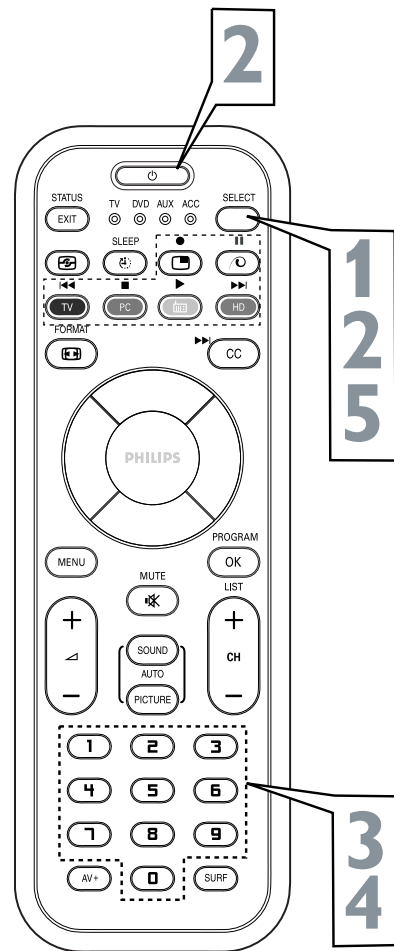

HELPFUL HINT

IMPORTANT

- When programming the universal code, TV mode must be selected.
- If more than four digits are entered, the remote control will only retain the first four digits.
- If the wrong four-digit code is keyed in, you have to repeat Steps 1 - 4 again.
- After keying a digit, you are only allowed a thirty seconds time limit to key your next digit. If you exceed the time limit, you have to repeat Steps 1 - 4 again.



REMOTE CONTROL DIRECT ENTRY CODES

VCR CODES

Admiral	2027, 2052	Electroponic	2017	Lloyd's	2001, 2051
Adventura	2001	Emerex	2012	Loewe	2004, 2005, 2017, 2035
Aiko	2059	Emerson	2001, 2002, 2017, 2023, 2040, 2046, 2051, 2052, 2059, 2078, 2083	Logik	2004, 2034, 2057
Aiwa	2001, 2017, 2062, 2070, 2072	ESC	2057, 2059	Luxor	2023, 2025, 2027, 2037, 2038
Akai	2021, 2029, 2038, 2060, 2063	Ferguson	2021, 2039, 2064, 2065	LXI	2017
Akiba	2034	Fidelity	2001	M Electronic	2001
Alba	2011, 2034, 2052, 2059, 2063, 2072	Finlandia	2035, 2037	Magnasonic	2059
Ambassador	2011	Finlux	2001, 2022, 2035, 2037	Magnavox	2001, 2015, 2019, 2035
American Action	2059	Firstline	2017, 2023, 2024, 2034, 2052	Magnin	2057
American High	2015	Fisher	2025, 2026, 2030, 2037	Manesth	2024, 2034
Amstrad	2001, 2059, 2067, 2068	Frontech	2011	Marantz	2003, 2005, 2015, 2035
Anam	2017, 2042, 2054, 2057, 2059, 2082, 2084	Fuji	2015	Marta	2017
Anam National	2042, 2054, 2087	Funai	2001	Matsui	2004, 2016, 2036, 2052, 2070, 2072
Anitech	2034	Garrard	2001	Matsushita	2015, 2042, 2055
Asa	2017, 2035	GE	2015, 2027, 2032, 2057	Mei	2015
Asha	2057	GEC	2035	Melectronic	2018
Asuka	2017	General	2011	Memorex	2001, 2015, 2017, 2019, 2025, 2026, 2027, 2037, 2052, 2057, 2062, 2085, 2087, 2088
Audiovox	2017	Go Video	2077, 2081	Memphis	2034
Baird	2001, 2021, 2037, 2039	Goldhand	2034	Metz	2003, 2005, 2017, 2042, 2048, 2055, 2069
Basic Line	2011, 2034, 2059	Goldstar	2017, 2018, 2053, 2079	MGA	2023, 2057
Beaumark	2057	Goodmans	2001, 2017, 2034, 2059, 2075	MGN Technology	2057
Bell & Howell	2037	Gradiente	2001, 2008	Mincrva	2048
Blaupunkt	2003, 2005, 2010, 2014, 2041, 2042, 2048, 2054, 2055, 2075	Graetz	2005, 2021, 2037, 2057	Minerva	2005, 2010, 2048
Brandt	2047, 2064, 2065	Granada	2025, 2035, 2037	Minolta	2022
Brandt Electronic	2021	Grandin	2001, 2017, 2034	Mitsubishi	2023, 2027, 2033, 2035, 2045
Broksonic	2002, 2040, 2046, 2052, 2078	Grundig	2003, 2005, 2007, 2010, 2034, 2035, 2048, 2050, 2054, 2069, 2071, 2075	Motorola	2015, 2027
Bush	2034, 2052, 2059, 2072	Hanseatic	2017	MTC	2001, 2057
Calix	2017	Harley Davidson	2001	Multitech	2001, 2034
Canon	2015	Harman/Kardon	2018, 2035	Murphy	2001
Capehart	2011	Harwood	2034	NAD	2031
Carver	2035	HCM	2034	National	2054
Catron	2011	Headquarter	2025	NEC	2018, 2020, 2021, 2033, 2037
CCE	2034, 2059	Hinari	2004, 2034, 2057, 2072	Neckermann	2035
CGE	2001	Hi-Q	2026	Nesco	2034
Cimline	2034	Hitachi	2001, 2004, 2021, 2022, 2043, 2057	Nikko	2017
Cineral	2059	Hughes Network Systems	2022	Nikon	2014
Citizen	2017, 2059	Hypson	2034	Noblex	2057
Clatronic	2011	Imperial	2001	Nokia	2025, 2037, 2038, 2057
Colt	2034	Ingersol	2004	Nokia	2021, 2025, 2037, 2038, 2057
Combitech	2072	Interfunk	2035	Nordmende	2021, 2061, 2064, 2065, 2074
Condor	2011	ITT	2005, 2021, 2025, 2037, 2038, 2057, 2074	Oceanic	2001, 2021
Craig	2017, 2026, 2034, 2057, 2058	ITV	2017, 2059	Okano	2063, 2070
Crown	2011, 2034, 2059	Jensen	2021	Olympus	2015, 2054
Curtis Mathes	2015, 2021, 2032, 2042	JVC	2008, 2021, 2033, 2049, 2050, 2074, 2080	Optimus	2017, 2027, 2031, 2037, 2042, 2077, 2086, 2087, 2088
Cybernex	2057	Kaisui	2034	Orion	2002, 2004, 2016, 2036, 2046, 2052, 2070, 2072, 2078
Cyrus	2035	KEC	2017, 2059	Osaki	2001, 2017, 2034
Daewoo	2011, 2024, 2025, 2059, 2083	Kendo	2038, 2052	Otto Versand	2035
Dansai	2034	Kenwood	2018, 2021, 2033	Palladium	2005, 2017, 2021, 2034
Daytron	2011	KLH	2034	Panasonic	2015, 2042, 2053, 2054, 2055, 2087
De Graaf	2022, 2043	Kodak	2015, 2017	Pathe Cinema	2016
Decca	2001, 2035	Korpel	2034	Pathe Marconi	2021
Denon	2022	Layco	2034	Penny	2015, 2017, 2018, 2020, 2022, 2057
Dual	2021	Lenco	2059		
Dumont	2001, 2035, 2037	LG	2079		
Dynatech	2001				
Elbe	2018				
Elcatech	2034				
Electrohome	2017				

REMOTE CONTROL DIRECT ENTRY CODES



VCR CODES (continued)

Pentax2022	Sanky2019, 2027	TEC2011
Perdio2001	Sansui2001, 2021, 2033,	Technics2015, 2042, 2054
Philco2015, 2018, 2052, 2078	2052, 2058, 2078	Teknika2001, 2015, 2007, 2017
Philips2015, 2035 (DEFAULT VCR),	Sanyo2025, 2026, 2037, 2057	Teleavia2021
2074, 2075	Saville2072	Telefunken	2021, 2047, 2058, 2064, 2074
Phonola2035	SBR 2035		Tenosal2034
Pilot2017	Schaub Lorenz2001, 2005, 2021, 2037	Tensai2001, 2066
Pioneer2031, 2033, 2035	Schneider2001, 2034, 2035	Thomas2001
Portland2011	Scott2023, 2024, 2040, 2046	Thomson2021, 2064, 2074
Profex2066	Sears2001, 2015, 2017,	Thorn2016, 2021, 2037
Profitronic2057	2022, 2025, 2026, 2037	TMK2051, 2057
Proline2001	SEG2057, 2066	Toshiba2021, 2023, 2024, 2035, 2074
Proscan2032	SEI2004, 2035	Totelevision2017, 2057
Protec2034	Seleco2021	Towada2066
Pulsar2019	Semp2024	Uher2057
Pye2035	Sentra2011	Unitech2057
Quarter2025	Sharp2027, 2073	Universum	...2001, 2006, 2010, 2017,
Quartz2025	Shintom2034, 2037	2035, 2038, 2048, 2057, 2067
Quasar2015, 2042, 2087	Shogun2057	Vector2024
Quelle2035	Shorai2004	Vector Research2018, 2020
Radio Shack2001, 2085	Silva2017	Victor2008, 2021, 2033
Radiola2035	Singer2024, 2034	Video Concepts2020, 2024
Radix2017	Sinudyne2004, 2035	Videosonic2057
RCA 2015, 2022, 2027, 2032, 2038, 2057		Solavox2011	Wards2001, 2015, 2022, 2026,
Realistic2001, 2015, 2017,	Sonorlor2025	2027, 2032, 2034, 2035, 2057
2025, 2026, 2027, 2037	Sontec2017	White Westinghouse2052, 2059
REX2021, 2074	Sony	...2001, 2012, 2013, 2014, 2015	XR-10002001
RFT2075	STS2022	XR-10012015
Ricoh2014	Sunkai2070	XR-10022034
Roadstar2017, 2034, 2057, 2059	Sunstar2001	Yamaha2018
Runco2019	Suntronic2001	Yamishi2034
Saba2021, 2049, 2050, 2061, 2	Sylvania2001, 2015, 2023, 2035	Yokan2034
064, 2065, 2074	Symphonic2001	Yoko2011, 2057
Saisho2004, 2016, 2036, 2052	Tashiko2001	Zenith	...2001, 2014, 2019, 2052, 2078
Salora2023, 2025, 2038	Tatung2001, 2021, 2035		
Samsung2024, 2057, 2076, 2077	Teac2001, 2021		

DIGITAL VIDEO DISC CODES

Akai5316	Panasonic5301, 5322	Sony5306
Harman/Kardon5314	Philips5302, 5308 (DEFAULT DVD)	Technics5301
JVC5311, 5318	Pioneer5305, 5312, 5321	Theta Digital5312
Kenwood5307	Proscan5304	Thomson5310
Magnavox5302	RCA5304	Toshiba5302
Mitsubishi5303	Samsung5313	Yamaha5301, 5309
Onkyo5302, 5317, 5319	Sharp5320		

CABLE CODES

ABC3002, 3003, 3004, 3006, 3008	Decsat3027	Jerrold3002, 3004, 3005, 3006,
Andover3037	Everquesst3007	3007, 3020, 3031, 3046
Bell & Howell3006	Filmnet3028	LG Alps3044
Birmingham Cable Communication	France Telecom3030	Memorex3001
3020	GEC3011	Mnet3009, 3028
British Telecom3002, 3012	Gemini3007	Now3041
Cabletime3016, 3019, 3025, 3029	General Instrument3004, 3020,	Oak3009
Clyde3011	3031, 3046	Pacific3039
Contec3009	Goldstar3014, 3047	Panasonic3001, 3013
Cryptovision3038	Grundig3035	Paragon3001
Daehan3043	Hitachi3004	Pioneer3014, 3036
Daeryung3003	Jasco3007	Pulsar3001



REMOTE CONTROL DIRECT ENTRY CODES

CABLE CODES (continued)

PVP Stereo Visual Matrix	3002	Signal	3007	Toshiba	3001
Quasar	3001	Signature	3004	Tudi	3023
Radio Shack	3007	Starcom	3002, 3007	Tusa	3007
Rembrandt	3004	Stargate	3007	United Cable	3002
Runco	3001	Starquest	3007	Videoway	3017
Salora	3026	STS	3015	Visicable+	3033
Samsung	3014, 3040	Taihan	3043	Westminster	3012
Satbox	3024	Tele+1	3028	Wolsey Gene	3037
Scientific	3003, 3032, 3049	Teleservice	3022	Zenith	3001, 3034
Scientific Atlanta	3003, 3008, 3021	Tocom	3005		
Seawoo	3045	Tongkook 3	042, 3048		

SATELLITE CODES

Absat	4006	Grundig	4008, 4010, 4048	Pioneer	4021, 4059
Alba	4029, 4034, 4037, 4052	G-sat	4009	Planet	4061
Aldes	4019	Hinari	4009	Promax	4037
Amstrad	4003, 4016, 4025, 4038, 4039, 4042	Hirschmann	4008, 4032, 4039, 4040, 4049	Prosat	4019
Ankard	4013, 4019, 4030, 4044	Hitachi	4037	Quadral	4029, 4044
Anttron	4009, 4034	Houston	4053	Radiola	4011
Armstrong	4015	Huth	4013, 4015, 4019, 4026	Radix	4031, 4064
AST	4027	Intervision	4050	RFT	4011, 4013, 4019
Astra	4005	Invideo	4061	Saba	4023, 4045
Astro	4008, 4039, 4045	ITT	4005	Sabre	4037
Avalon	4031	Johansson	4022	Sagem	4056
Axis	4030, 4046	JVC	4048	Salora	4005
Beko	4010	Kathrein	4004, 4006, 4008, 4011, 4035, 4041	SAT	4027, 4038
Best	4030	Kreiselmeier	4008	Satcom	4026, 4051
Blaupunkt	4008	Kyostar	4034	Satec	4009
Boca	4015, 4043	La Sat	4043, 4045	Satmaster	4026
Brain Wave	4022	Lenco	4034	Satpartner	4022, 4034, 4040, 4045
British Sky Broadcasting	4058	Lennox	4050	Schwaiger	4009, 4041
BT	4053	Lupus	4030	Seemann	4031, 4046
Bush	4002	Luxor	4005, 4049	SEG	4030, 4034
Cambridge	4024	Manhattan	4037, 4045, 4050	Siemens	4008
Canal Satellite	4059	Marantz	4011	Skymaster	4019, 4044, 4051
Canal+	4059	Maspro	4004, 4023	Sony	4017, 4018
Channel Master	4029	Matsui	4024, 4048	Strong	4062
CNT	4045	Mediamarkt	4015	Sunstar	4043
Comlink	4019	Mediasat	4059	Tantec	4023, 4037
Connexions	4031	Minerva	4048	Techniland	4026
Crown	4015	Morgan's	4015, 4043	Technisat	4001, 4039
Cyrus	4011	Navex	4022	Telefunken	4034
D-Box	4054	Neuhaus	4039	Teleka	4015, 4052
DDC	4029	Neusat	4057	Telesat	4051
DNT	4011, 4031	Newhaus	4013	Thomson	4037, 4059
Echostar	4031, 4036, 4061	Nokia	4005, 4032, 4037, 4049, 4054, 4063	Tonna	4026, 4053
Emanon	4034	Nordmende	4029	TPS	4056
Ferguson	4002, 4009, 4010, 4023	Orbitech	4039	Triad	4027
Fidelity	4016	Oxford	4024	Triasat	4040
Finlux	4005, 4024, 4032, 4037	Pace	4002, 4009, 4014, 4023, 4037, 4055, 4058	Unitor	4022
Fracarro	4061	Palladium	4048	Universum	4008, 4049
Freecom	4034	Palsat	4039	Ventana	4011
FTE Humax	4060	Panda	4037	Vortec	4034
Fube	4030, 4031, 4034	Philips	4007, 4011, 4020, 4037, 4048, 4059	Vtech	4027
Galaxis	4019, 4057, 4060	Phonotrend	4019, 4050	Winersat	4022
General Instrument	4012			Wisi	4008, 4027, 4031, 4037
Gold Box	4059			Xcom Multimedia	4065
Gooding	4048			Xsat	4006, 4065
Goodmans	4010			Zehnder	4033, 4045


SETTING UP THE FM MODE (FM RADIO)



MODE SELECT CONTROLS

The Mode options allow you to move to other operating modes within the TV. When in the FM Radio Mode, choose from TV or PC Modes.


- 1** If in the FM Radio mode, press the **MENU** button on the remote control to display the FM Radio Mode onscreen menu.
- 2** Press the **CURSOR DOWN** button until **Mode** is highlighted.
- 3** Press the **CURSOR RIGHT** button to access the TV, PC or HD mode.
- 4** Press the **CURSOR UP** or **DOWN** buttons to choose **TV**, **PC**, or **HD**.
TV - This will switch the TV back to the TV Mode of operation.
PC - This control will switch the TV to the PC Mode of operation. Note a PC signal must be present for this to work, or the TV will go into standby mode.
- 5** Press the **CURSOR RIGHT** button to activate the selected control and change to the highlighted mode.
- 6** Press the **STATUS/EXIT** button to remove the onscreen menu from the TV screen when finished.

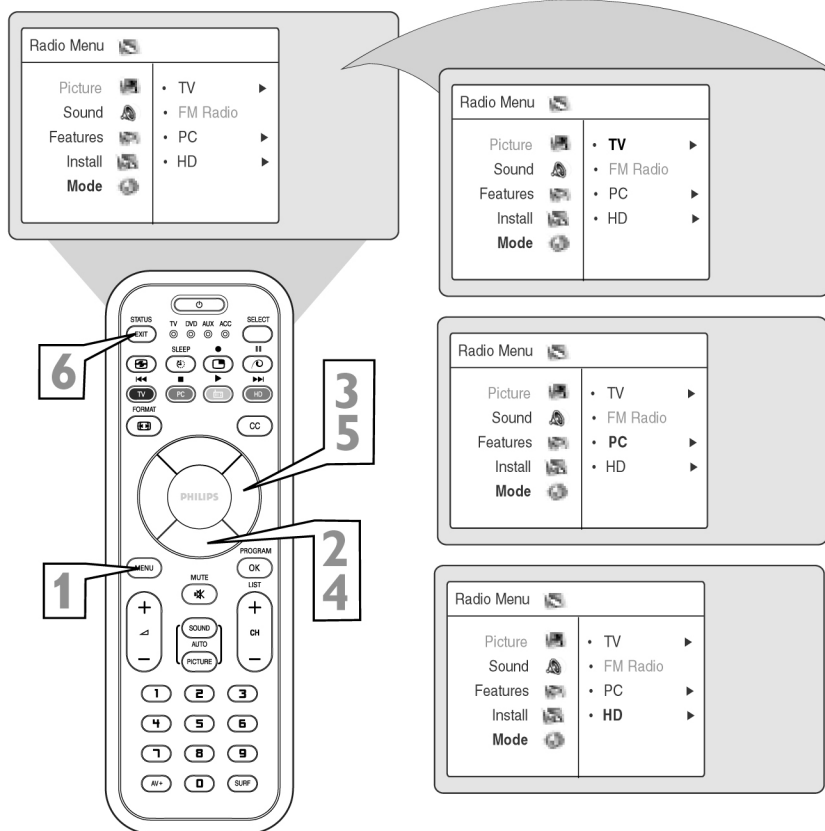

INSTALL CONTROLS

This TV also provides you with an FM Radio. An FM Radio signal must be connected to the FM Antenna 75 ohm Jack located on the bottom of the TV

- 1** To enter the FM Mode, press the **RADIO** button on the remote control. The FM Mode has its own onscreen menu options.
- 2** Press the **MENU** button on the remote control to display the FM Mode onscreen menu.
- 3** Press the **CURSOR RIGHT** button on the remote control to access the **Install** menu.
- 4** Press the **CURSOR UP** or **DOWN** buttons to scroll through the available Install options. These options include: **Language**, **Auto Program** or **Manual Program**.
LANGUAGE - Choose to view the onscreen menu in English, French or Spanish.
AUTO PROGRAM - The Auto Program control will search the FM antenna signal and store any FM channel it finds in the TV's memory.
MANUAL PROGRAM - This control will allow you to manually tune any available FM signals.
- 5** Press the **CURSOR RIGHT** button to adjust or select items within the highlighted feature sub-menu.
- 6** Press the **STATUS/EXIT** button to remove the onscreen menu from the TV screen when finished. Or, let the display time out and the menu will disappear after a few seconds.

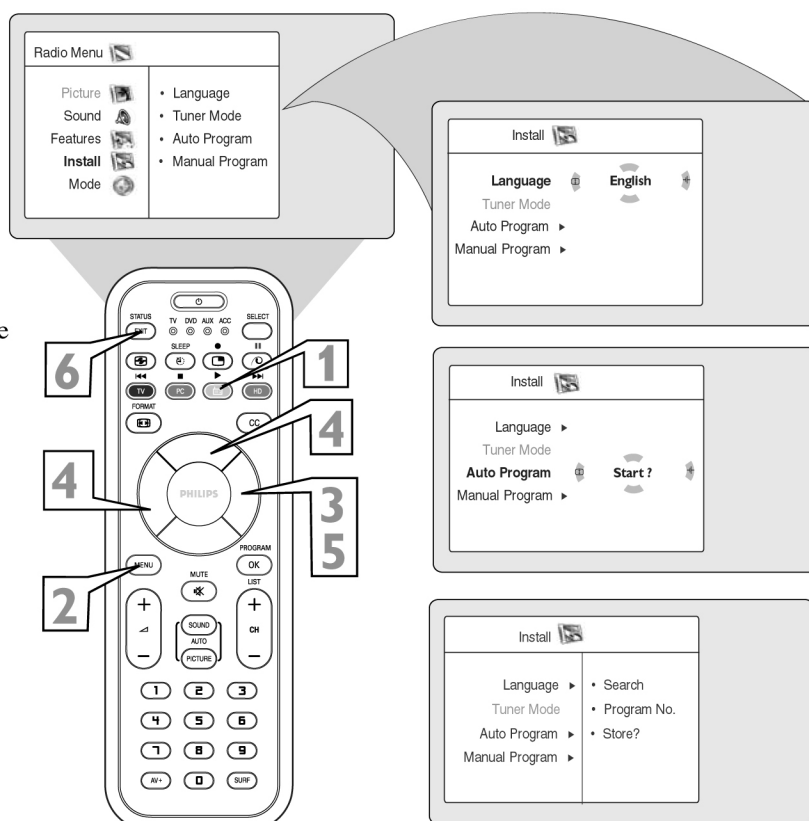



SETTING UP THE FM MODE (FM RADIO)

FM RADIO TIMER CONTROLS

Your TV or FM Radio comes with an onscreen clock. The FM Radio can also be set to turn on or off at a specific time and tune to a specific channel when it powers itself on.

- 1 Press the **MENU** button on the remote control to show the onscreen menu.
- 2 Press the **CURSOR DOWN** button to highlight **Features**.
- 3 Press the **CURSOR RIGHT** button to enter the Features menu.
- 4 Press the **CURSOR UP** or **CURSOR DOWN** button to highlight one of the Timer controls. These controls are **Time**, **Start Time**, **Stop Time**, **Program No.**, **Activate**, or **Display**.
- 5 Press the **CURSOR RIGHT** or **CURSOR LEFT** button to make adjustments or to toggle the On or Off options.

Time: Enter the current time using the Numbered buttons. Use the **CURSOR RIGHT** to move to the AM/PM slot and use the **CURSOR LEFT** or **CURSOR RIGHT** buttons to toggle the AM and PM setting.

Start Time: Use the numbered buttons to enter the time you want the TV to turn itself On. Use the **CURSOR RIGHT** and **CURSOR LEFT** buttons to toggle the AM and PM setting.


Stop Time: Use the numbered buttons to enter the time you want the TV to turn itself Off. Use the **CURSOR RIGHT** and **CURSOR LEFT** buttons to toggle the AM and PM setting.

Program No.: Use the **NUMBERED** buttons or the **CH +** or **CH -** buttons to enter the desired start-up channel. You can also press the **CURSOR RIGHT** or **CURSOR LEFT** buttons to enter the desired start-up channel.

Activate: Set the timer to turn itself On (Once or Daily) or Off. Press the **CURSOR RIGHT** and **CURSOR LEFT** buttons to select Once, Daily, or Off.

Display: Press the **CURSOR RIGHT** or **CURSOR LEFT** to toggle between On or Off. If On is selected, the time will be displayed all the time when the TV is on. When Off is selected, the time will only appear when the **STATUS/EXIT** button is pressed.

- 6 Press the **STATUS/EXIT** button to remove the menu from the screen.

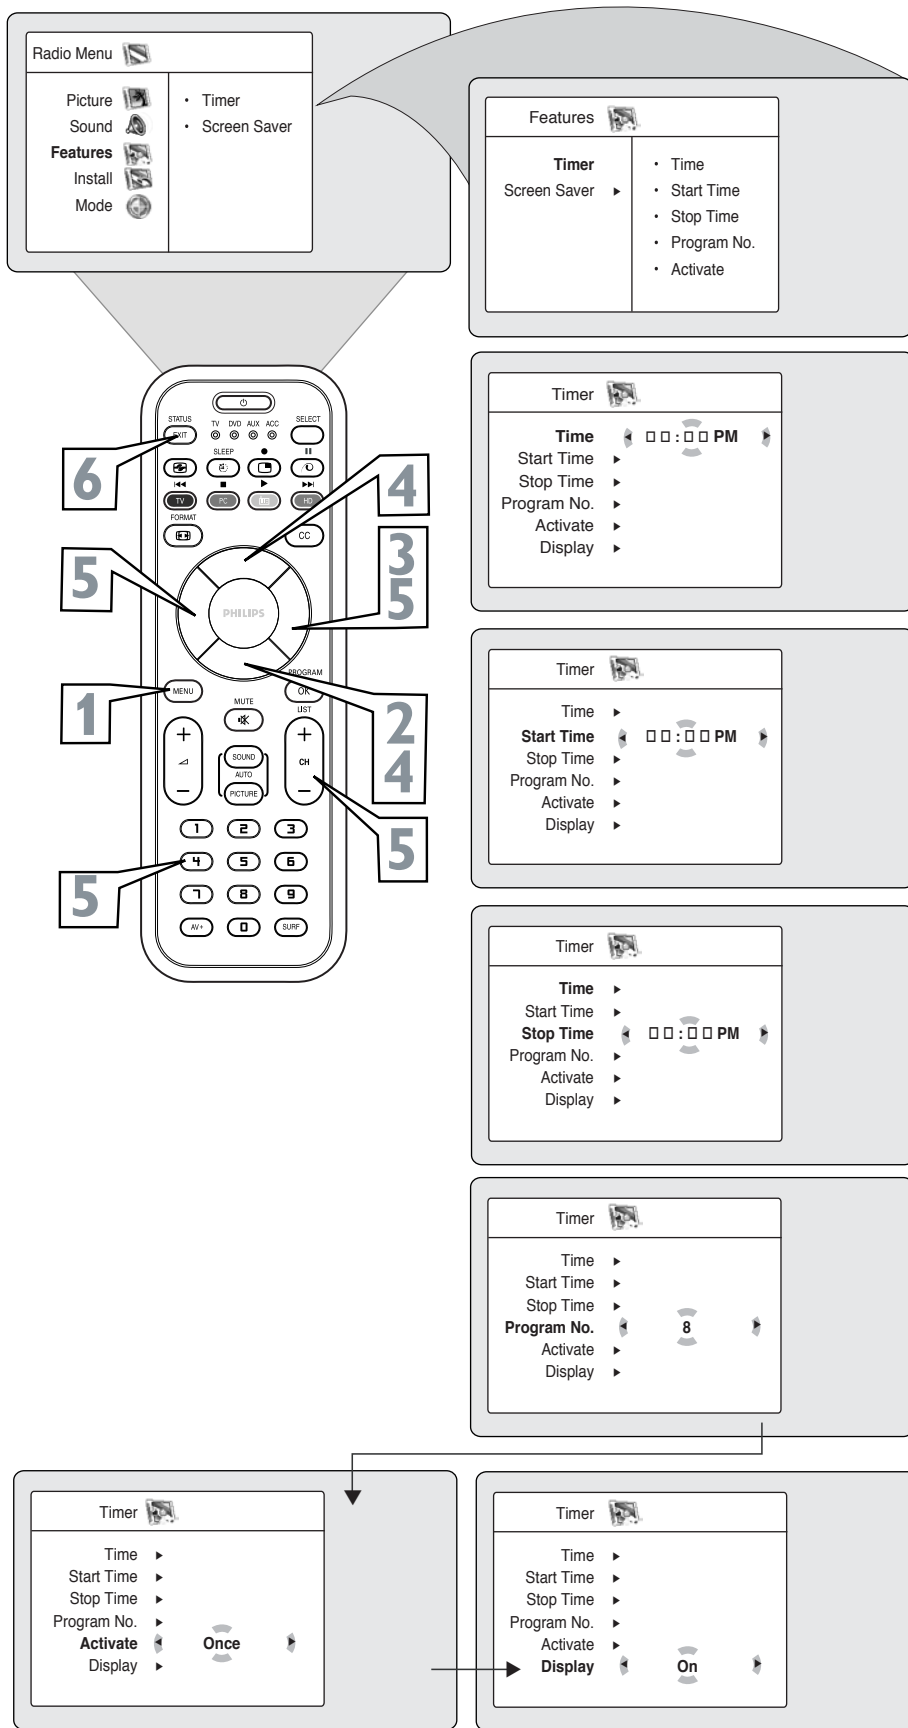

SETTING UP THE FM MODE (FM RADIO)



FM RADIO SOUND CONTROLS

To ensure the best sound quality from the FM Radio feature of this TV, several Sound Controls are available for adjustment.

- 1** To enter the FM Mode, press the **RADIO** button on the remote control. The FM Mode has its own onscreen menu options.
 - 2** Press the **MENU** button on the remote control to display the FM Mode onscreen menu.
 - 3** Press the **CURSOR DOWN** button until **SOUND** is highlighted.
 - 4** Press the **CURSOR RIGHT** button to shift menu to the left, accessing the **SOUND** onscreen menu options. These options include : **EQUALIZER**, **BALANCE**, **AVL**, **DOLBY VIRTUAL** or **SOUND**.
 - 5** Press the **CURSOR UP** or **DOWN** button to select the sound options you want to adjust.
 - 6** Press the **CURSOR LEFT** or **RIGHT** button to adjust the selected sound control.
- NOTE :** If **Equaliser** is selected, press the **CURSOR RIGHT** button to enter **Equaliser** menu and press the **CURSOR UP** or **CURSOR DOWN** button to select from 120Hz to 10KHz. Then press the **CURSOR LEFT** or **CURSOR RIGHT** button to adjust the selected control.
- 7** Press the **STATUS/EXIT** button to exit the menu from the screen.

HELPFUL HINT


EQUALIZER – Allows the listener to change the sound frequencies to their liking.

BALANCE – This controls the sound level balance between the right and left TV speakers.

AVL – Automatic Volume Leveler, when ON, will keep the volume level at a consistent level should there be sudden peaks and valleys in sound levels during commercial breaks or channel changes.

DOLBY VIRTUAL – Adds greater depth and dimension to TV sound. Select from Dolby Virtual or Stereo (if Stereo) or Spatial or Mono (if Mono).

SOUND – Select Stereo or Mono. If the signal is being received in Mono, the Sound cannot be placed in Stereo.

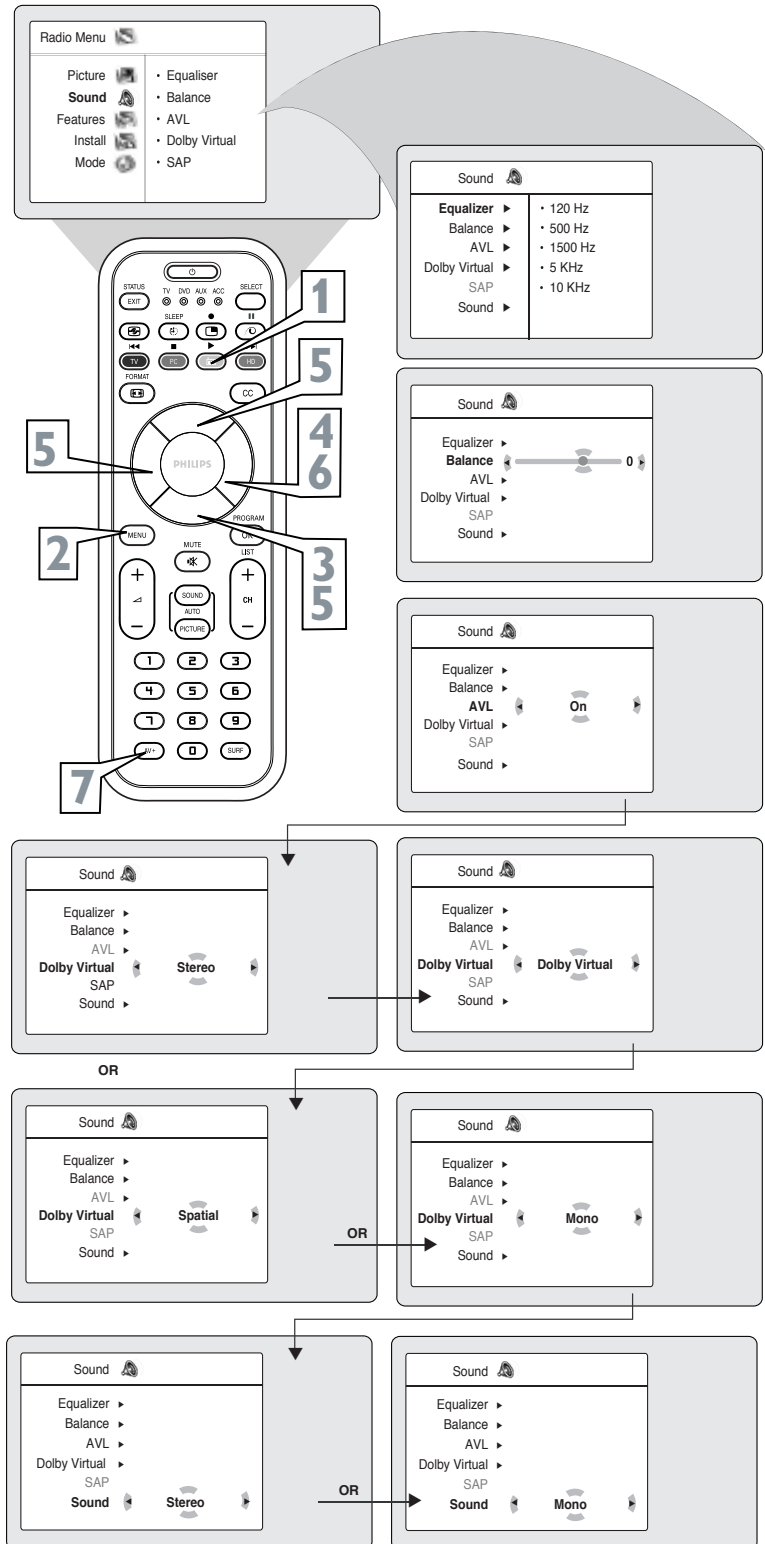

SETTING UP THE FM MODE (FM RADIO)



SCREENSAVER CONTROL

While in the FM Mode, there is a Screensaver option that can be used. The Screensaver control, when on, will circulate the screen station indication around the display.

1 If in the FM mode, press the **MENU** button on the remote control to display the FM Mode onscreen menu.

2 Press the **CURSOR DOWN** button until **Features** is highlighted.


3 Press the **CURSOR RIGHT** button to shift the menu to the left. **Timer** will be highlighted.

4 Press the **CURSOR DOWN** button until **Screen Saver** is highlighted.

5 Press the **CURSOR RIGHT** or **LEFT** button to toggle the Screensaver control **On** or **Off**.

With the Screen Saver control set to **On**, the display will shift around the screen pausing in one place for a brief moment.

6 Press the **STATUS/EXIT** button to remove the onscreen menu from the TV screen when finished. Or, let the display time out and the menu will disappear after a few second.

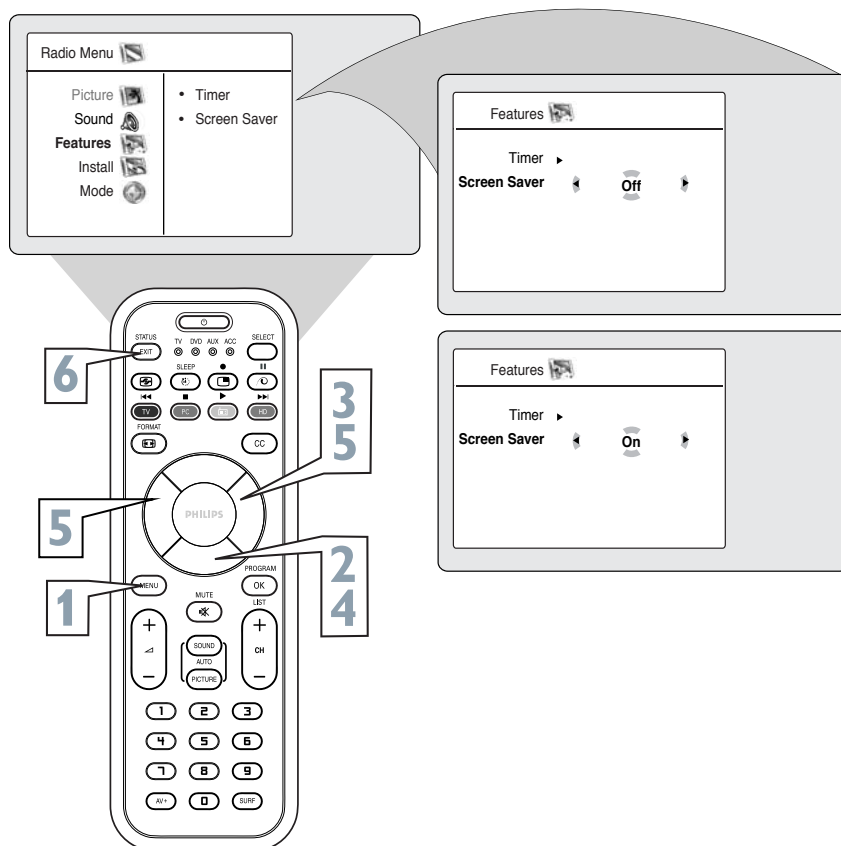


AUTO SOUND™ CONTROLS

AutoSound™ allows you to select from four factory-set controls and a personal control that you set according to your own preferences through the onscreen Sound menu within the FM Mode. The four factory-set controls (Classical, Jazz Pop, or Rock) enable you to tailor the sound so as to enhance the particular program you are listening to.

1 If in the FM mode, press the **AUTO SOUND** button on the remote control to display the first AutoSound™ option on the screen.

2 Press the **AUTO SOUND** button repeatedly to toggle through the factory pre-defined setting for the following musical styles: **Classical**, **Jazz**, **Pop**, **Rock** or **Personal** (the way you set the equalizer).

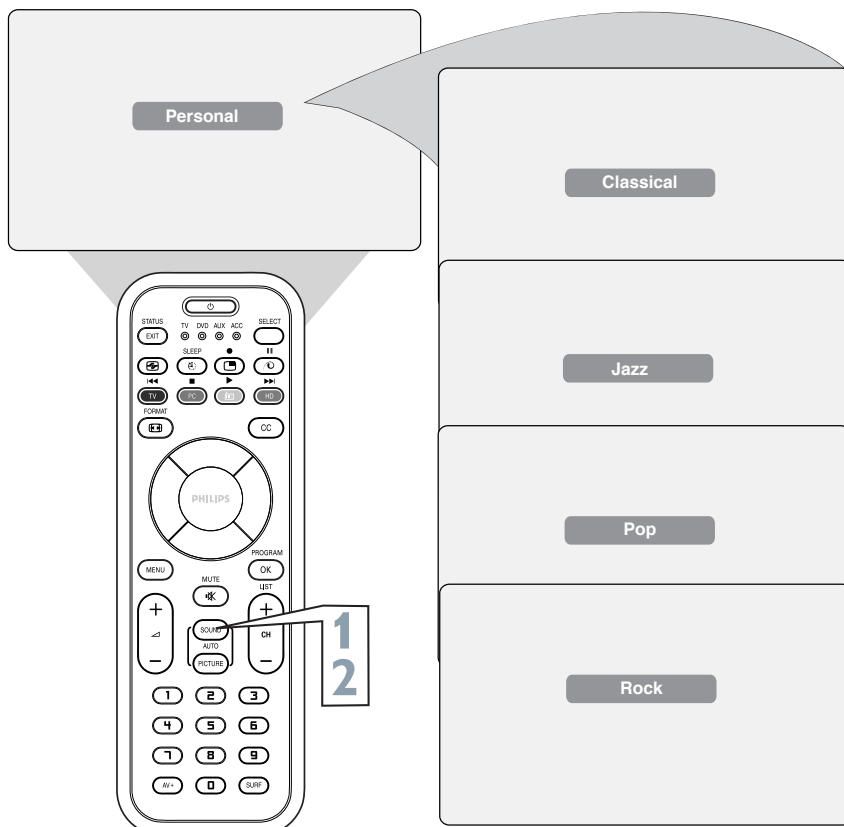



SETTING UP THE PC MODE (PERSONAL COMPUTER MONITOR)

PC PICTURE CONTROLS

To ensure the best picture quality from the PC feature of this TV, several Picture Controls are available for adjustment.

- 1 Press the **PC button** on the remote control to enter into PC mode.
- 2 Press the **MENU button** on the remote control to display the Picture menu.
- 3 Press the **CURSOR RIGHT button** to access the **Picture** menu.
- 4 Press the **CURSOR UP or CURSOR DOWN button** repeatedly to select any of the picture items:

Brightness- adds or subtracts light from the darkest part of the picture.

Picture- improves the detail of the lightest parts of the picture.

Horizontal- Allows you to adjust the horizontal placement of the image.


Vertical- allows you to adjust the vertical placement of the image.

Color Temp.- Allows you to adjust the color temperature of the picture. Select from Normal, Cool, or Warm.

- 5 Once you have highlighted a selection, press the **CURSOR LEFT or CURSOR RIGHT button** to navigate, adjust, or activate the specific controls.
- 6 Press the **STATUS/EXIT button** to remove the menu from the screen.

Note:

When using the LCD TV as a PC monitor, slight diagonal interference lines may be observed when it is operated under electromagnetic interference environment but will not affect the performance of this product. For better performance, good quality VGA cable with good noise isolation filter is recommended.

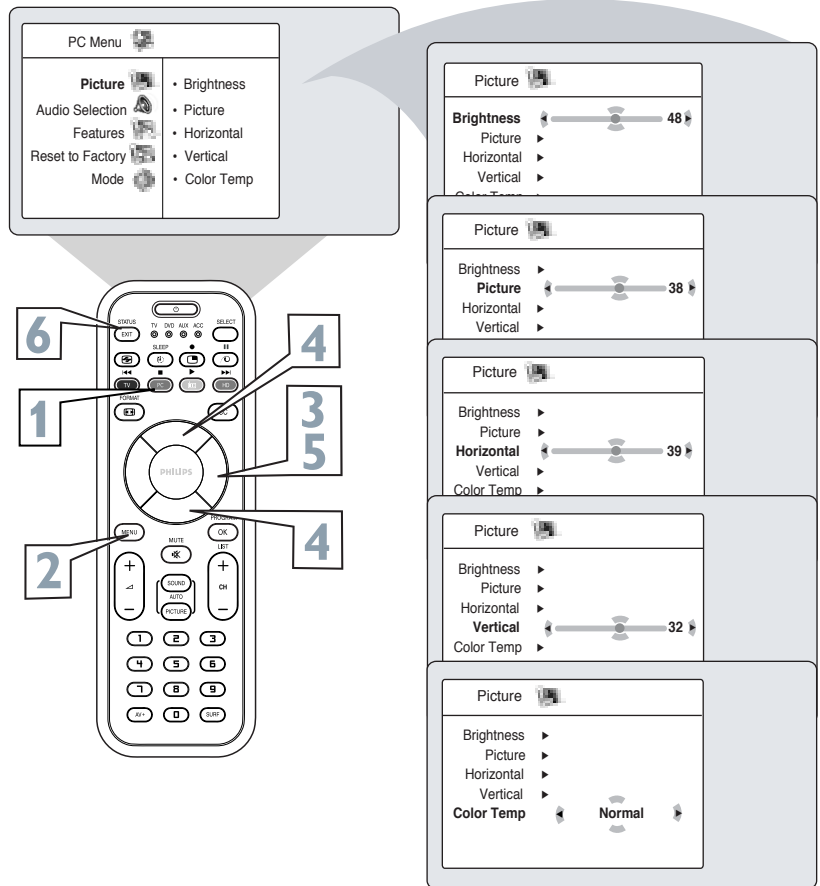


PC AUDIO SELECTION

This TV lets you choose the sound that is heard while in PC Mode. You can select TV, PC/HD or FM Radio. For example, you can listen to the radio while you use the computer.

NOTE: You must select the source before selecting PC. You cannot change the channel or station while in PC Mode.

- 1 Press the **MENU button** on the remote control to display onscreen menu.
- 2 Press the **CURSOR DOWN button** repeatedly to highlight **Audio Selection**.
- 3 Press the **CURSOR LEFT or CURSOR RIGHT button** repeatedly to select **FM Radio**, **PC/HD**, or **TV**.
- 4 Press the **STATUS/EXIT button** to remove the menu from the screen.

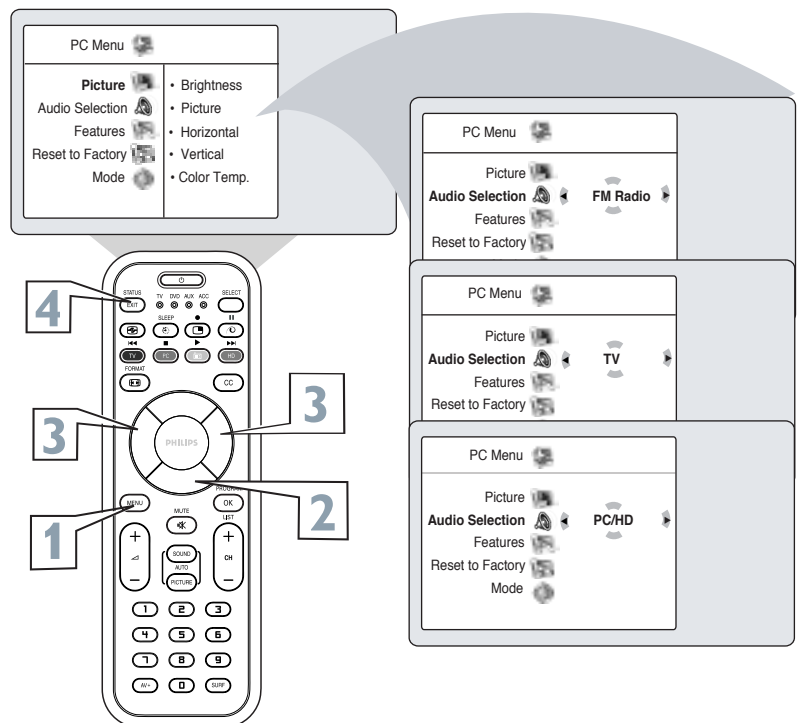



SETTING UP THE PC MODE (PERSONAL COMPUTER MONITOR)

PC FEATURES

- 1** Press the **MENU** button on the remote control to display onscreen menu.
- 2** Press the **CURSOR DOWN** button **REPEATEDLY** to highlight the **Features**.
- 3** Press the **CURSOR RIGHT** button to access the **Features** menu.
- 4** Press the **CURSOR UP** or **CURSOR DOWN** buttons to access the items in the **Features** menu:

Phase - eliminates the horizontal interfering lines

Clock - eliminates the vertical interfering lines

Format - choose between Full Screen and the original format (Native) of the PC screen.


PIP - call up a PIP window for TV, HD or FM Radio.

Auto Adjustment - automatically adjusts the control based on the signal being received to give the best possible picture.

- 5** Press the **CURSOR LEFT** or **CURSOR RIGHT** button to make the desired adjustments.

Note : For Auto Adjustment feature, press the **CURSOR LEFT** to start adjustment. When adjustment is completed, press the **CURSOR UP** or **DOWN** to select **Yes** if you want to store adjustment or select **No** if you do not want to store adjustment.

- 6** Press the **STATUS/EXIT** button to remove the menu from the screen.

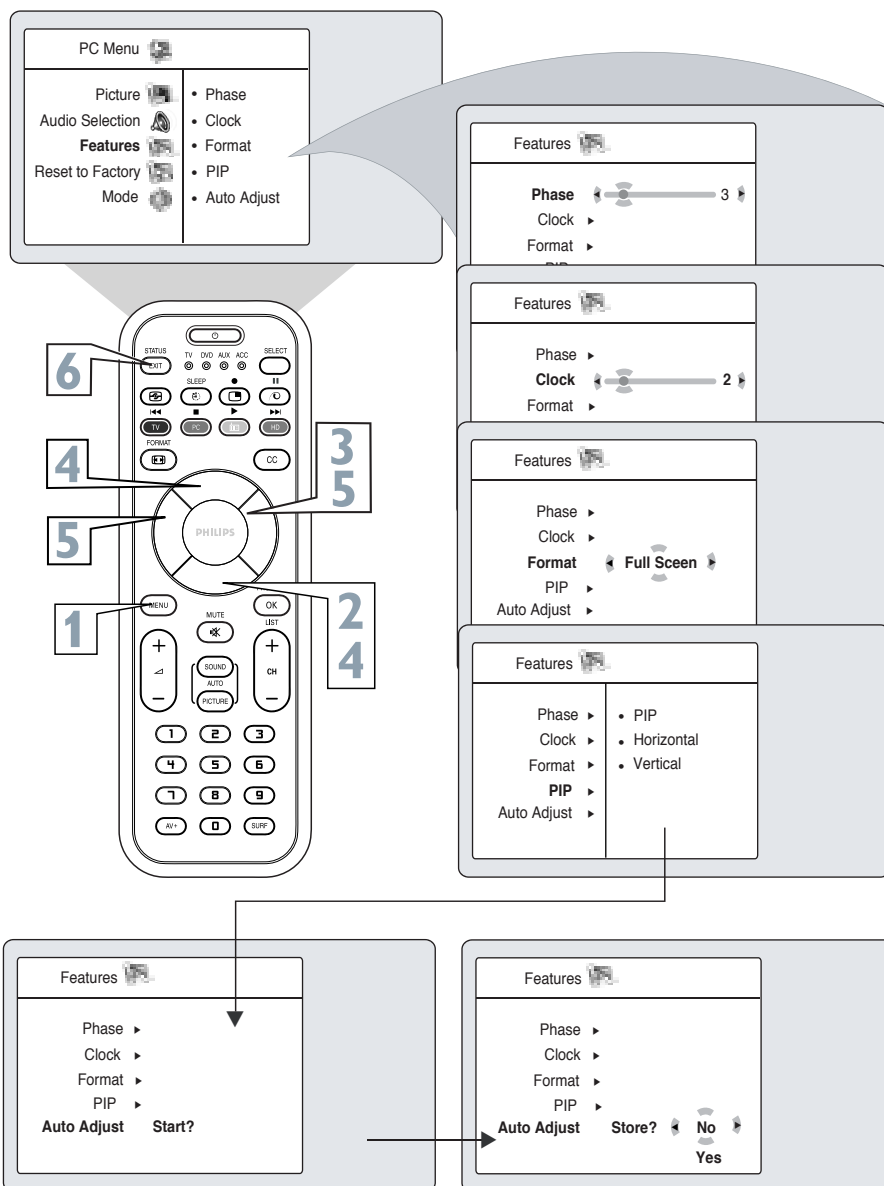

Before using the **PIP** feature configure the computer for optimum resolution (1024 x 768, 60Hz).

Note: if you select another resolution, the feature may not work.

640 x 350, 70 Hz	800 x 600, 56 Hz	1024 x 768, 85 Hz
640 x 350, 85 Hz	800 x 600, 60 Hz	1152 x 864, 75 Hz
640 x 480, 60 Hz	800 x 600, 72 Hz	1280 x 768, 75 Hz
640 x 480, 67 Hz	800 x 600, 75 Hz	
640 x 480, 72 Hz	800 x 600, 85 Hz	
640 x 480, 75 Hz	800 x 624, 75 Hz	
640 x 480, 85 Hz	1024 x 768, 60 Hz	
720 x 400, 70 Hz	1024 x 768, 70 Hz	
720 x 400, 85 Hz	1024 x 768, 75 Hz	




SETTING UP THE PC MODE (PERSONAL COMPUTER MONITOR)

PC PIP CONTROLS

While in PC mode, you can bring up a PIP window for the TV, HD or FM Radio channel. For example, you can listen to the radio while you use the computer. For PIP to function, an accessory must be connected to the DVI Input (See Quick-Guide for connection). Press the PC button on the remote control repeatedly until PC-D appears in the top left-hand corner of the screen.

- 1** Press the **MENU** button to access the PC Mode menu.
- 2** Press the **CURSOR DOWN** button repeatedly to highlight PIP.
- 3** Press the **CURSOR RIGHT** button to access PIP menu.
- 4** Press the **CURSOR LEFT** or **CURSOR RIGHT** buttons to select the PIP Size options : Off, On, Small, Medium, Large or Side-by-Side.
- 5** If you want to move the PIP screen horizontally. **press the CURSOR DOWN** button again to highlight **Horizontal**.
- 6** Press the **CURSOR LEFT** or **CURSOR RIGHT** buttons to move the picture horizontally.
- 7** If you want to move the PIP screen vertically or side-by-side. **press the CURSOR DOWN** button again to highlight **Vertical** or **PIP Size**.
- 8** Press the **CURSOR LEFT** or **CURSOR RIGHT** buttons to move the picture vertically or side-by-side.
- 9** Press the **STATUS/EXIT** button to exit the menu from the screen.

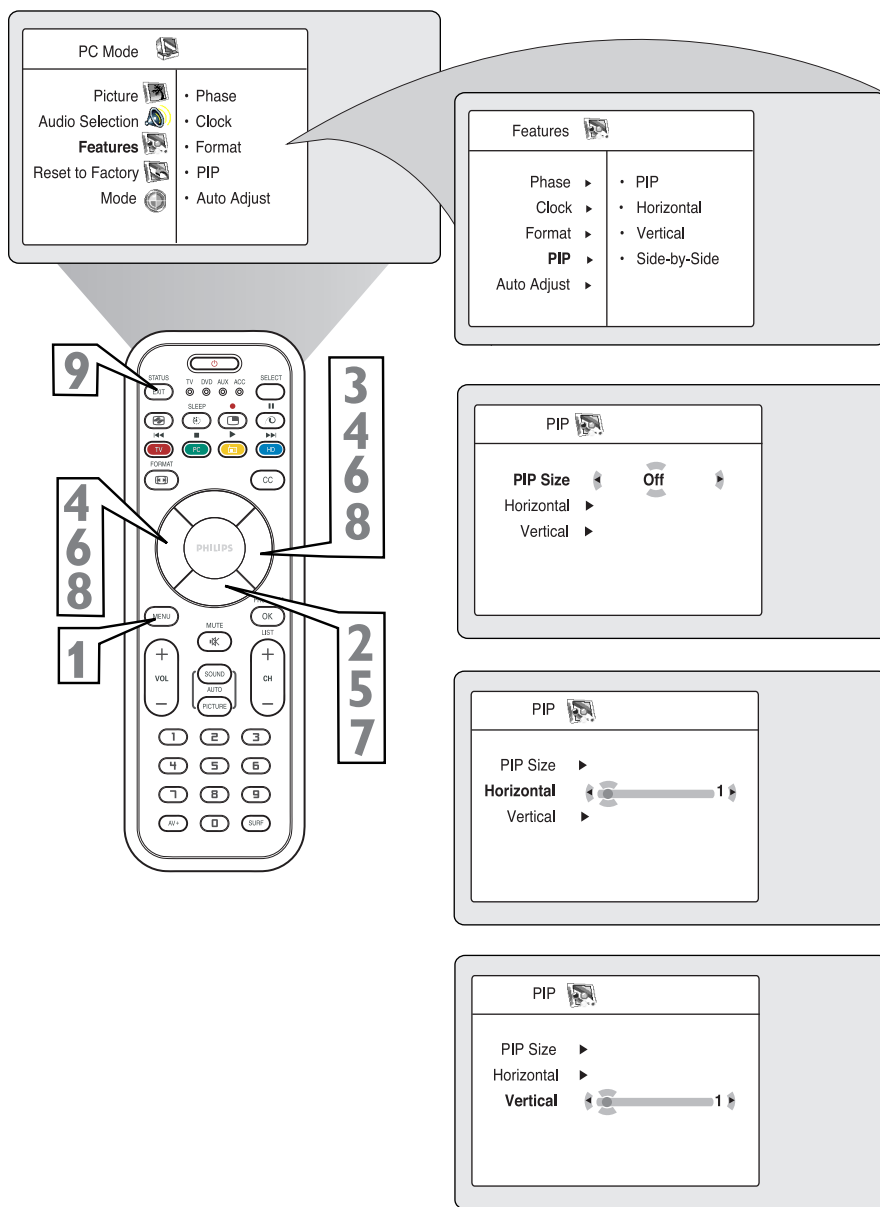




SETTING UP THE HD MODE (HIGH DEFINITION)

HD SELECT CONTROL

The HD Select Control will allow you to quickly change from the HD Mode of operation to the TV, FM Radio, or PC Modes.


- 1** If in the HD Mode, press the **MENU** button on the remote control to display the HD Mode onscreen menu.
- 2** Press the **CURSOR UP** or **DOWN** buttons until **Mode** is highlighted.
- 3** Press the **CURSOR RIGHT** button to highlight the **Mode** options. TV mode is highlighted.
- 4** Press the **CURSOR UP** or **DOWN** button to choose TV, FM Radio or PC mode.
- 5** Press the **CURSOR RIGHT** button to activate the highlighted mode control.

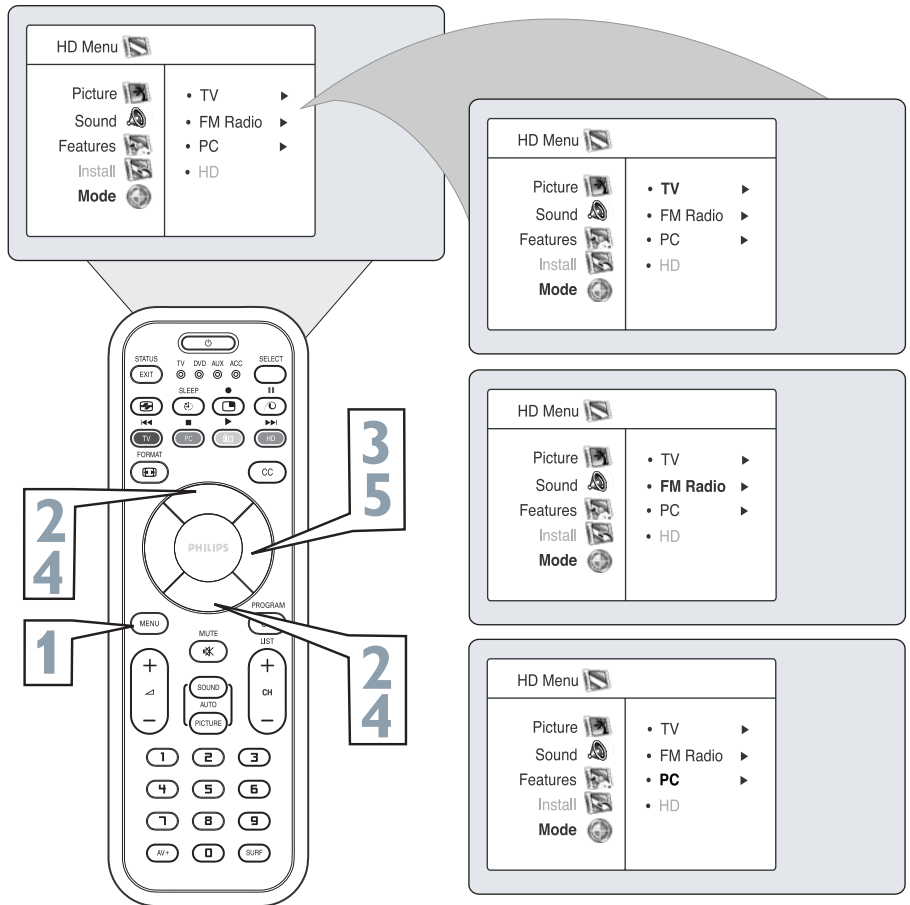

HOW TO USE THE TIMER MENU CONTROLS

The HD Mode Timer also allows you to set to turn On or Off the HD channel at a specific time and tune to a specific channel when it powers itself on. The HD Mode Timer operates in exactly the same way as the TV Timer menu.

- 1** In the HD Mode, press the **MENU** button on the remote control to display the HD Mode onscreen menu.
- 2** Press the **CURSOR UP** or **CURSOR DOWN** button to highlight **Features**.
- 3** Press the **CURSOR RIGHT** button to access the **Features** menu and press the **CURSOR RIGHT** button again to enter HD Mode Timer menu.
- 4** Proceed to set the timer. Refer to page 10 and follow the steps in "How to Use the Timer Controls" in TV mode.

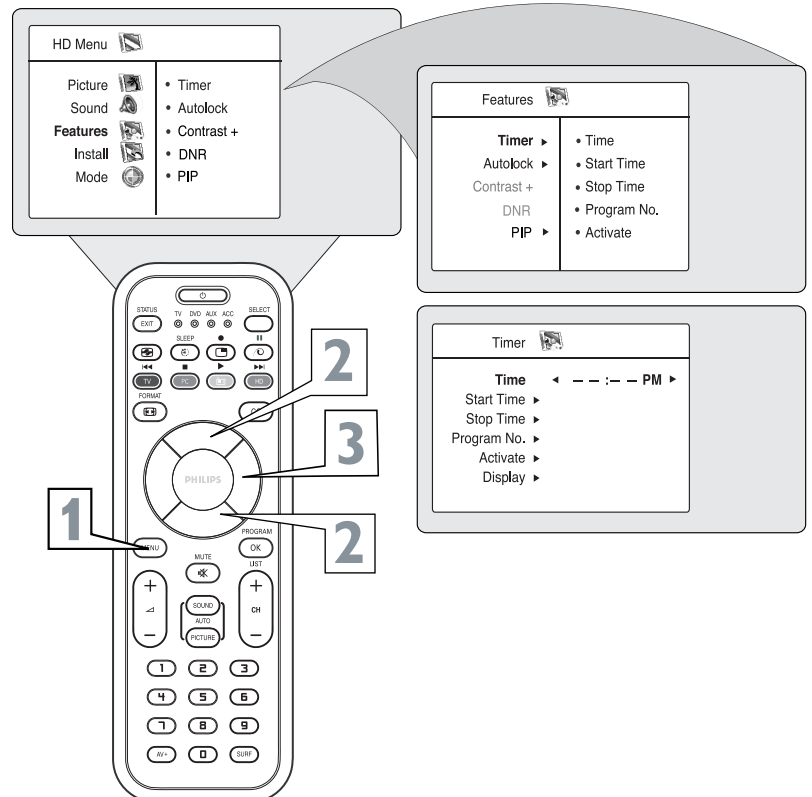

SETTING UP THE HD MODE (HIGH DEFINITION)



PICTURE CONTROLS

The HD Mode offers certain Picture, Sound and Blocking options within its onscreen menu. Below is a list of Picture Menu options.

1 Press the **HD button** on the remote control to place the TV in the HD Mode (HD1).

2 Press the **MENU button** on the remote control to display the HD Mode onscreen menu. The Picture option will be highlighted.

3 Press the **CURSOR DOWN** buttons until **Picture** is highlighted.

4 Press the **CURSOR RIGHT** button to shift the menu to the left, accessing the Picture onscreen menu options.

5 Press the **CURSOR UP or DOWN** buttons to highlight any of the HD Mode Picture Controls. Choose from: **Brightness, Color, Picture, Sharpness, Tint, Color Temp.**

Brightness - This control will add or subtract light from the darkest part of the picture.

Color - This control adds or eliminates color intensity from the picture.

Picture - This control improves the detail of the lightest parts of the picture.


Sharpness - This control improves the detail in the picture.

Tint - This control adjusts the picture to obtain natural skin tones.

Color Temp - Choose from Normal (keeps white, white), Cool (makes white bluish), or Warm (makes white, reddish) picture preferences.

6 Press the **CURSOR RIGHT or LEFT** buttons to adjust the selected control.

7 Press the **STATUS/EXIT** button to remove the onscreen menu from the TV screen when finished. Or, let the display time out and the menu will disappear after a few second.

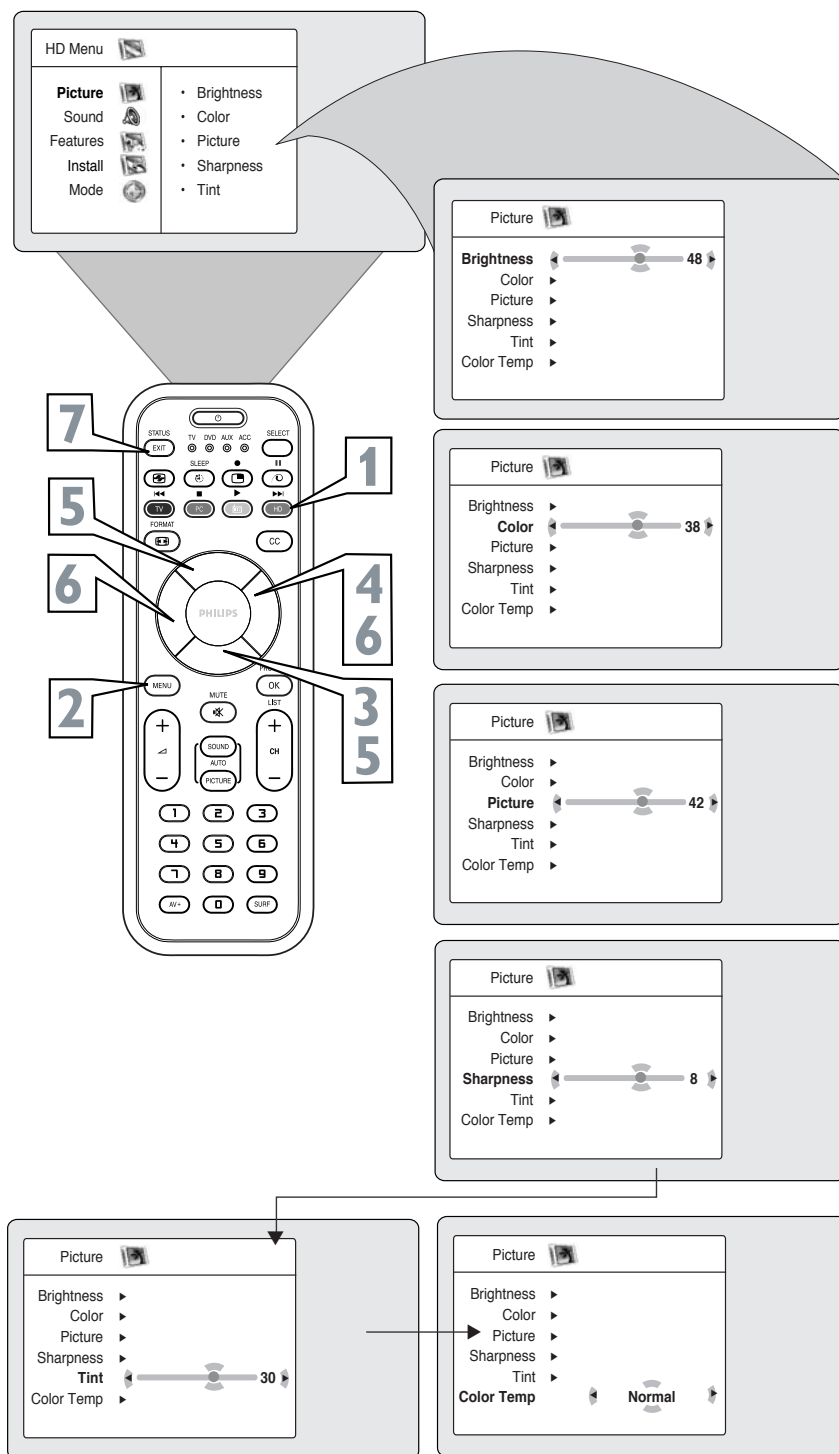




SETTING UP THE HD MODE (HIGH DEFINITION)

SOUND CONTROLS

The HD Mode also offers certain Sound control adjustments to fine tune the sound being heard when in the HD mode.

- 1** Press the **HD** button on the remote control to place the TV in the HD mode.
 - 2** Press the **MENU** button on the remote control to show the onscreen menu.
 - 3** Press the **CURSOR DOWN** button to highlight **Sound**.
 - 4** Press the **CURSOR RIGHT** button to enter the **Sound** menu.
 - 5** Press the **CURSOR UP** or **CURSOR DOWN** button to select sound adjustment you want to change : **Equaliser**, **Balance**, **AVL** or **Dolby Virtual**.
 - 6** Press the **CURSOR LEFT** or **CURSOR RIGHT** button to adjust the selected control.
- NOTE :** If **Equaliser** is selected, press the **CURSOR RIGHT** button to enter **Equaliser** menu and press the **CURSOR UP** or **CURSOR DOWN** button to select from 120Hz to 10KHz. Then press the **CURSOR LEFT** or **CURSOR RIGHT** button to adjust the selected control.
- 7** Press the **STATUS/EXIT** button to remove the menu from the screen.

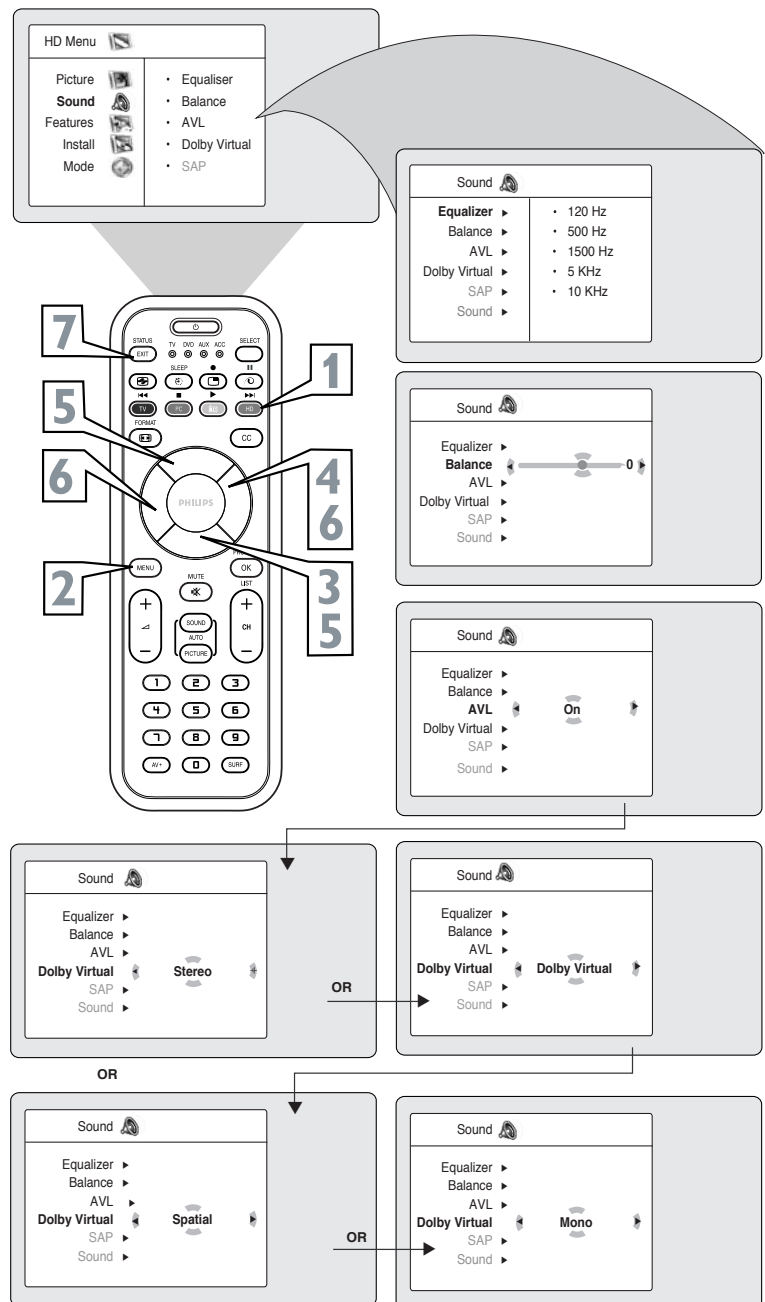

HELPFUL HINT

Equalizer – adjusts the sound tones. Select 120Hz to 10KHz.

Balance – adjusts the level of sound coming from the left and right speakers.

AVL (Auto Volume Leveler) - when On, AVL will level out the sound being heard when sudden changes in volume occur during commercial breaks or channel changes.

Dolby Virtual - adds greater depth and dimension to TV sound. Select from Dolby Virtual or Stereo sound (if Stereo) or Spatial or Mono (if Mono).




SETTING UP THE HD MODE (HIGH DEFINITION)

LOCK HD CHANNEL/CHANGE CODE

The HD Mode channel can be blocked to censor the viewing of programming not suitable for children. The HD Mode AutoLock menu also allows you to change your AutoLock Access Code. To block the HD Mode channel and change code, follow the steps below

- 1** Press the **MENU** button on the remote control to show the onscreen menu.
- 2** Press the **CURSOR DOWN** button to highlight **Features**.
- 3** Press the **CURSOR RIGHT** button to display the Features menu.
- 4** Press the **CURSOR DOWN** button to select the **AutoLock™** control.
- 5** Press the **CURSOR RIGHT** button again to highlight **Access Code**.
- 6** Enter your four-digit Access Code, "Correct" will briefly appear on the screen and the AutoLock menu will be accessible.
- 7** Press the **CURSOR DOWN** button to select **Lock HD**.
- 8** Press the **CURSOR RIGHT** button to select **On** to activate the blocking of the HD channel. If **On** option is selected, the HD channel will not allow viewing of programs. This control would have to be set to **Off** to make the viewable.
- 9** If you want to change your Access Code, proceed to press the **CURSOR DOWN** button and select **Change Code**.
- 10** Press the **CURSOR RIGHT** button to enter **Change Code** mode. "New Code" will appear.
- 11** Enter a new four-digit code using the number buttons. "Confirm Code" will then appear.
- 12** Using the numbered buttons, re-enter your new four-digit code to confirm. Once message **Confirmed** appears, you have changed to new code.
- 13** Press the **STATUS/EXIT** button to remove the menu from the screen.

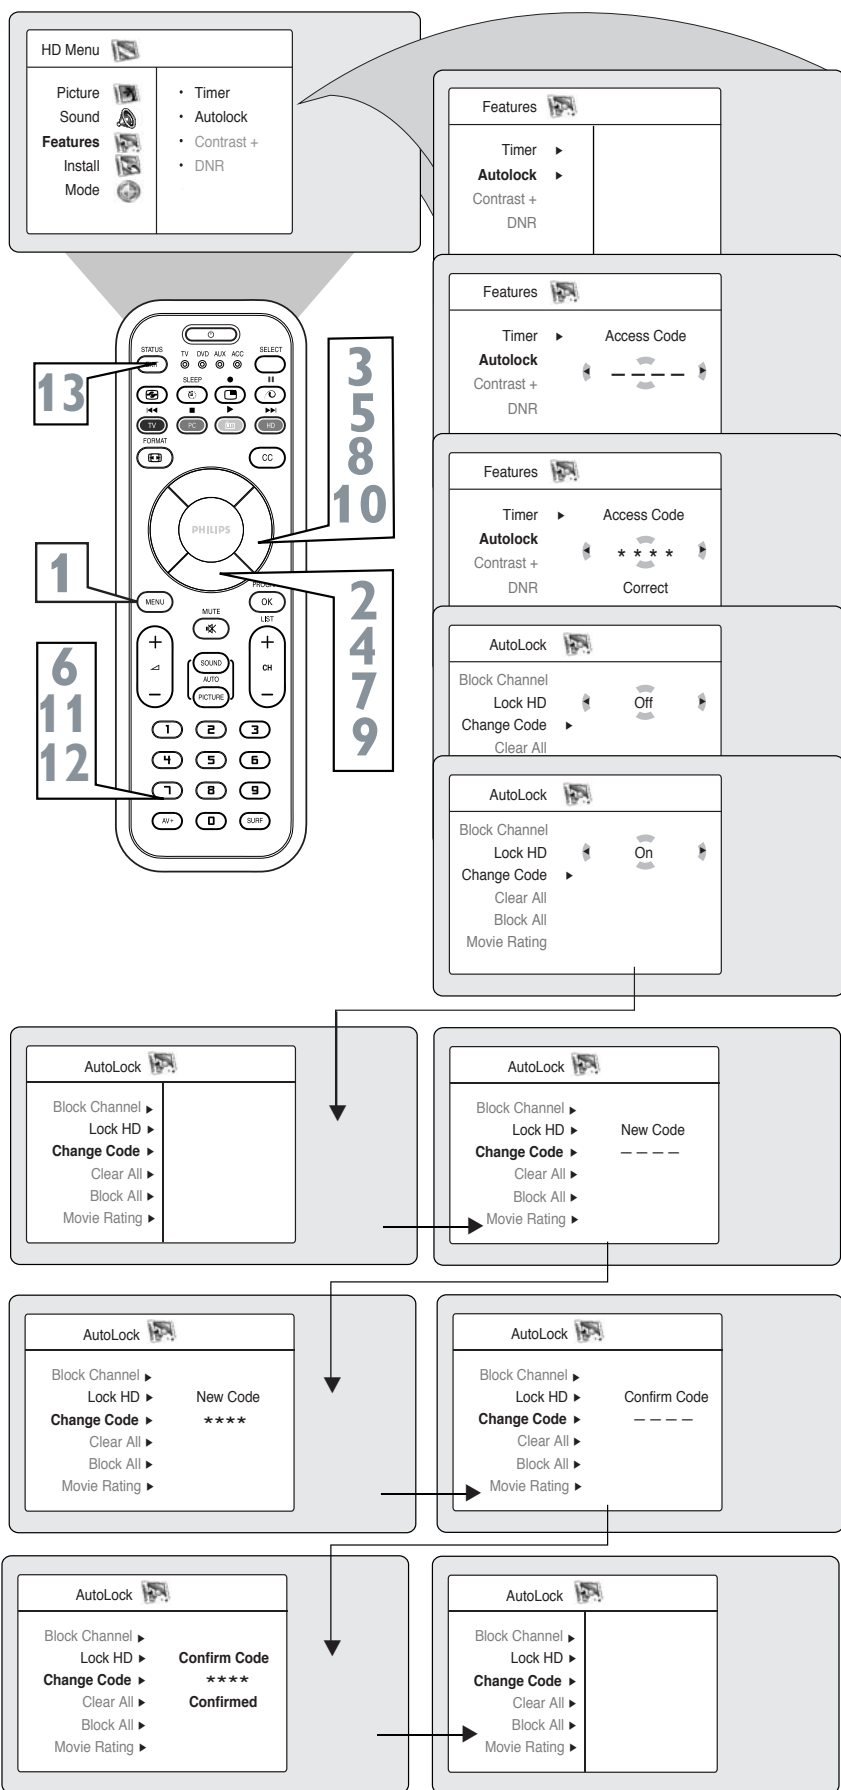



No Power

- Check the TV power cord. Unplug the TV, wait 10 seconds, then reinsert the plug into the outlet and push the POWER button again.
- Check that the outlet is not on a wall switch.
- Be sure the fuse is not blown on the AC power strip, if one is being used.

No Picture

- Check antenna/cable connections. Are they properly secured to the TV's ANT 75Ω plug?
- Check the TUNER MODE control for the correct tuner setting.
- Try running the Auto Program feature to find all available channels.
- Press the SOURCE button on the remote to make sure the correct signal source is selected.
- If using an accessory device, be sure that it is functioning properly.
- If in PC Mode, a video signal MUST BE present or the TV will turn off.

No Sound

- Check the VOLUME buttons.
- Check the MUTE button on the remote control.
- If you're attempting to hook up auxiliary equipment, check the audio jack connections.

S-VHS color becomes faint

- If S-VHS is disconnected, picture color will become faint. To restore picture color, press the CH +/- button on the remote control and do a channel up followed by a channel down.

TV Only Produces MONO Sound

- If using a cable box with RF only type connections, the signal coming from the cable box will be produced in MONO only.
- Check Sound control setting. Change setting to Stereo.

Remote Does Not Work

- Check the batteries. If necessary, replace them with AA Heavy Duty (Zinc Chloride) or Alkaline batteries.
- Clean the remote control and the remote control sensor window on the TV.
- Check the TV power cord. Unplug the TV, wait 10 seconds, then reinsert the plug into the outlet and push the POWER button again.
- Be sure the fuse is not blown on the AC power strip, if one is being used.
- Check to be sure the TV outlet is not on a wall switch.
- Be sure that the remote is in the correct operating mode.
- Be sure the remote is pointed at the Remote Sensor Window on the TV. See page 1 of the *Quick Use Guide* for details.

TV Displays Wrong Channel or No Channels Above 13

- Repeat channel selection.
- Add the desired channel numbers (using the CHANNEL EDIT control) into the TV's memory.
- Check to be sure the TUNER MODES are set to the CABLE option and run the Auto Program feature to find all available channels.



WARNING Concerning Stationary Images on the TV Screen:

Do not leave stationary or letterbox images on screen for extended periods of time. This can cause uneven display aging.

Normal use of the TV should involve the showing of pictures that contain constantly moving and changing images that fill the screen. Be careful not to leave nonmoving images on screen for extended periods of time, or to display the same images on screen too frequently, because subtle ghost images can be left on the picture tubes. Sources of stationary images may be DVD disks, laser disks, video games, CD-i disks, videotapes, digital television boxes, broadcast channels, cable channels, satellite channels, and others. **Here are some examples of stationary images (this is not an all-inclusive list; you may encounter others in your viewing):**

- **DVD menus**—listings of DVD disk content
- **Letterbox black bars**—shown at the top and bottom of the TV screen when a wide screen (16:9) movie is viewed on a TV with standard (4:3) aspect ratio.
- **Video-game images and scoreboards**
- **Television station logos**—present a problem if they are bright and stationary; moving or low-contrast graphics are less likely to cause uneven aging of the picture tube
- **Stock-market tickers**—presented at the bottom of the TV screen
- **Shopping channel logos and pricing displays**—bright and shown constantly or repeatedly in the same location on the TV screen.

PLACEMENT OF THE TV

- To avoid cabinet warping, cabinet color changes, and increased chance of set failure, do not place the TV where temperatures can become excessively hot; for example, in direct sunlight or near a heating appliance.
- Be sure to allow a free flow of air to and from the perforated back cover of the set.

CLEANING

- To avoid possible shock hazard, be sure the TV is unplugged from the electrical outlet before cleaning.
- Regularly dust the TV with a dry, nonscratching duster to keep the TV clean.
- When cleaning the TV, take care not to scratch or damage the screen surface. Avoid wearing jewelry or using anything abrasive. Do not use household cleaners. Wipe the front screen with a clean cloth dampened with water. Use even, easy, vertical strokes when cleaning.
- Gently wipe the cabinet surfaces with a clean cloth or sponge dampened in a solution of cool, clear water and a mild soap or detergent. Use a clean, dry cloth to dry the wiped surfaces. Do not use acetone, toluene, or alcohol to clean the screen.
- Occasionally vacuum the ventilation holes or slots in the back cover of the set.
- Never use thinners, insecticide sprays, or other chemicals on or near the cabinet, as they might cause permanent marring of the cabinet finish.



Cleaning and Care	45	AutoSound™ Control	26
FM Radio Mode Controls		Auto Program Control	7
AutoSound™ Control	36	AutoPicture™ Control	26
Install Menu Controls		AVL (Auto Volume Leveler) Control	9
Auto Program Control	33	Balance Control	9
Language Control	33	Channel Edit (Add or Delete Channels) Control	7
Manual Store Control	33	Closed Captioning Control	23
Mode Select Control	33	Dolby Virtual Control	9
Screensaver Control	36	Equalizer Control	9
Sound Adjustment Controls		Language Control	6
AVL (Auto Volume Leveler) Control	35	Mode Control	22
Balance Control	35	Picture Adjustment Controls	8
Equalizer Controls	35	Pixel Plus Controls	25
Dolby Virtual Control	35	Program List Control	24
SAP	35	Remote Control Programming for Accessory Devices	
Sound Control	35	Remote Control Accessory Device Related Buttons	27
Timer Controls	34	Remote Control With Philips Accessory Devices	28
HD Mode Controls		Program With Other Accessory Devices	29
Lock HD Control	43	Remote Control Direct Entry Codes	30 – 32
Change Code Control	43	SAP (Secondary Audio Programming) Control	9
Mode Select Control	40	Sleeptimer Control	23
Picture Adjustment Controls	41	Stereo/Mono Control	9
Sound Adjustment Controls	42	Surf Control	25
Index	46	Timer Controls	10
PC Mode Controls		Tuner Mode Control	6
Audio Selection Controls	37	Widescreen (Screen Format) Control	22
PC Feature Controls	38	Warranty	47
Picture Adjustment Controls	37		
PIP Controls	39		
Registration Information	2		
Safety/Precautions	3-4		
Table of Contents	5		
Troubleshooting Tips	44		
TV Mode Controls			
Active Control	24		
AutoLock Controls			
Access Code	12		
Block Channels	13		
Blocking Options	18		
Clear All Locked Channels	15		
Lock HD Channel	14		
Movie Ratings	16		
Review Screen	19		
TV Ratings	17		
Understanding the AutoLock™ Control	11		

PHILIPS LIMITED WARRANTY

One (1) Year Labor and Parts Repair

PHILIPS CONSUMER ELECTRONICS warrants this product against defect in material or workmanship, subject to any conditions set forth as follows:

PROOF OF PURCHASE:

You must have proof of the date of purchase to receive warranted repair on the product. A sales receipt or other document showing the product and the date that you purchased the product as well as the authorized retailer included, is considered such proof.

COVERAGE:

(If this product is determined to be defective)

LABOR: For a period of one (1) year from the date of purchase, Philips will repair or replace the product, at its option, at no charge, or pay the labor charges to any Philips authorized repair facility. After the period of one (1) year, Philips will no longer be responsible for charges incurred.

PARTS: For a period of one (1) year from the date of purchase, Philips will supply, at no charge, new or rebuilt replacement parts in exchange for defective parts, through a Philips authorized service center.

Note: If Philips is unable to provide service in your area, receipt of the paid service can be submitted for consideration of adjustment or full reimbursement at Philips discretion.

EXCLUDED FROM WARRANTY COVERAGE

Your warranty does not cover:

- Labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.
- Product repair and/or part replacement because of improper installation, connections to improper voltage supply, abuse, neglect, misuse, accident, unauthorized repair or other cause not within the control of Philips.
- A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- Damage occurring to product during shipping when improperly packaged or cost associated with packaging.
- Product lost in shipment and no signature verification of receipt can be provided.
- A product used for commercial or institutional purposes (including but not limited to rental purposes).
- Products sold AS IS or RENEWED.

CARRY-IN / SHIP-IN WARRANTY

For Carry-In warranty repair, take the product to a Philips authorized service center for repair. When the product has been repaired, you must pick up the unit at the center. For Ship-In warranty repair, ship the product to a Philips authorized service center for repair in its original carton and packing material. If you do not have the original carton or packing material, have your product professionally packed for shipping. Ship product via a traceable carrier. When it is necessary for you to ship the product to Philips for repair, you will pay the shipping cost for shipment to Philips. Philips will pay the shipping costs when returning the product to you.

TO OBTAIN WARRANTY SERVICE IN THE U.S.A., PUERTO RICO, OR U.S. VIRGIN ISLANDS...

Contact Philips Customer Care Center at:
1-888-PHILIPS (1-888-744-5477)

TO OBTAIN WARRANTY SERVICE IN CANADA...

1-800-661-6162 (French Speaking)
1-888-PHILIPS (1-888-744-5477) - (English or Spanish Speaking)

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY FOR THE CONSUMER. PHILIPS SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusions or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. In addition, if you enter into a service contract agreement with the PHILIPS partnership within ninety (90) days of the date of sale, the limitation on how long an implied warranty lasts does not apply.

This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.

Philips, P.O. Box 671539, Marietta, GA. 30006-0026